

Removal and Installation

Oil Temperature Sensor


Materials

Name	Specification
Motorcraft® SAE 75W-85 Premium Synthetic Hypoid Gear Lubricant XY-75W85-QL	WSS-M2C942-A


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. If equipped, remove the underbody shield.

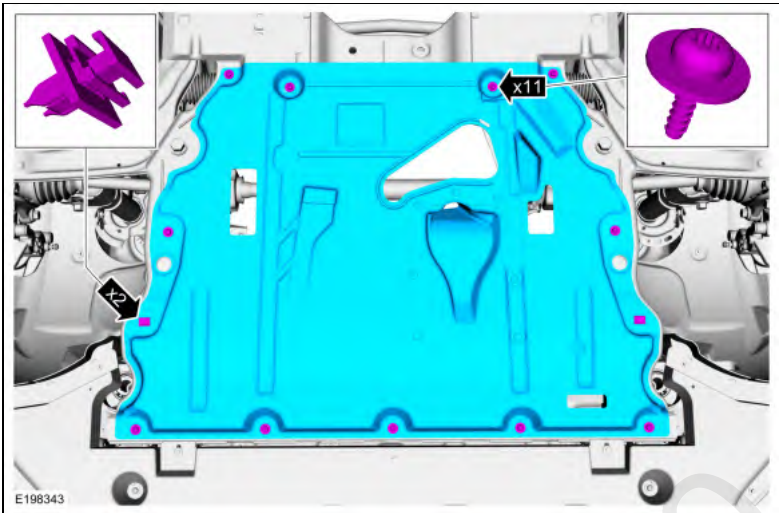

2. Disconnect the PTU oil temperature sensor.

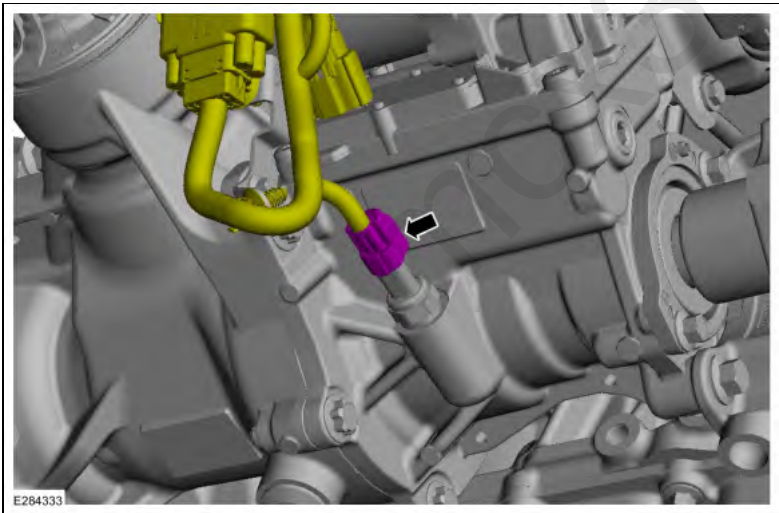

3. NOTE: Be prepared to collect escaping fluid.

Remove the PTU oil temperature sensor.
Torque: 150 lb.in (17 Nm)