



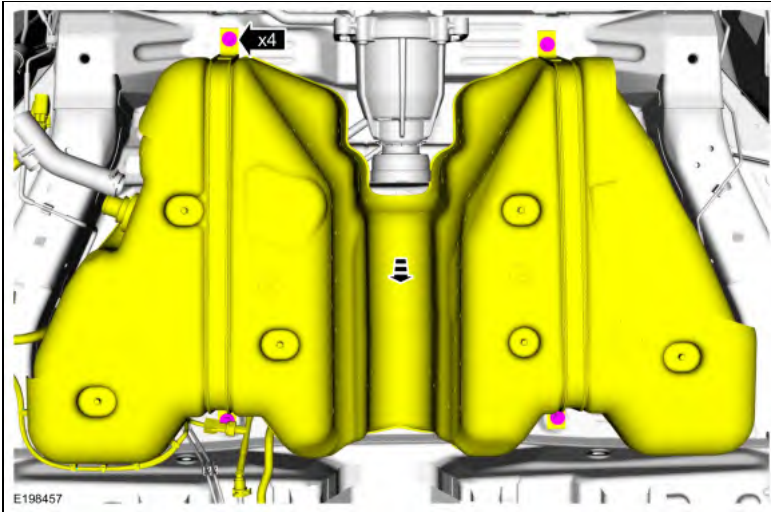


- 12.
- Disconnect the vapor tube from the top of the fuel tank and position vapor tube aside.
 - Remove the fuel tank from the vehicle.

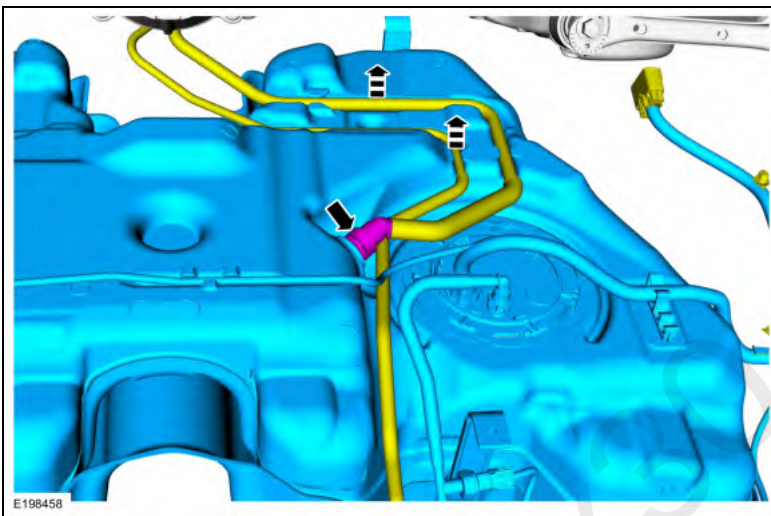

Installation

1. **NOTE:** Before installing the fuel tank, make sure the vapor tubes are routed properly on top of the fuel tank.
To install, reverse the removal procedure.

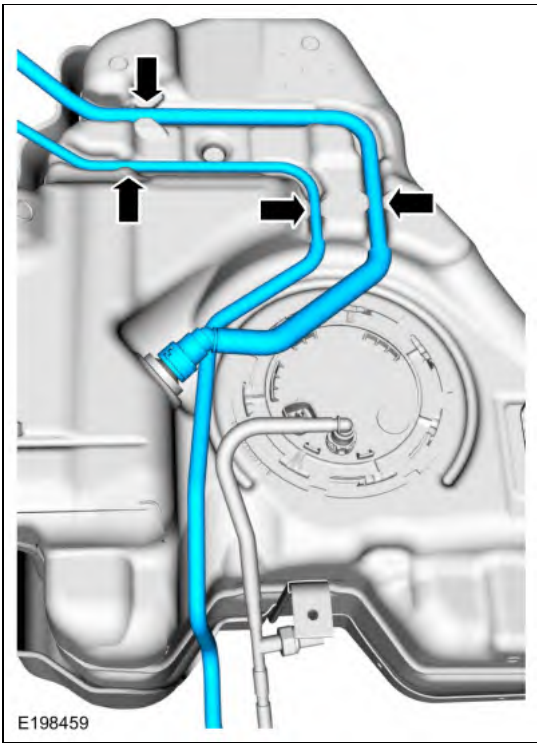

mcx30.com

Fuel Tank Filler Pipe

Special Tool(s) / General Equipment


	292-00004 Fuel Tanker 100 GPM
---	----------------------------------

Removal



NOTE: Removal steps in this procedure may contain installation steps.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the battery ground cable.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
3. **NOTE:** The supplemental refueling adapter is located in the luggage compartment.



Install the supplemental refueling adapter and a length of semi-rigid fuel drain tube into the Easy Fuel^{â„¢} (capless) fuel tank filler pipe.

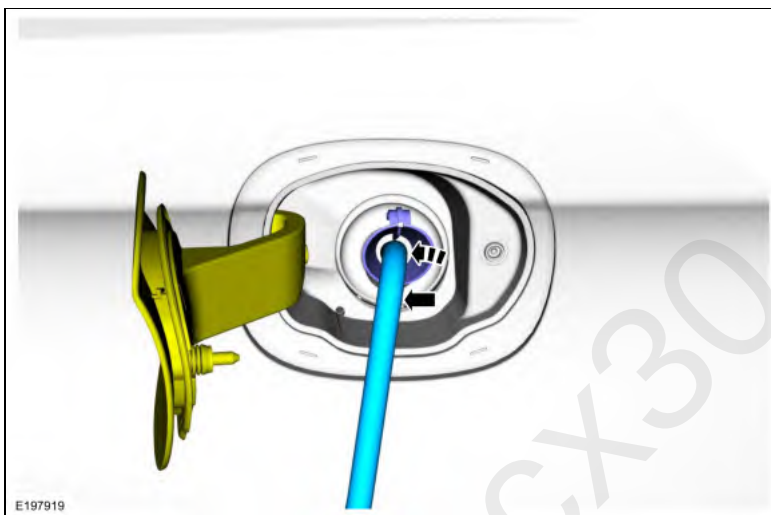

4. Attach the Fuel Storage Tanker to the fuel drain tube and drain as much fuel as possible from the Easy Fuel^{â„¢} (capless) fuel tank filler pipe, lowering the fuel level below the fuel tank inlet spout.
Use Special Service Tool: 292-00004 Fuel Tanker 100 GPM.
5. Remove the LHR wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
6. Remove the retainers and the LHR wheel liner.

 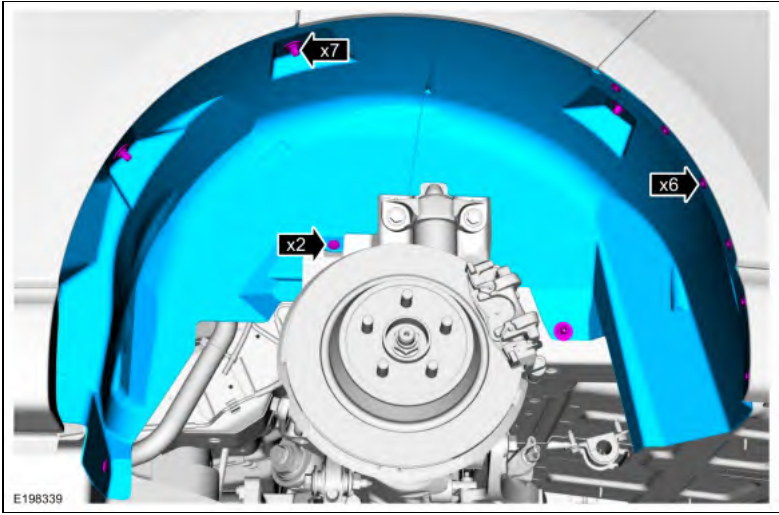

7. Remove the retainers and the LH shield.

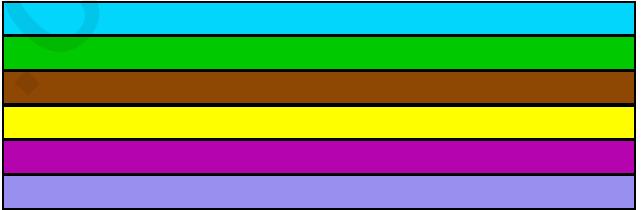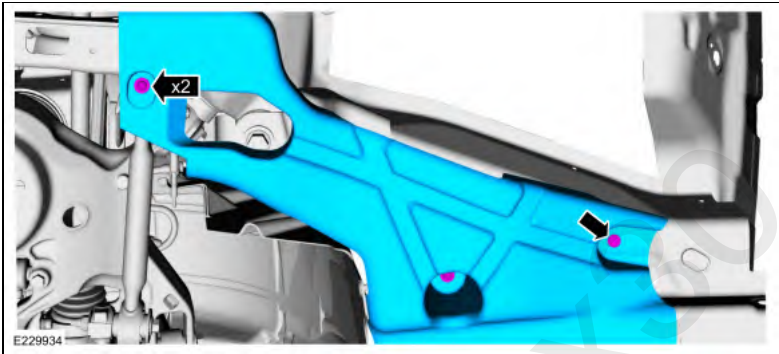

8. **NOTE:** Some residual fuel may remain in the fuel tank filler pipe. Carefully drain into a suitable container.

Release the clamp and position the fuel filler pipe hose aside.
Torque: 35 lb.in (4 Nm)