


Accelerator Pedal

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: To prevent setting Diagnostic Trouble Codes (DTCs), make sure the ignition switch is in the OFF position prior to disconnecting the accelerator pedal electrical connector.

1. Disconnect the accelerator pedal sensor electrical connector. Remove the bolt and slide the accelerator pedal assembly upward to remove.
Torque: 33 lb.in (3.7 Nm)

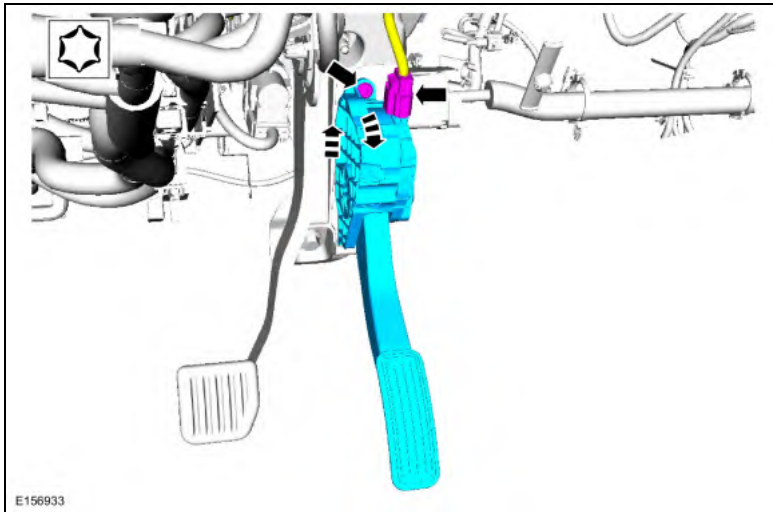

Installation

1. To install, reverse the removal procedure.