



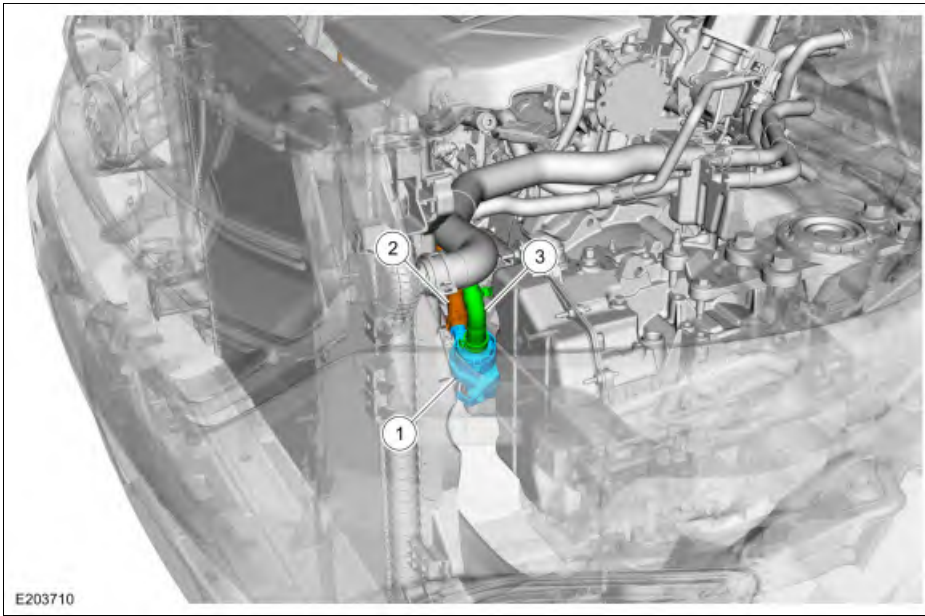


Item	Description
1	Cabin Heater Coolant Pump
2	Cabin Heater Coolant Pump Outlet Hose
3	Cabin Heater Coolant Pump Inlet Hose

Climate Control System - Vehicles With: Electronic Manual Temperature Control (EMTC) - Component Location

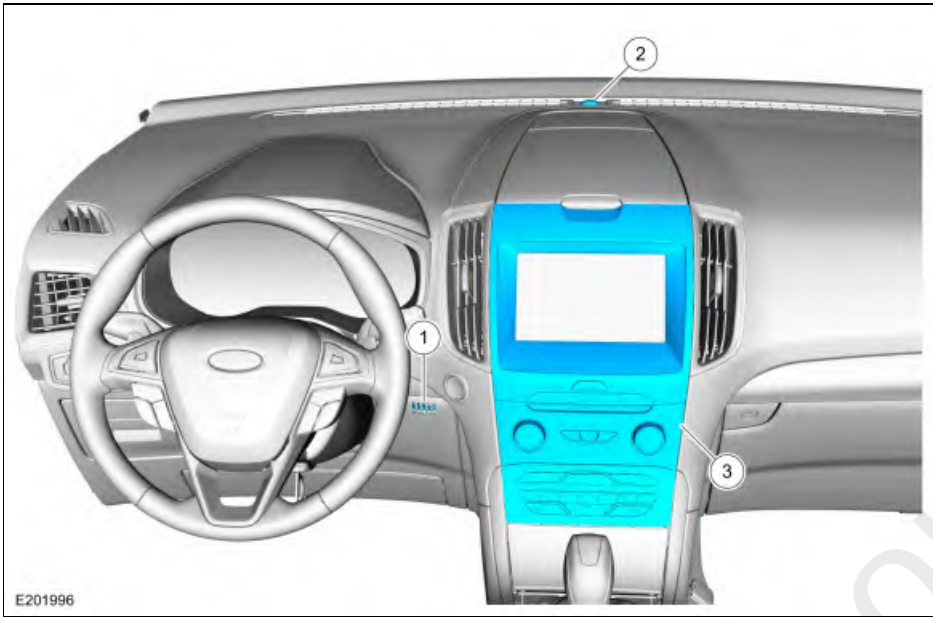


Item	Description
1	In-Vehicle Temperature & Humidity Sensor
2	Auto Lamp & Sunload Sensor
3	FCIM & HVAC Control Module

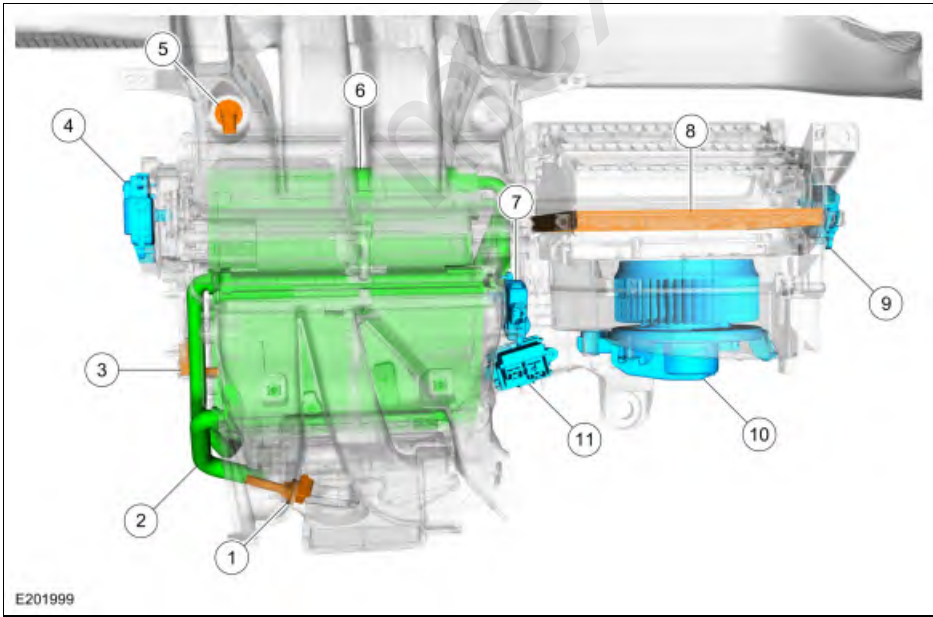

Item	Description
1	Driver Side Footwell Air Discharge Temperature Sensor
2	Heater Core
3	Evaporator Temperature Sensor
4	Air Distribution Door Actuator

5	Driver Side Register Air Discharge Temperature Sensor
6	Evaporator
7	Passenger Side Temperature Door Actuator
8	Cabin Air Filter
9	Air Inlet Door Actuator
10	Blower Motor
11	Blower Motor Speed Control

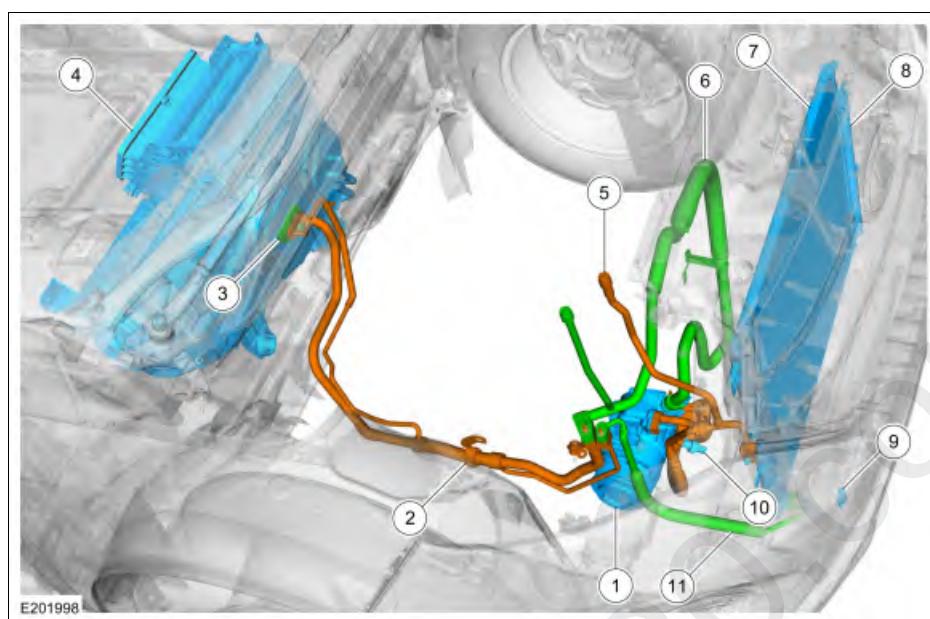

Item	Description
1	A/C Compressor
2	Evaporator Inlet and Outlet Manifold
3	Thermostatic Expansion Valve
4	Heater Core and Evaporator Core Housing
5	A/C Compressor Outlet Line
6	A/C Compressor Inlet Line
7	Condenser
8	Receiver Drier Element
9	Ambient Air Temperature Sensor
10	A/C Pressure Transducer
11	Condenser Outlet Line

Vehicles equipped with Auto Start Stop