


Flashing Light Emitting Diode (LED) Fog Lamp

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH lamps shown, RH lamps similar.

1. Remove the front bumper cover.
Refer to: Front Bumper Cover (501-19 Bumpers, Removal and Installation).
2. Disconnect the electrical connector, remove the screws and the flashing light emitting diode LED lamp.
Torque: 11 lb.in (1.2 Nm)

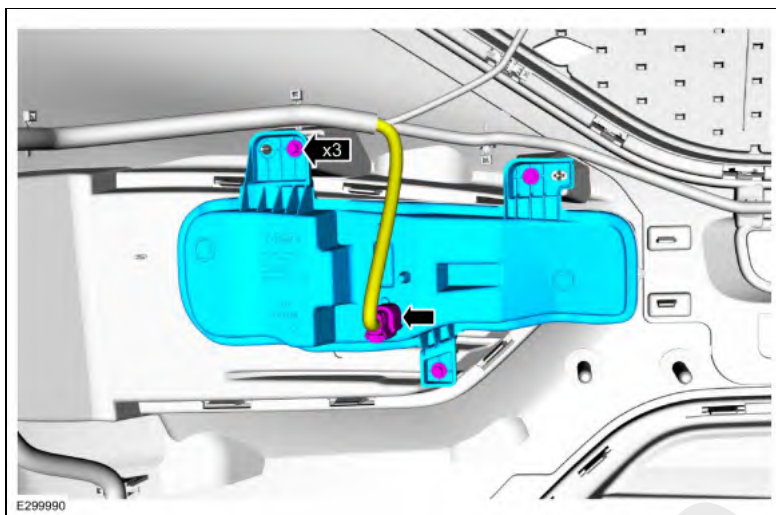

Installation

1. To install, reverse the removal procedure.


Grille Mounted Flashing Light Emitting Diode (LED) Lamps

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH lamps shown, RH lamps similar.

1. Remove the front bumper cover.
Refer to: Front Bumper Cover (501-19 Bumpers, Removal and Installation).
2. Cut the tie strap, disconnect the electrical connector, remove the nuts and the flashing light emitting diode (LED) lamp.
Torque: 18 lb.in (2 Nm)

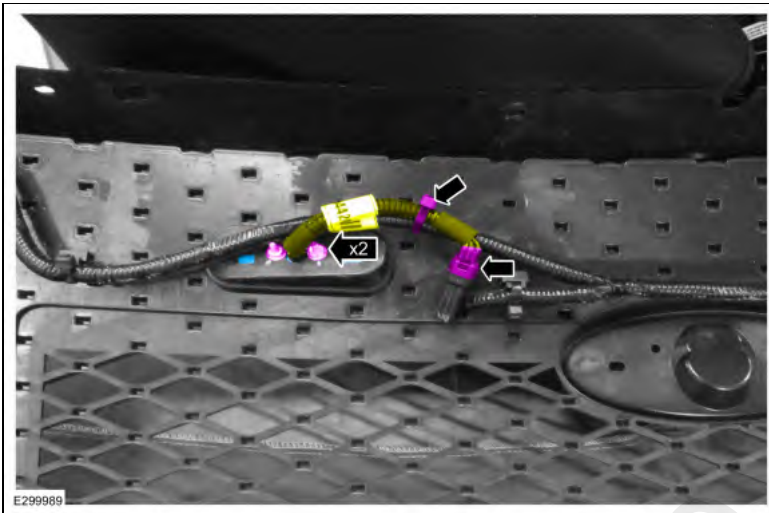

Installation

1. To install, reverse the removal procedure.