


Headliner Mounted Front Flashing Light Emitting Diode (LED) Lamps

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH is similar.

1. Lower the headliner.
Refer to: Headliner - Lowering (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the headliner mounted front flashing LED lamp electrical connector.

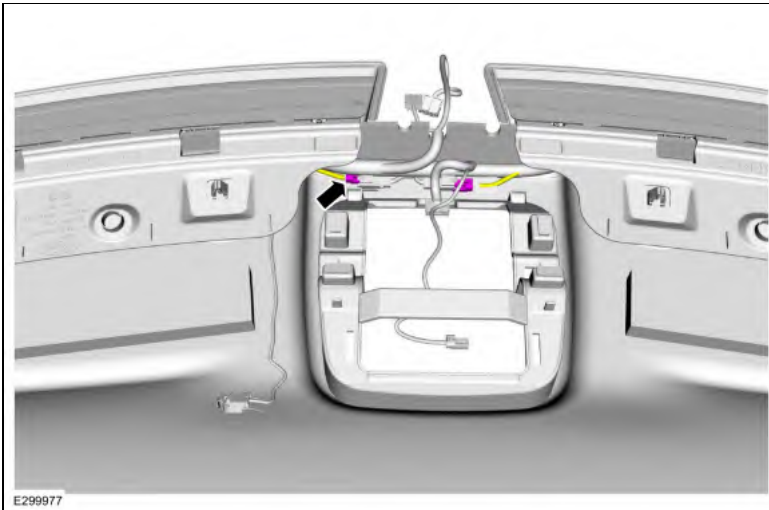

3. Remove the headliner mounted front flashing LED lamp.

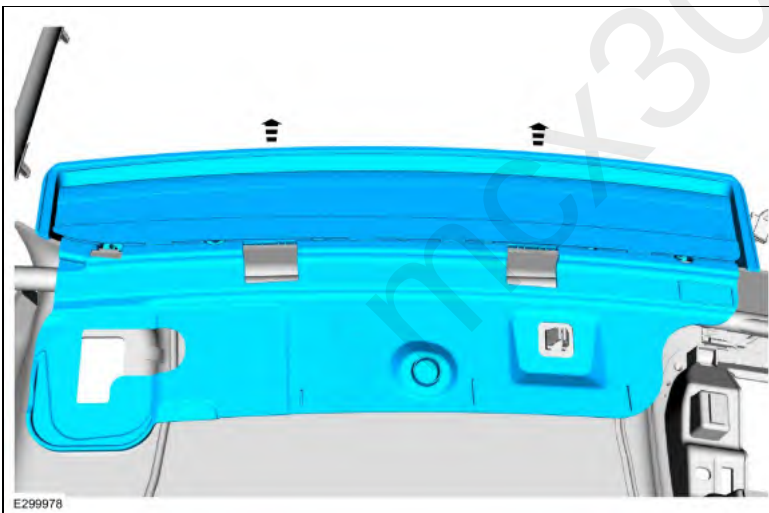

Installation

1. To install, reverse the removal procedure.