


## Liftgate Flashing Light Emitting Diode (LED) Lamps

### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** LH side shown, RH is similar.

1. Remove the liftgate trim panel.  
Refer to: Liftgate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the nuts and the liftgate flashing LED lamp.  
Torque: 19 lb.in (2.2 Nm)

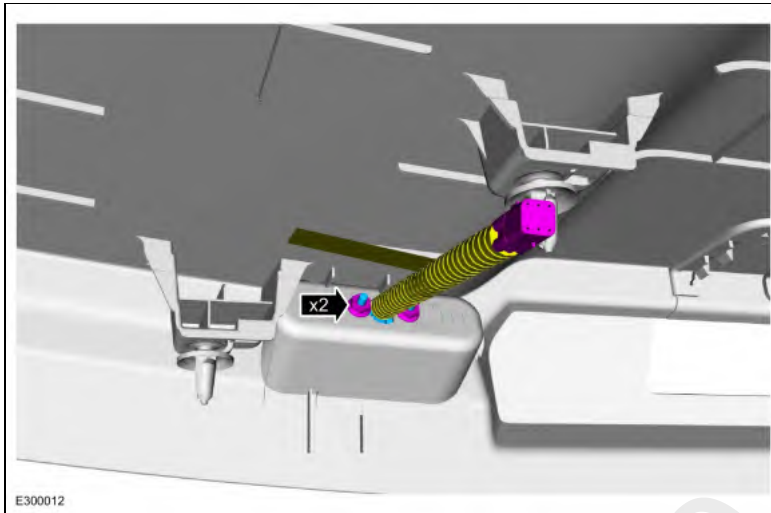

### Installation

1. To install, reverse the removal procedure.


## Lighting and Siren Control Module

### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

#### Main lighting and siren module

1. Remove the bolts and the loadspace floor panel.  
Torque: 16 lb.ft (22 Nm)

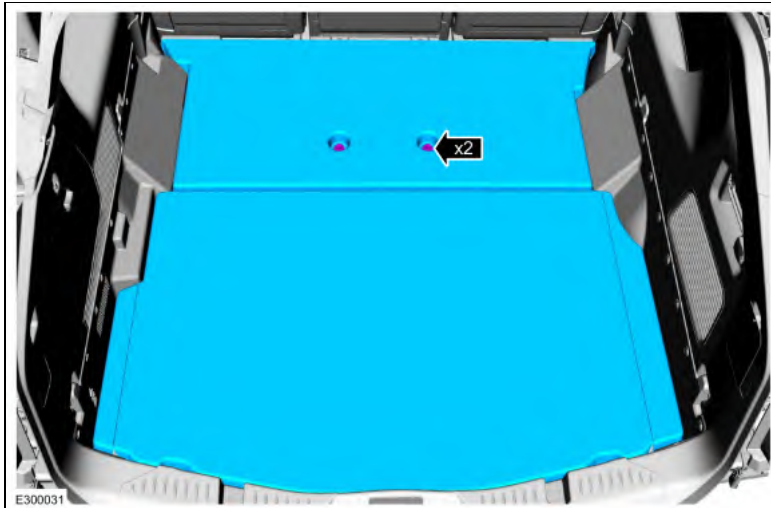

2. Disconnect the lighting and siren control module electrical connectors.



3. Remove the push pins and the lighting and siren control module and bracket assembly.