




6.
 1. Disconnect the electrical connector.
 2. Remove the bolts and the traffic control flashing LED control module
Torque: 44 lb.in (5 Nm)

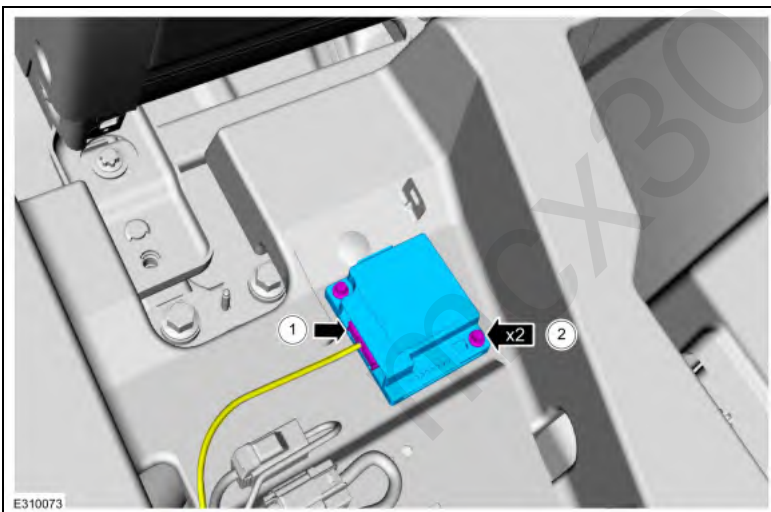

Installation

1. To install, reverse the removal procedure.

Quarter Window Flashing Light Emitting Diode (LED) Lamps

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH is similar.


1. Remove the C-pillar trim panel.
Refer to: C-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the push pins and the quarter window flashing LED lamp and cover assembly.



3. Remove the quarter window flashing LED lamp nuts.
Torque: 19 lb.in (2.2 Nm)



4. Detach the clip and remove the quarter window flashing LED lamp.

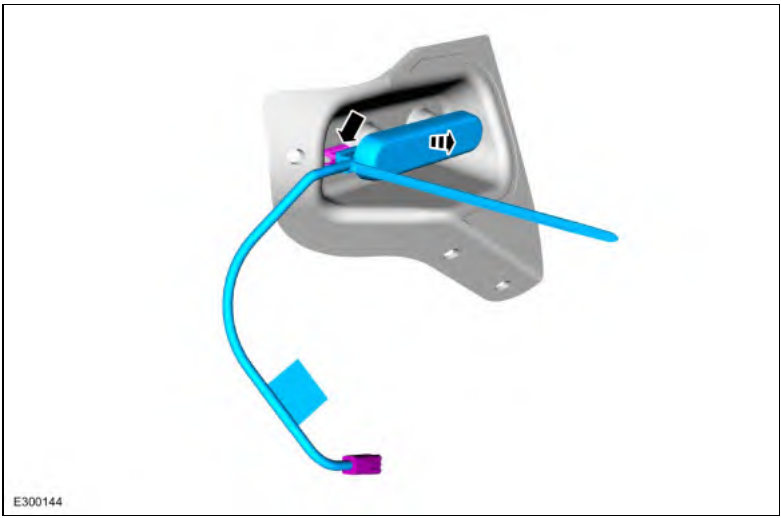

Installation

1. To install, reverse the removal procedure.
-

mcx30.com