


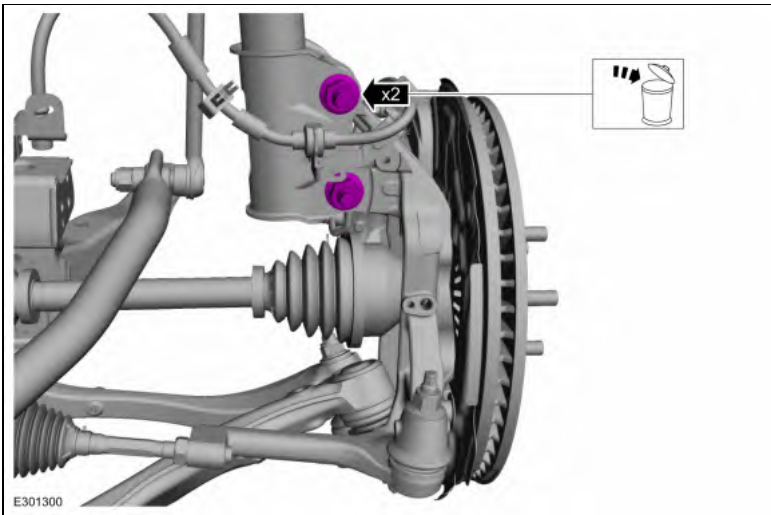

5.


1. **NOTE:** Replace bolts and nuts with new service bolts and nuts.

NOTE: Do not fully tighten the strut-to-wheel knuckle bolts and nuts until the alignment has been corrected.

Install the 2 new service strut-to-wheel knuckle bolts and nuts and tighten until snug.

2. **NOTE:** Adjustment from maximum inboard to maximum outboard is $.5^{\circ}$.

Move the wheel knuckle assembly inboard or outboard to adjust front camber as necessary.

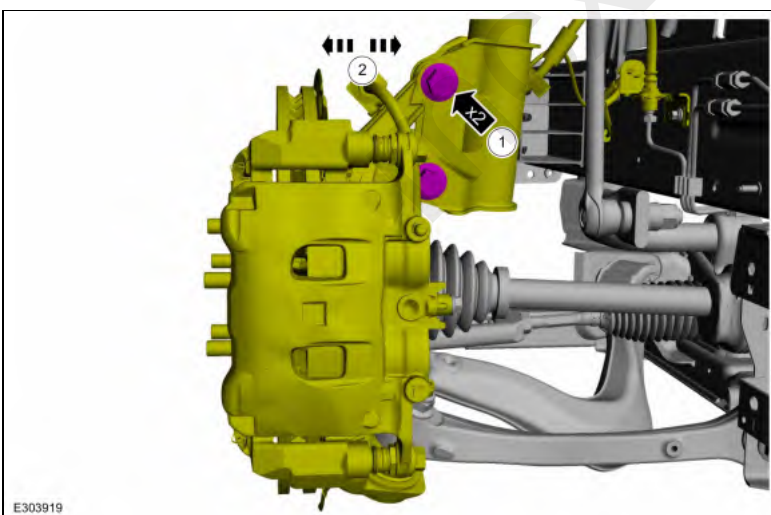

6. Tighten the strut-to-wheel knuckle bolts and nuts.
Torque: 166 lb.ft (225 Nm)