

Front Lower Arm


Special Tool(s) / General Equipment

	204-592 Separator, Lower Arm Ball Joint
	TKIT-2006C-FFMFLM TKIT-2006C-LM TKIT-2006C-ROW
Vehicle/Axle Stands	

Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

1. Measure the distance from the center of the hub to the lip of the fender with the vehicle in a level, static ground position (curb height).

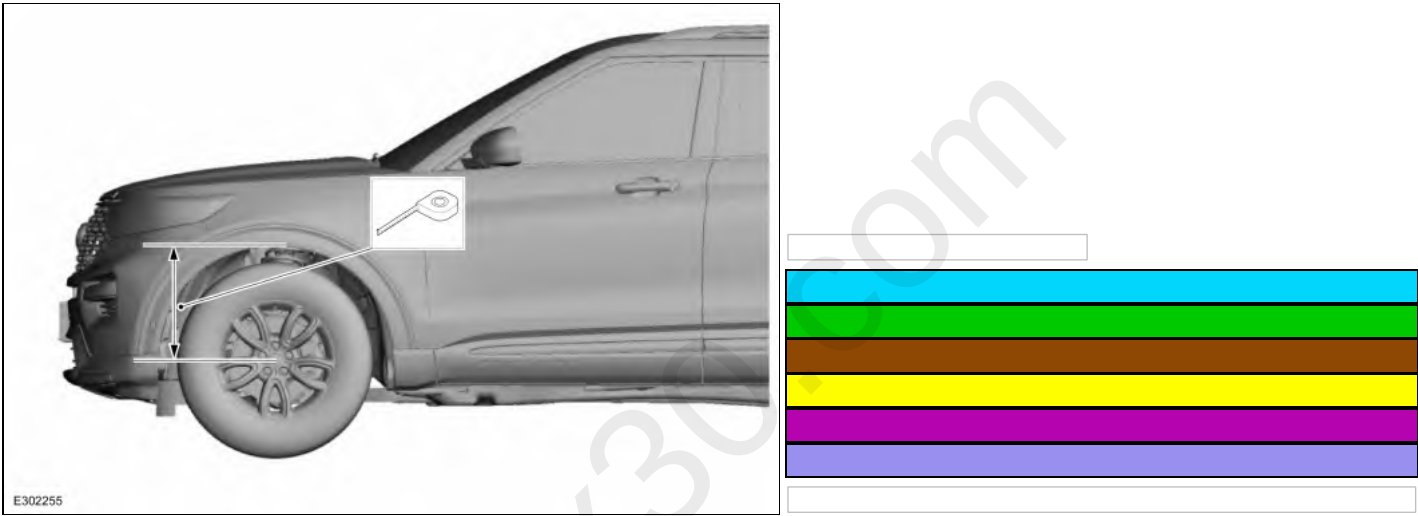

2. Remove the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
3. **NOTICE:** Do not use power tools to remove or install the lower arm outboard nut. Damage to the ball joint or ball joint seal may occur.

NOTE: Use the TORX PLUS® holding feature to prevent the ball stud from turning while removing or installing the lower arm outboard nut. Torx® and TORX PLUS® is a reg. tm of Acument Intellectual Properties, LLC.

Remove and discard the front lower arm outboard nut.