



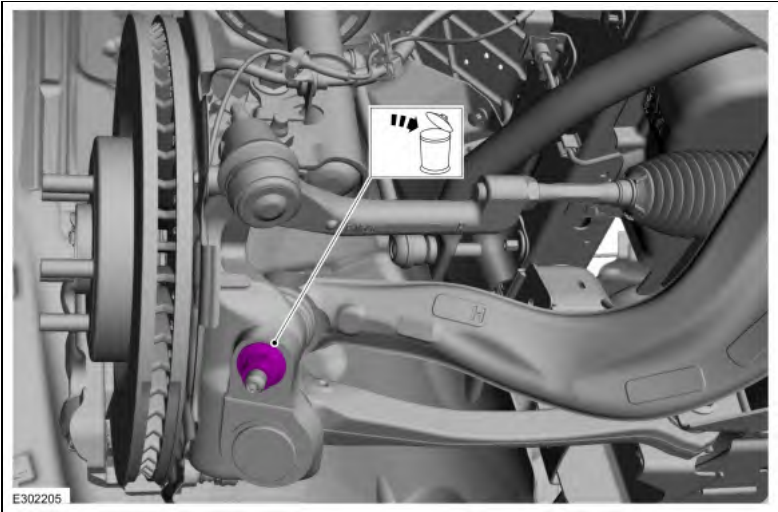

4. **NOTICE:** Do not use a hammer, prying device, or separator fork to separate the ball joint from the wheel knuckle. Damage to the ball joint or ball joint seal may occur.
- NOTICE:** Use care when releasing the lower arm and wheel knuckle into the resting position. Damage to the ball joint or ball joint seal may occur.
- Separate the front lower arm from the wheel Knuckle.
Use Special Service Tool: 204-592 Separator, Lower Arm Ball Joint.

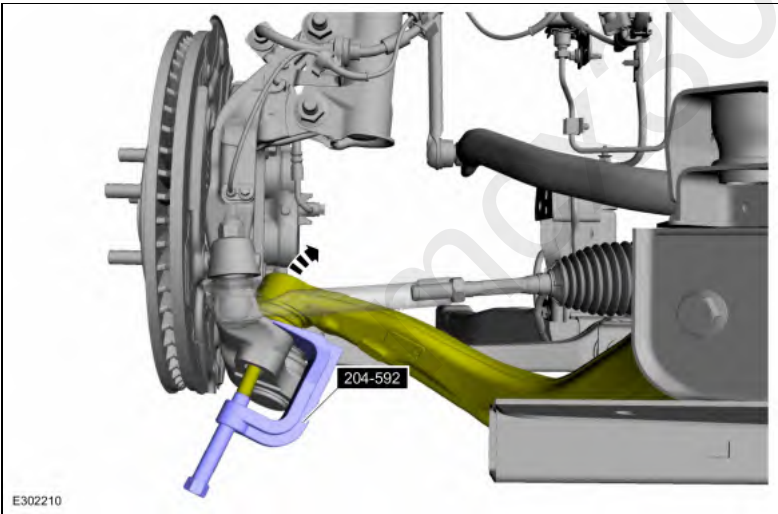

5. Remove and discard the front lower arm-to-frame bolt and remove the front lower arm.