


Boost Pressure Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the LH headlamp assembly.
Refer to: Headlamp Assembly (417-01 Exterior Lighting, Removal and Installation).
2. Disconnect the electrical connector. Remove the retainer and the turbocharger boost pressure sensor.
Torque: 53 lb.in (6 Nm)

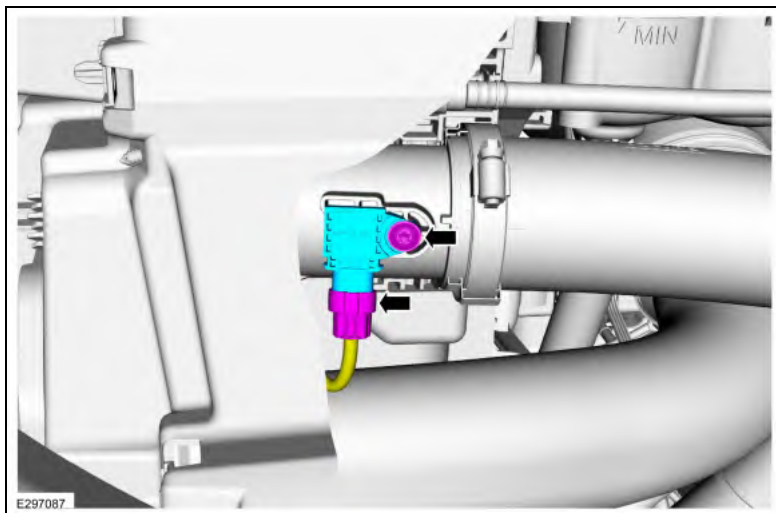

Installation


1. To install, reverse the removal procedure.

Turbocharger Bypass Valve


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the electrical connector and harness retainers.

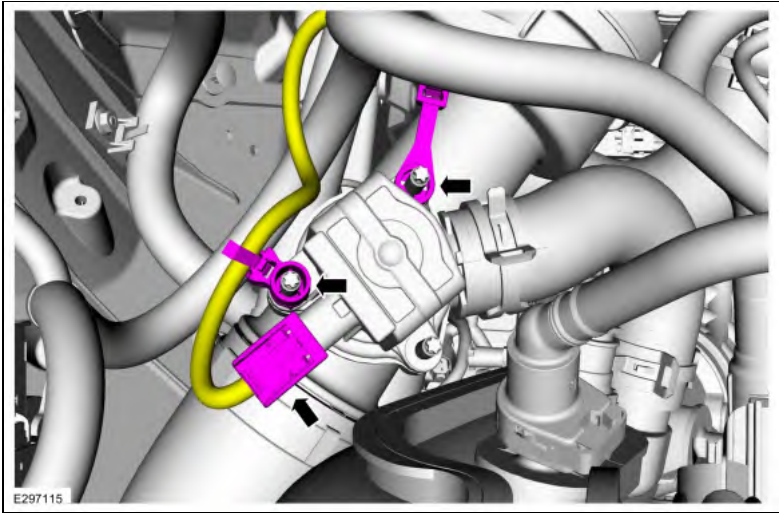

2. Remove the bolts and the turbocharger bypass valve.
Torque: 53 lb.in (6 Nm)

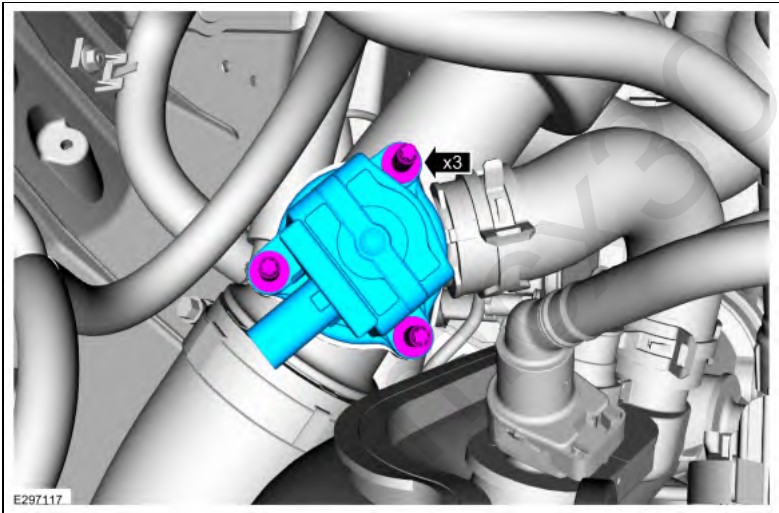

Installation

1. To install, reverse the removal procedure.