


Cylinder Head Temperature 2 (CHT2) Sensor


Removal

1. Disconnect the CHT sensor electrical connector.

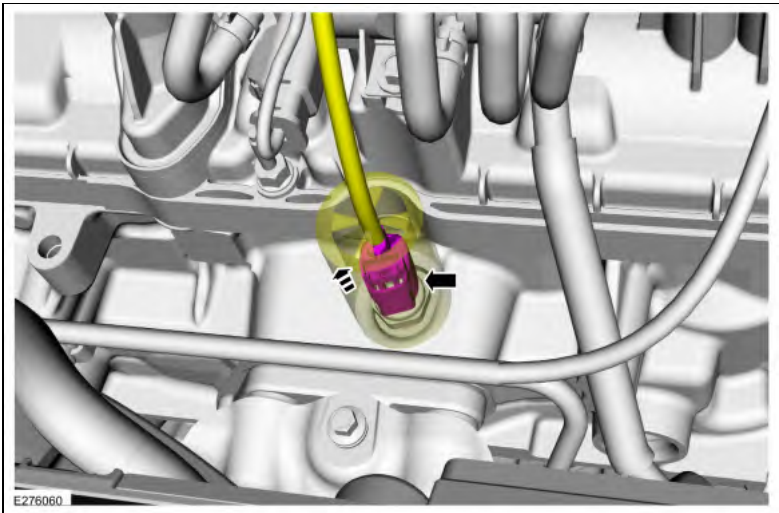

2. **NOTE:** Do not reuse the CHT sensor, install a new sensor.

Remove and discard the CHT sensor.
Torque: 97 lb.in (11 Nm)

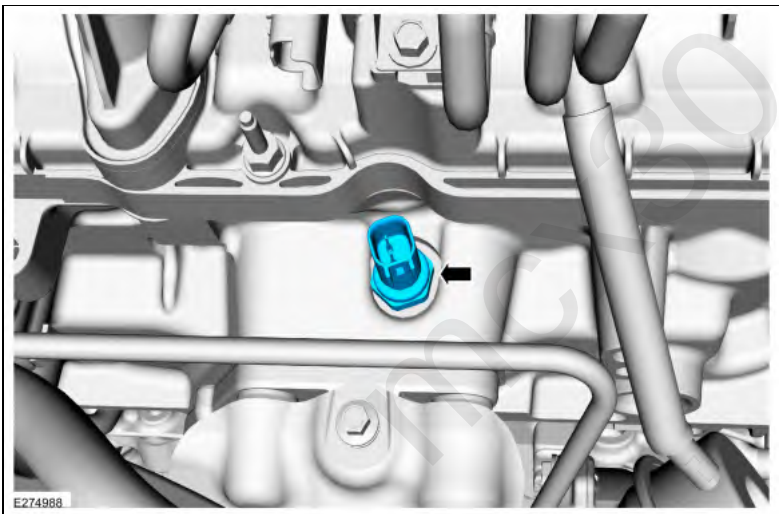

Installation


1. To install, reverse the removal procedure.

Engine Coolant Temperature (ECT) Sensor

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the coolant outlet connector.
Refer to: Coolant Outlet Connector (303-03B Engine Cooling - 3.0L EcoBoost, Removal and Installation).
2. Disconnect the ECT sensor electrical connector.

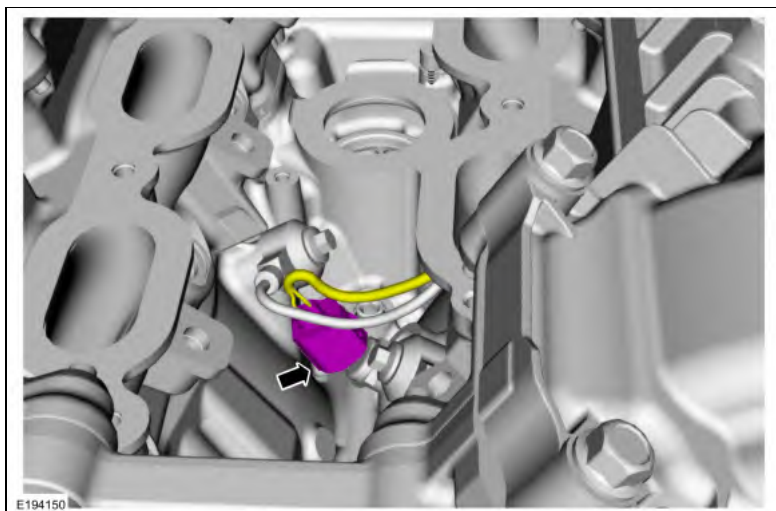

3. **NOTE:** Do not reuse the ECT sensor; install a new sensor.

Remove and discard the ECT sensor.
Torque: 106 lb.in (12 Nm)

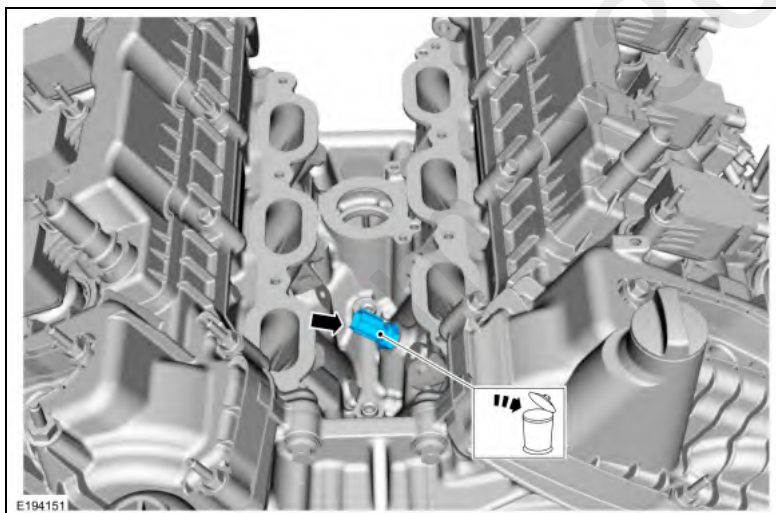

Installation

1. To install, reverse the removal procedure.