

4.
 - Remove the LH catalytic converter.
Refer to: Catalytic Converter LH (309-00B Exhaust System - 3.0L EcoBoost, Removal and Installation).
5. Apply penetrating oil to sensor and disconnect the harness retainers. Using the special tool remove the HO2S.
Use Special Service Tool: 303-476 (T94P-9472-A) Socket, Exhaust Gas Oxygen Sensor.
Material: Motorcraft® Penetrating and Lock Lubricant / XL-1