


Manifold Absolute Pressure and Temperature (MAPT) Sensor

Removal

1. **NOTE:** Lubricate the O-ring with clean engine oil.

Disconnect the electrical connector. Remove the bolt and the MAPT sensor.
Torque: 35 lb.in (4 Nm)

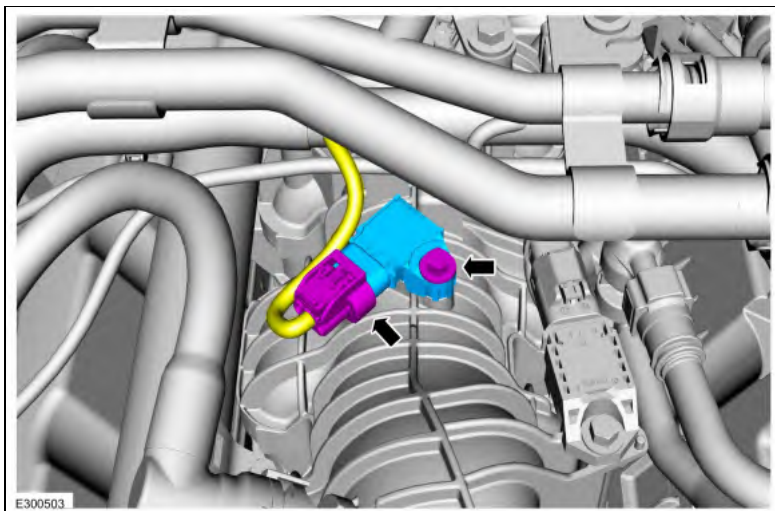

Installation

1. To install, reverse the removal procedure.