


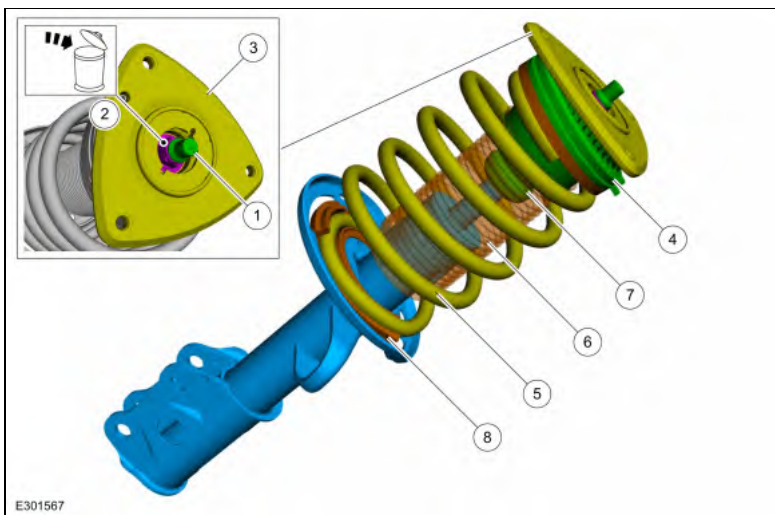


ASSEMBLY

1. **NOTE:** Make sure that the components are installed to the position noted before removal.

To assemble, reverse the disassembly procedure.

2. **NOTE:** Make sure that the spring is centered in the lower spring seat.

Make sure that the lower spring insulator is properly seated on spring seat.

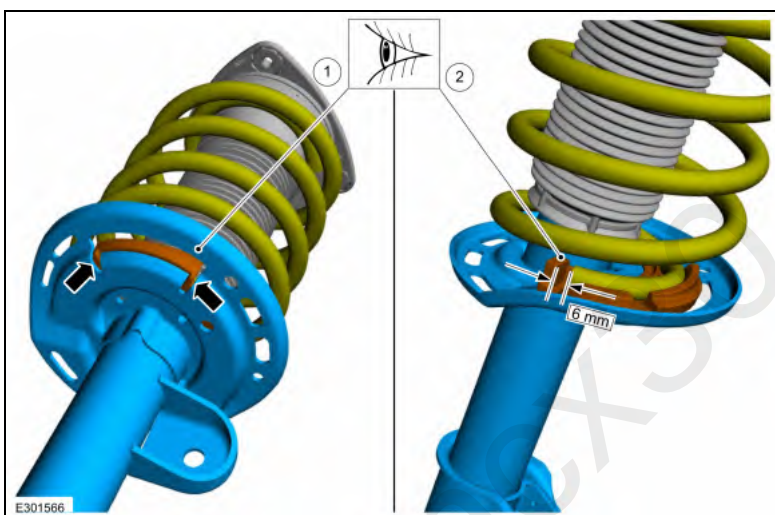

3. Make sure that the bearing locator pin is properly positioned in top mount hole.

