

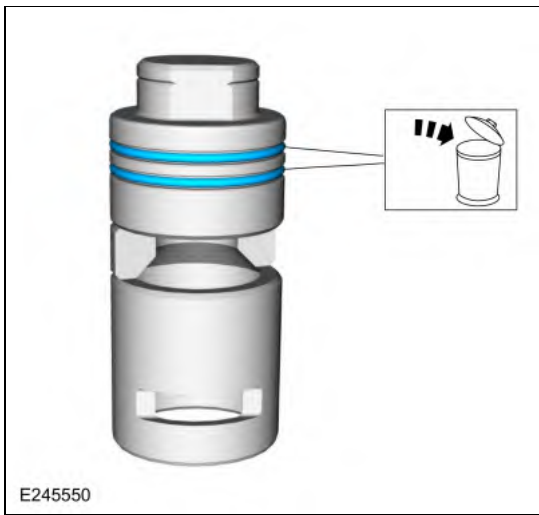


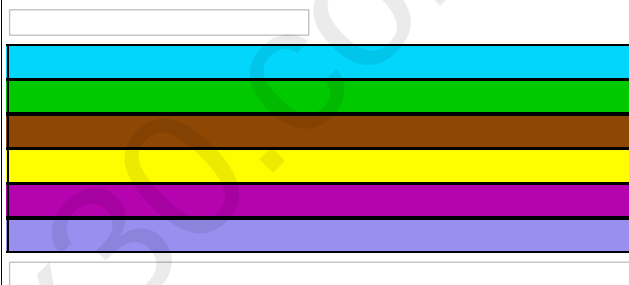

3. Remove the park pawl shaft plug.

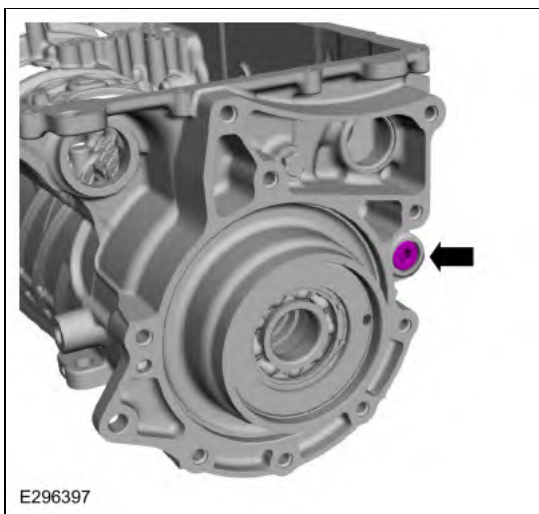

4.
 1. Disconnect the park pawl return spring to remove tension from the park pawl shaft and remove the park pawl shaft.
 2. Remove the park pawl.
 3. Remove the park pawl return spring.