



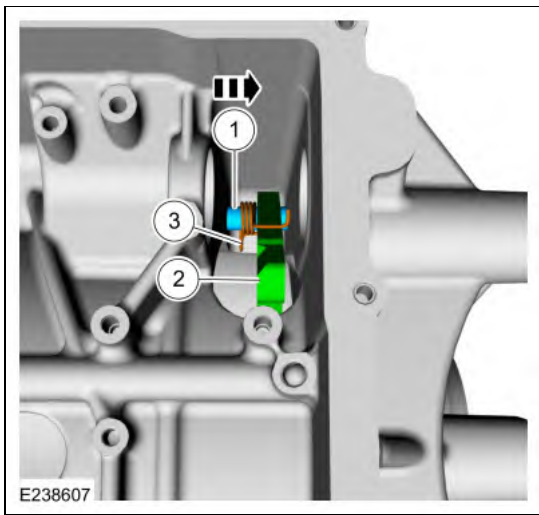


5. Remove the line pressure port and rear case plugs.

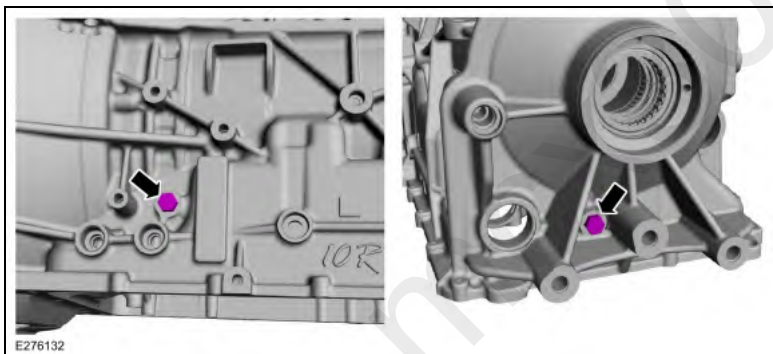


Rear Wheel Drive (RWD) vehicles

6. Remove the output shaft ball bearing snap ring.

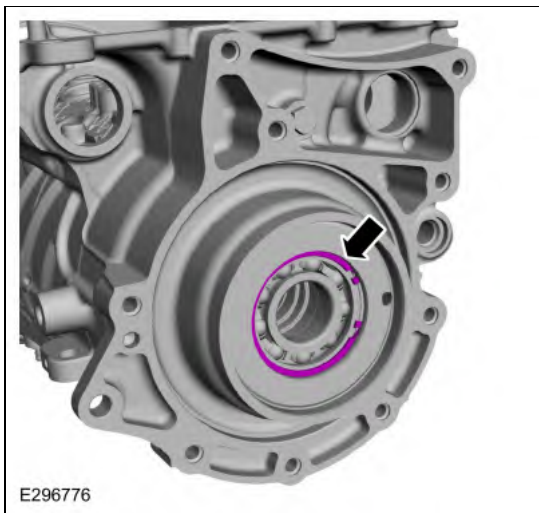




7. Using the special tools, remove the output shaft ball bearing.
 Use Special Service Tool: 100-001 (T50T-100-A) Slide Hammer. , 307-318 Remover, Stator Bearing.

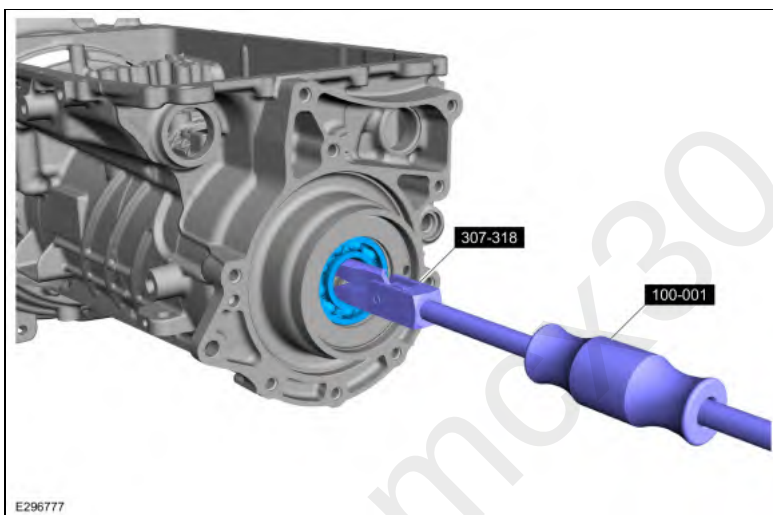



All vehicles

8. Using the special tools, remove the bearing(s) and the fluid passage sleeve.
1. All Vehicles
 2. Four-Wheel Drive (4WD) vehicles only
 - Use Special Service Tool: 204-594 Forcing screw. , 205-256 Installer, Front Wheel Hub Seal. , 307-781 Needle bearing remover/Installer.

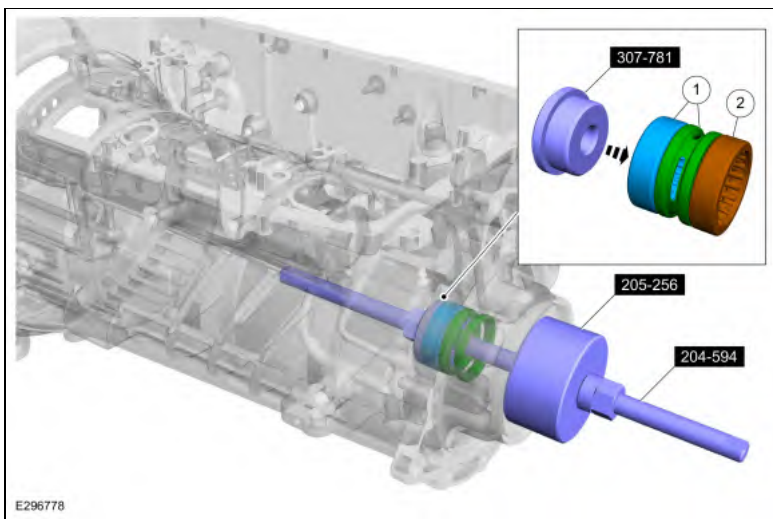

Assembly

mcx30.com

Transmission Case

Special Tool(s) / General Equipment

 E131850	204-594 Forcing screw
 E270043	307-549 Installer, Shift Shaft Fluid Seal TKIT-2005D1-F1
 E297570	307-648 Remover/Installer, Rear Bearing TKIT-2009C-F TKIT-2009C-ROW
 E234931	307-745 Installer, Park Sleeve Roll Pin
 E302627	307-781 Needle bearing remover/Installer
 E302637	307-788 Installer, sleeve
 E302637	307-789 Installer, sleeve

- NOTE:** This step is only necessary if the transmission case is being replaced. A new transmission case will not come with a vent tube.

Using the special tool, install the vent tube in the transmission case.

Use Special Service Tool: 307-549 Installer, Shift Shaft Fluid Seal.