

Lower Arm

Special Tool(s) / General Equipment

Vehicle/Axle Stands


Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

1. Remove the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).

2. **NOTE:** If equipped with dynamic suspension.

Disconnect the rear ride height sensor electrical connector and separate the wiring harness guide.

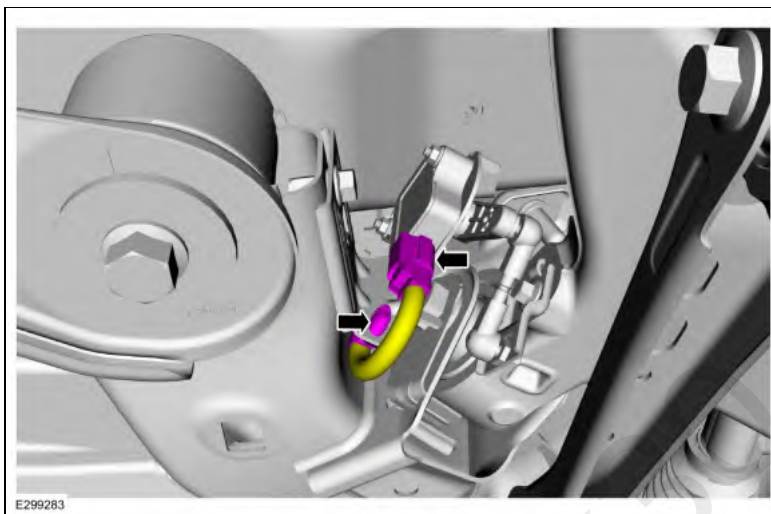

3. **NOTE:** If equipped with dynamic suspension.

1. Remove the rear ride height sensor anchor plate bolt.
2. Remove the rear ride height sensor arm anchor plate bolt.
3. Remove the rear ride height sensor assembly.