

Wheel Bearing and Wheel Hub


Special Tool(s) / General Equipment

	205-D070 (D93P-1175-B) Remover, Front Wheel Hub
---	--


Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.


1. Remove the wheel and tire.
Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
2. Remove and discard the wheel hub nut.

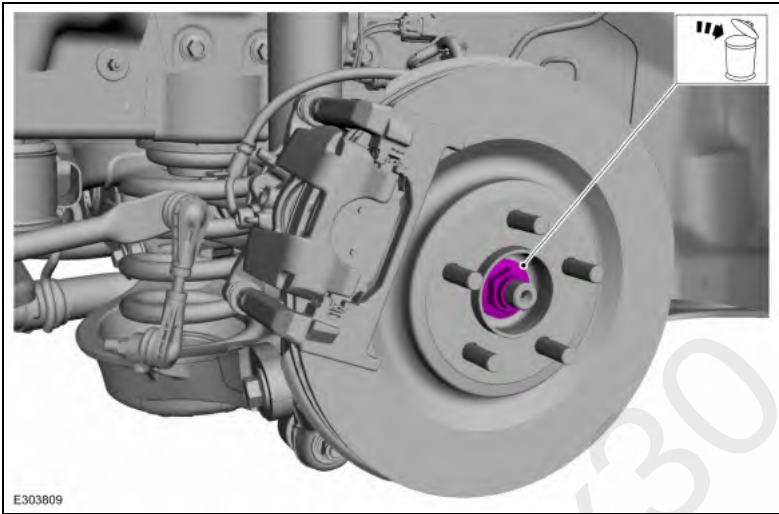

3. Install the special tool and press the halfshaft from the rear wheel bearing and wheel hub.
Use Special Service Tool: 205-D070 (D93P-1175-B) Remover, Front Wheel Hub.

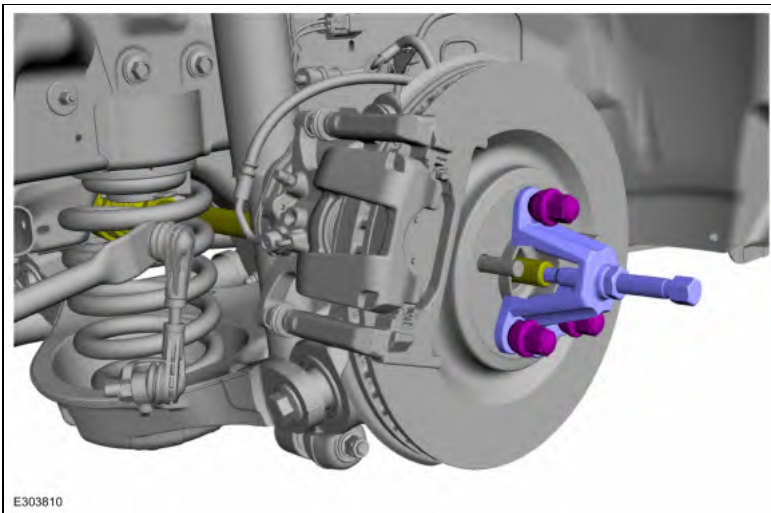

4. Remove the brake disc.
Refer to: Brake Disc (206-04 Rear Disc Brake, Removal and Installation).
5. Remove and discard the wheel bearing and wheel hub retainers and remove the wheel bearing and wheel hub.

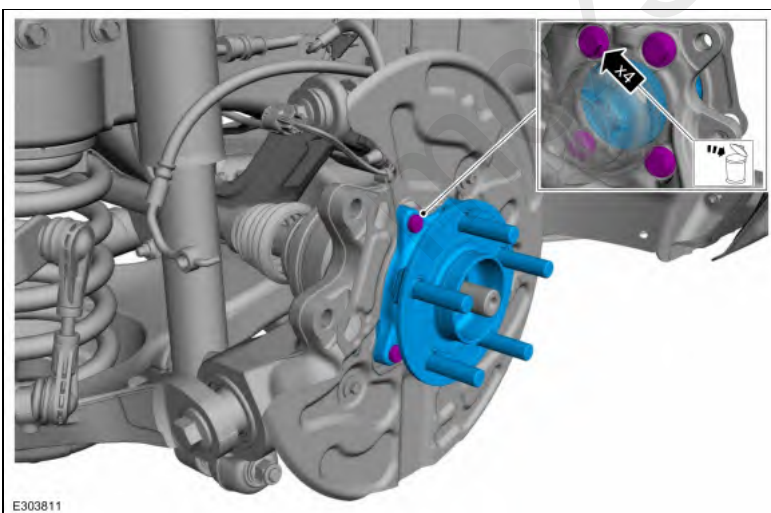

Installation

1. **NOTE:** Tighten the bolts in a cross pattern.

Install the wheel bearing and wheel hub and install the new wheel bearing and wheel hub retainers.
Torque: 111 lb.ft (150 Nm)