

Removal and Installation


Engine Disconnect Clutch Pressure Sensor

Materials


Name	Specification
Motorcraft® MERCON® ULV Automatic Transmission Fluid XT-12-QULV	WSS-M2C949-A, MERCON® ULV

Removal

- With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
- Disconnect the engine disconnect clutch pressure sensor electrical connector.

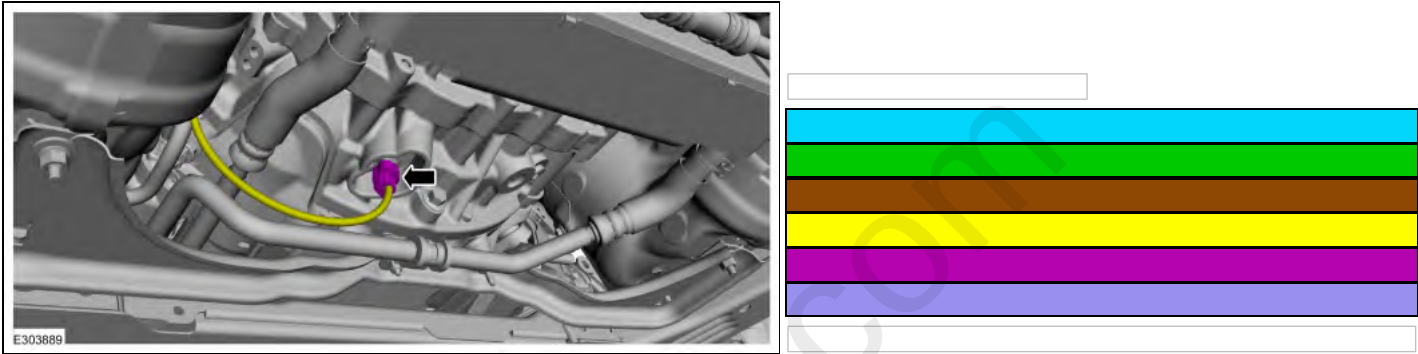

- Remove the bolts and the engine disconnect clutch pressure sensor.

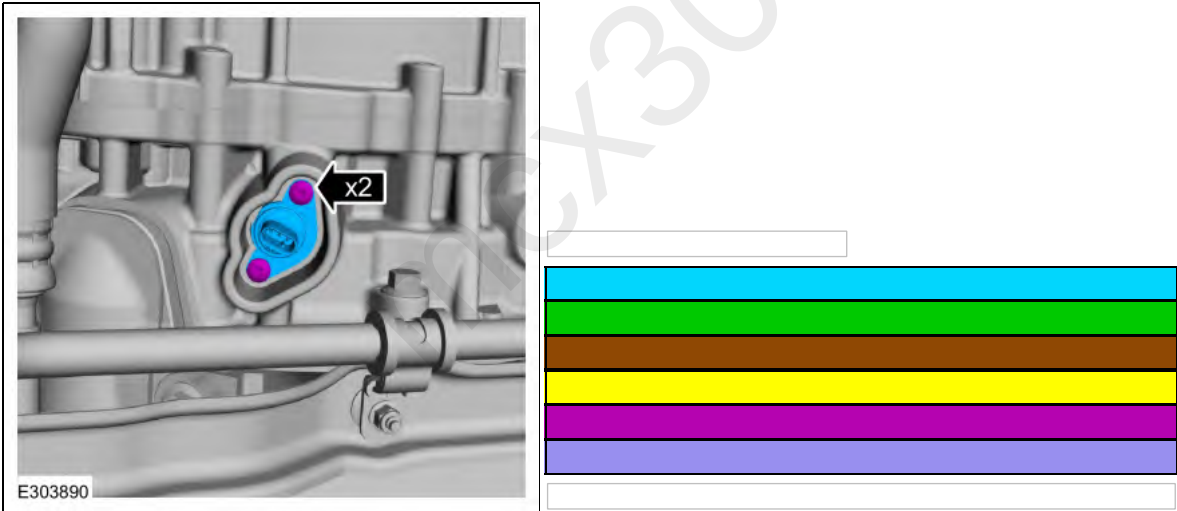

Installation

- Lubricate the O-ring seal.
Material: Motorcraft® MERCON® ULV Automatic Transmission Fluid / XT-12-QULV (WSS-M2C949-A,) (MERCON® ULV)