



Park Lock Pawl Solenoid

Removal

1. Remove the transmission fluid pan, gasket and filter.
Refer to: Transmission Fluid Pan, Gasket and Filter (307-01C Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission â€“ 10R80 MHT, Removal and Installation).
2. Slide the plastic lock to the unlock position. While pressing the plastic tab, disconnect the electrical connector.


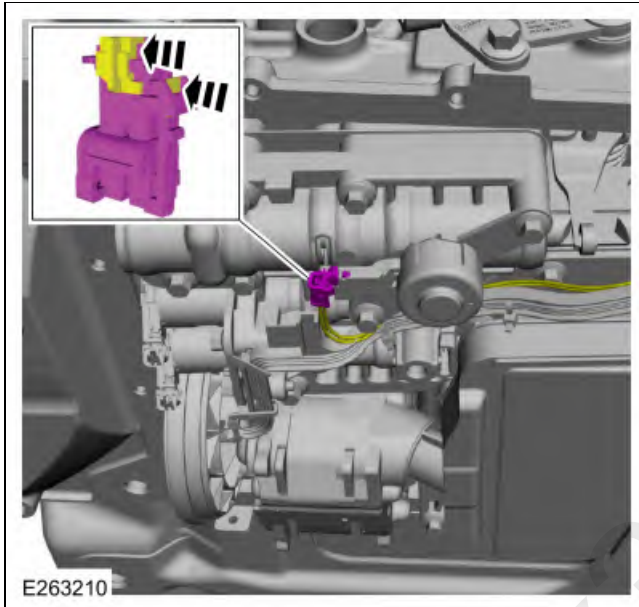


3. Remove the bolts and the park lock pawl solenoid.

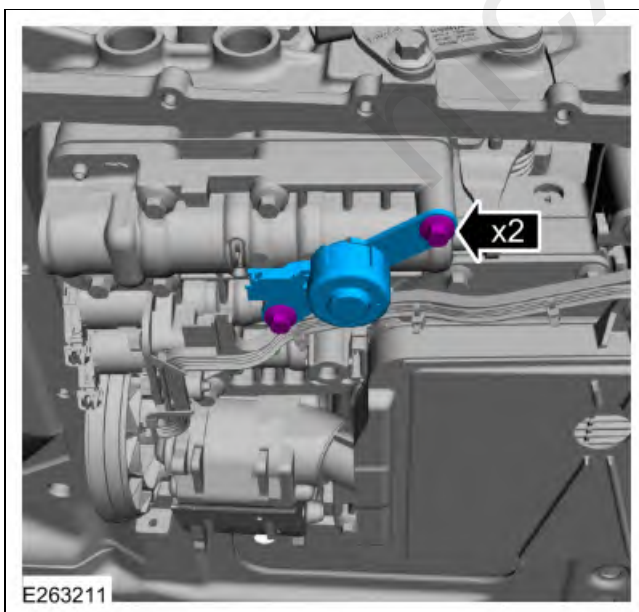


Installation

 1. Install the park lock pawl solenoid and the bolts.
Torque: 106 lb.in (12 Nm)

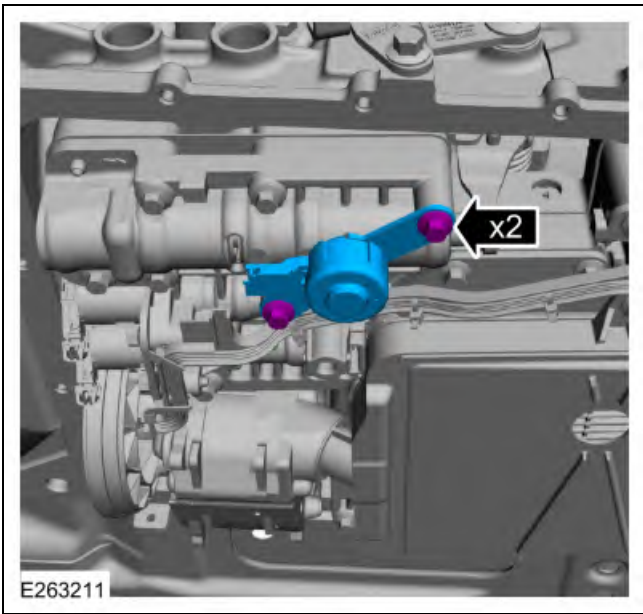

2. Connect the internal wiring harness electrical connector.
 - Slide the plastic lock to the locked position.

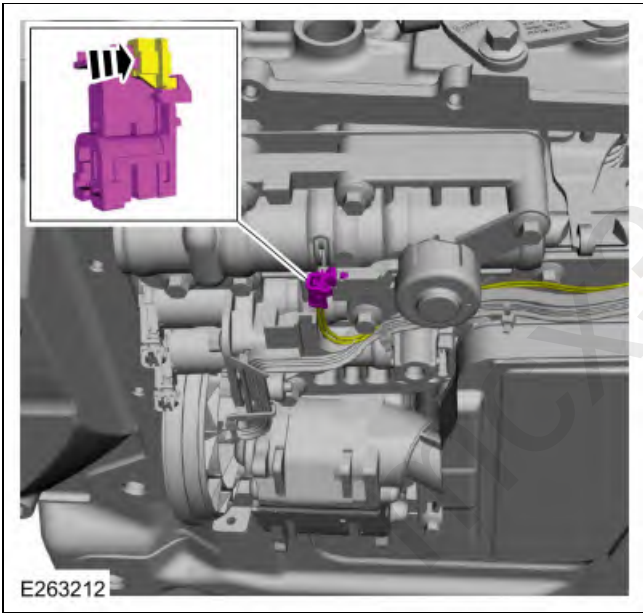

3. Install the transmission fluid pan, gasket and filter.
 Refer to: Transmission Fluid Pan, Gasket and Filter (307-01C Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission & 10R80 MHT, Removal and Installation).