




6. Remove the main control assembly to transmission fluid pump seal.

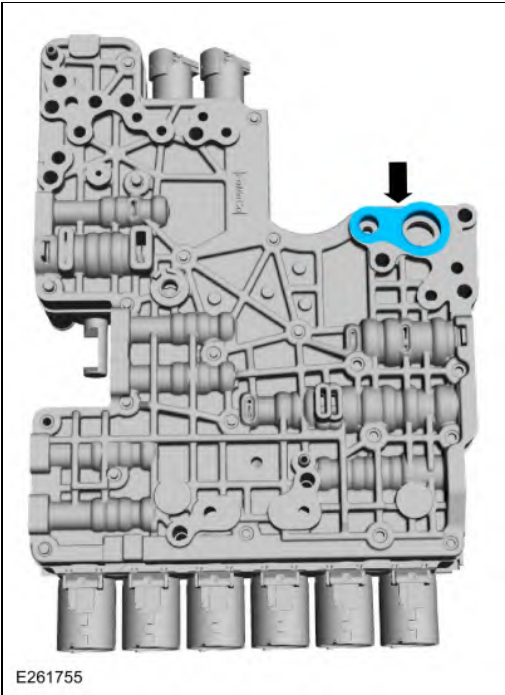


7. **NOTE:** The orientation of the solenoids before removal.
1. Remove the bolts and the park lock pawl solenoid.
 2. Remove and discard the bolts. Remove the solenoid retaining plate, TCC solenoid and the LPC solenoid.

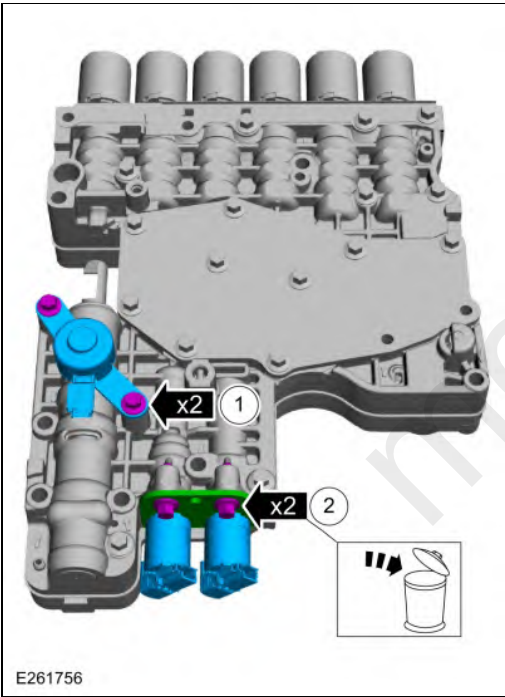

8. Remove bolts and the shift solenoid retaining plate.

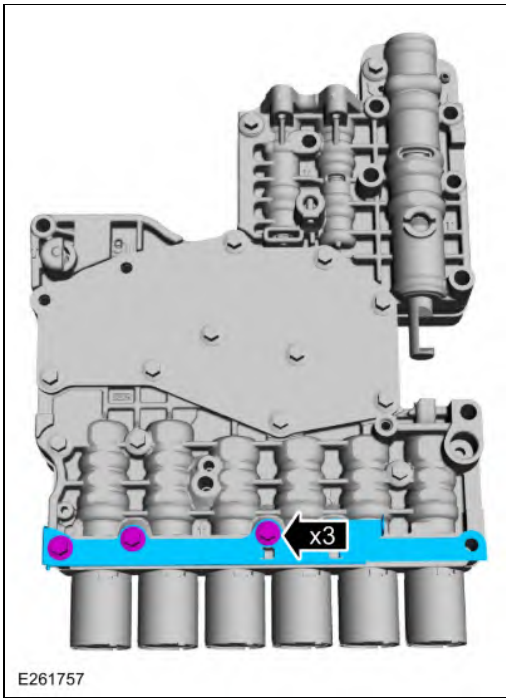


9. Remove the valve body bolts.

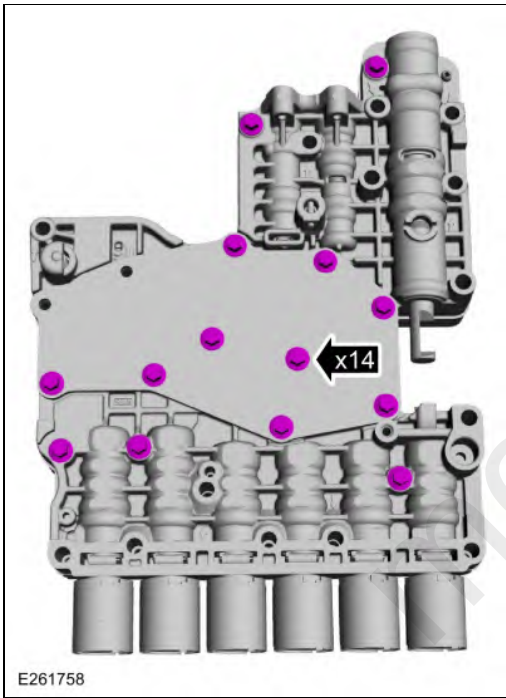


10. Remove and discard the valve channel plate.



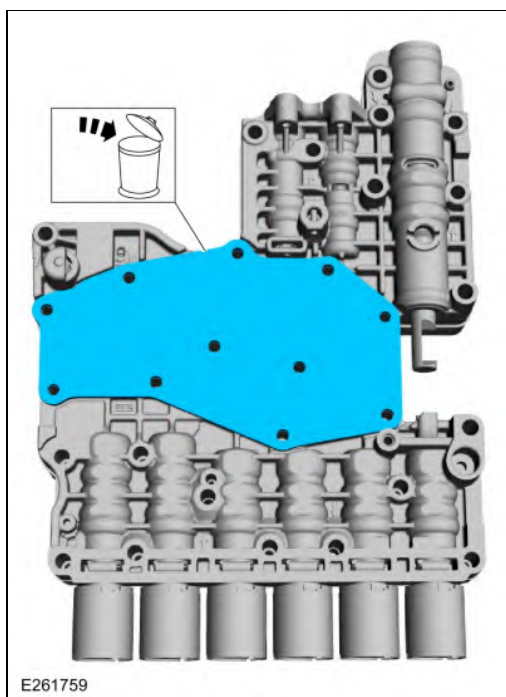


11. **NOTICE:** Many components and surfaces in the main control valve body are precision machined. Use care when handling the upper and lower valve body or damage can occur to the machined surfaces.

Separate the upper valve body from the lower valve body.

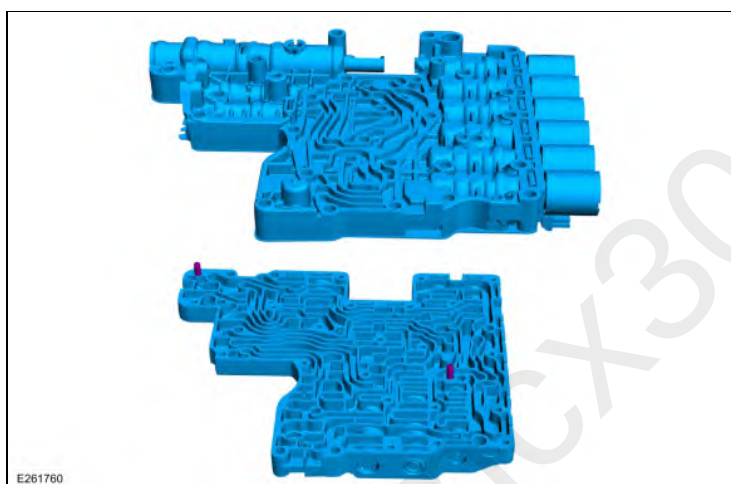

Lower Valve Body


- 12.
1. If equipped, remove the pin-type retainer.
 2. Remove the valve body separator plate bolts.
 3. Remove and discard the valve body separator plate.

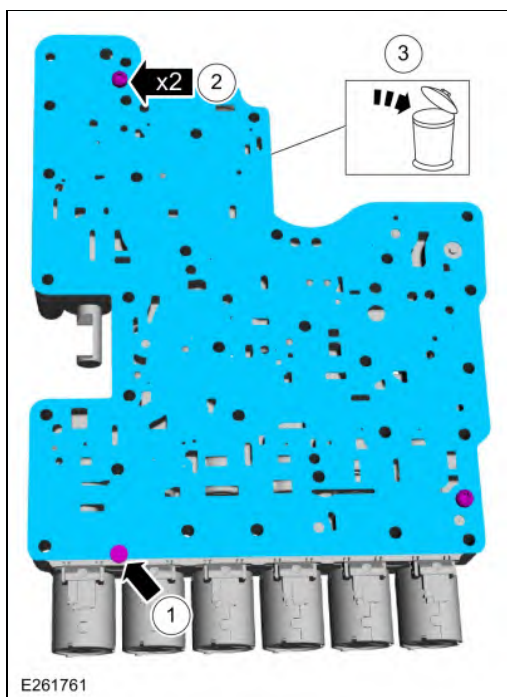


13. **NOTE:** The orientation of the valves and springs.

Remove the following items:

1. Check valve assemblies
2. LPC damper assembly
3. TCC damper assembly

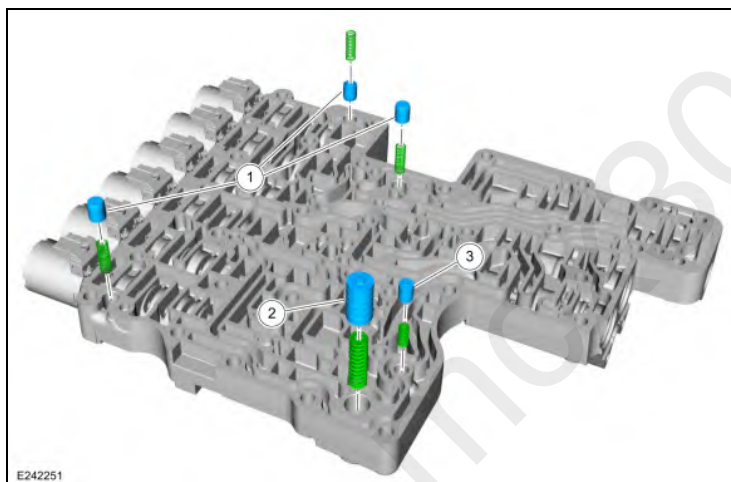


14. Remove the check balls.

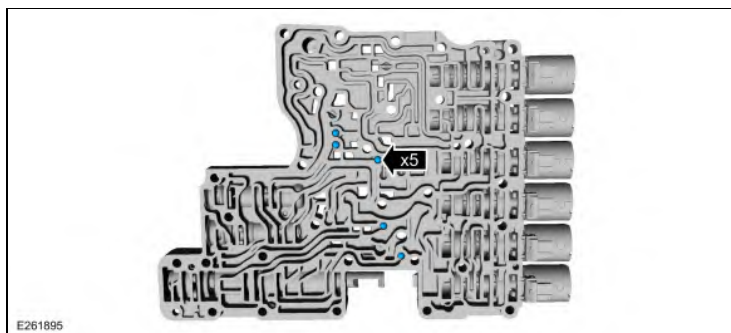


15. **NOTICE:** Note the location of the retaining clips, caps, valves and valve springs for assembly. Failure to install the components in the correct location will result in harsh/soft or no shifts or damage to the transmission.

Remove the retaining clips, cap, valves and valve springs from each bore of the valve body assembly.

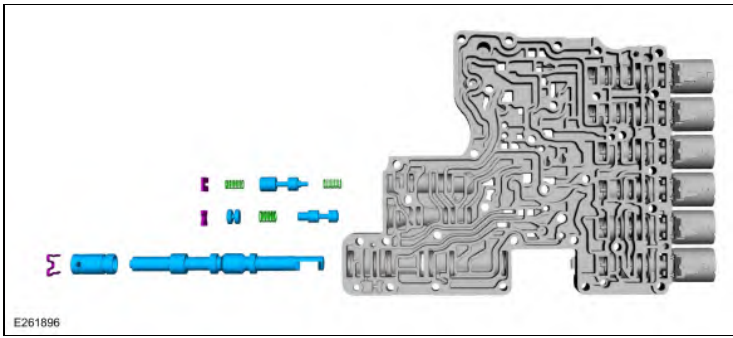


16. **NOTICE:** Solenoids and clutch control valves may visually appear the same but they are calibrated from the factory and are not all the same. Use care not to assemble the main control assembly incorrectly. Incorrect solenoid and clutch control valve installation results in poor transmission shift quality.

Number the solenoids 1 through 6 and number the main control solenoid ports 1 through 6 to correspond to the solenoids.

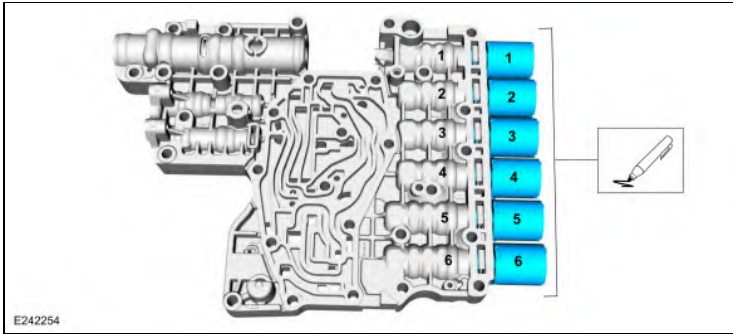

17. **NOTE:** Note the location of the clutch control valves and solenoids for assembly.


Remove the shift solenoid retainers, shift solenoids, and clutch control valves.

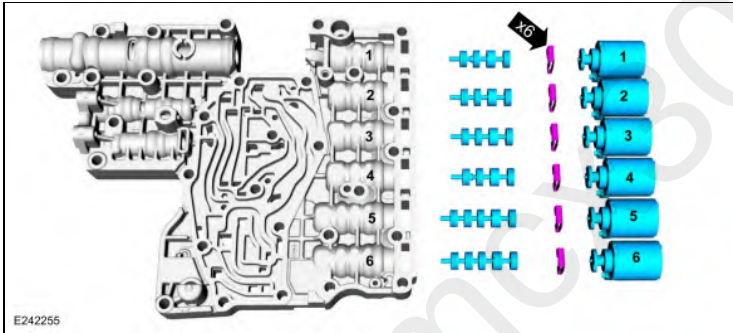

Upper Valve Body

18. **NOTICE:** Note the location of the retaining clips, caps, valves and valve springs for assembly. Failure to install the components in the correct location will result in harsh/soft or no shifts or damage to the transmission.

Remove the retaining clips, cap, valves and valve springs from each bore of the valve body assembly.

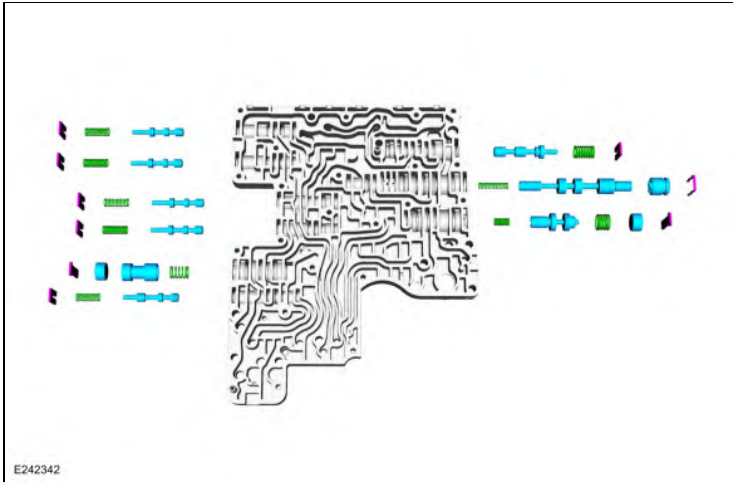


Upper and Lower Valve Body


19. **NOTICE:** Many components and surfaces in the main control valve body are precision machined. Use care when cleaning the lower valve body or damage can occur

to the machined surfaces.

Clean and inspect the lower valve body for damage. Inspect the passages and valves for damage and clean any excessive debris. Install a new component if necessary.

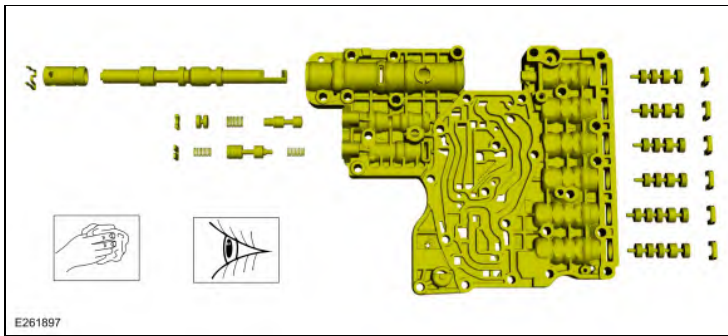


20. Clean and inspect the upper valve body for damage. Inspect the passages and valves for damage and clean any excessive debris. Install a new component if necessary.

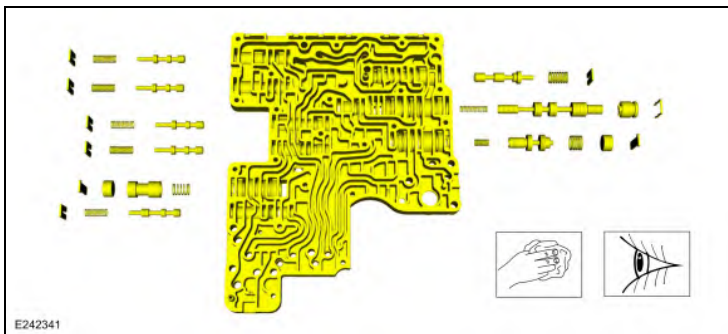

Upper Valve Body

21. **NOTICE:** Failure to install the components in the correct location will result in harsh/soft or no shifts or damage to the transmission.


Install the valves, valve springs, caps and the retaining clips into the correct valve body valve bore.

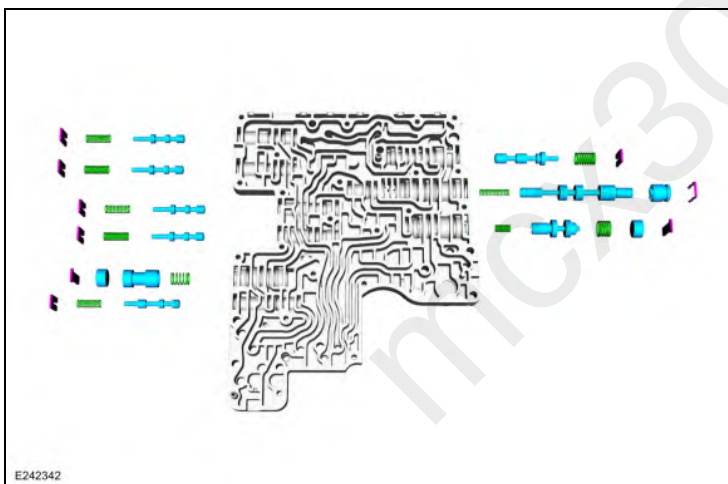

Lower Valve Body


22. **NOTICE:** Failure to install the components in the correct location will result in harsh/soft or no shifts or damage to the transmission.

Install the valves, valve springs, cap and the retaining clips into the correct valve body valve bore.

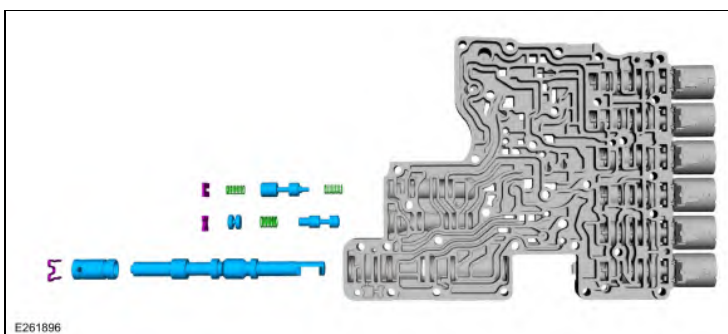

23. **NOTICE:** Solenoids are calibrated from the factory and are not all the same. To replace a solenoid, match the band number with the original solenoid or harsh shifts or damage to the transmission can occur.


If new solenoids are needed, identify the solenoid band number.

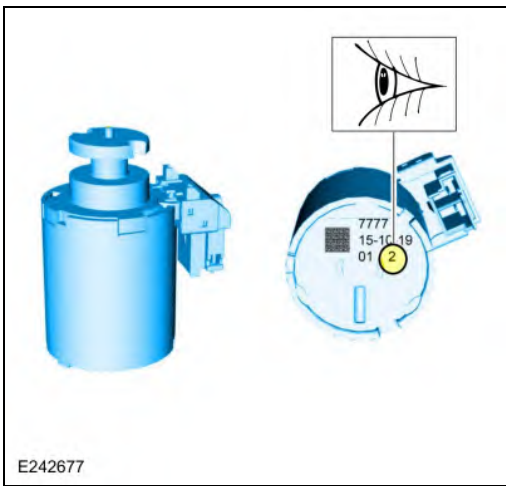


24. **NOTICE:** Failure to install the components in the correct location will result in harsh/soft or no shifts or damage to the transmission.

Install the clutch control valves, and the shift solenoids in the corresponding marked location. Install the shift solenoid retainers with the flat side towards the solenoids.

1. Retainer flat side

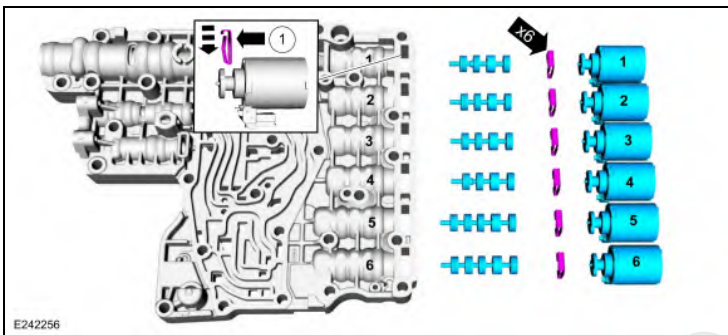


25. Install the check balls.

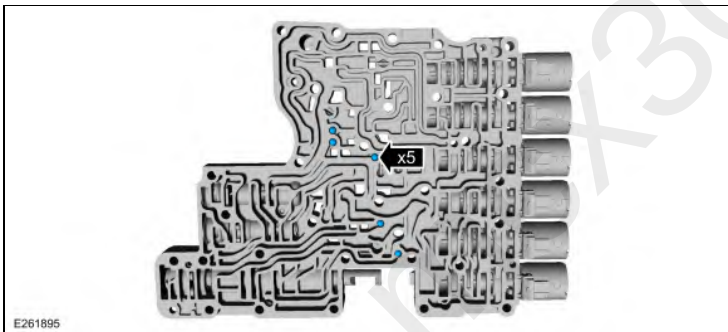

26. **NOTE:** The orientation of the valves and springs.


Install the following items:

1. Check valve assemblies
2. LPC damper assembly
3. TCC damper assembly

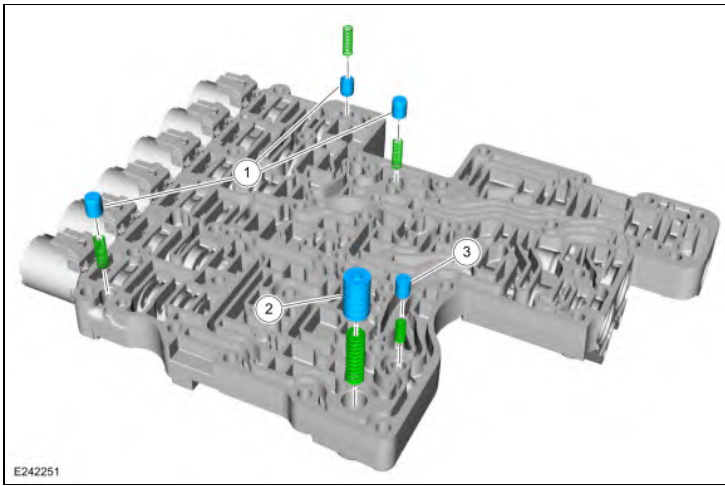


27.

1. Using the special tools align the new valve body separator plate onto the lower valve body.
Use Special Service Tool: 307-299 Alignment Pins, Valve Body.
2. Install the bolts.
Torque: 71 lb.in (8 Nm)
3. If equipped, install the pin-type retainer.

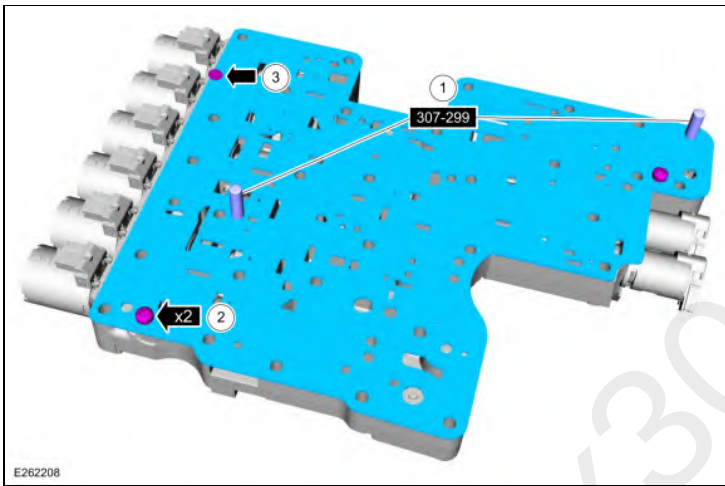


Upper and Lower Valve Body


28. Align the guide pins on the upper valve body with the alignment holes in the lower valve body.

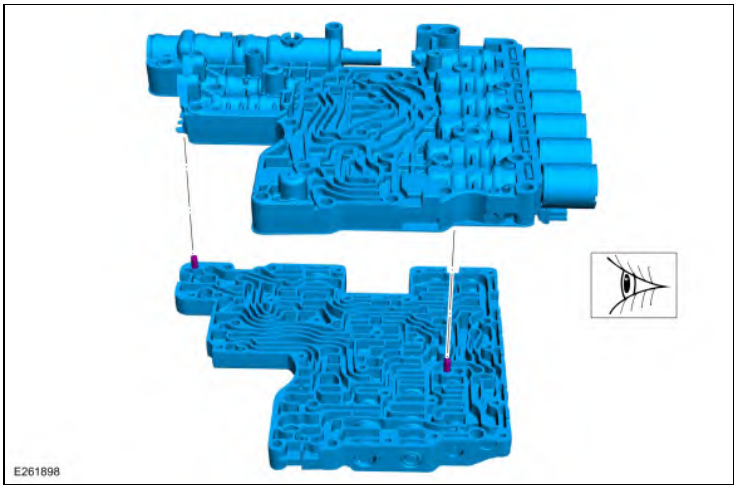


29. Install the new valve body channel plate.

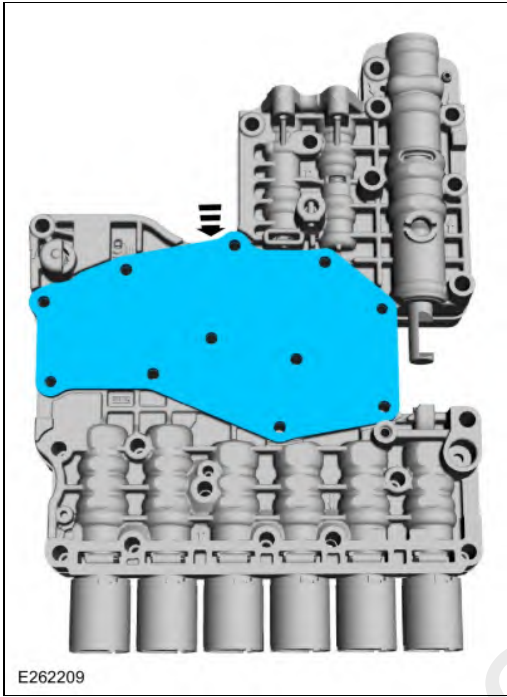


30. Loosely install the valve body bolts.

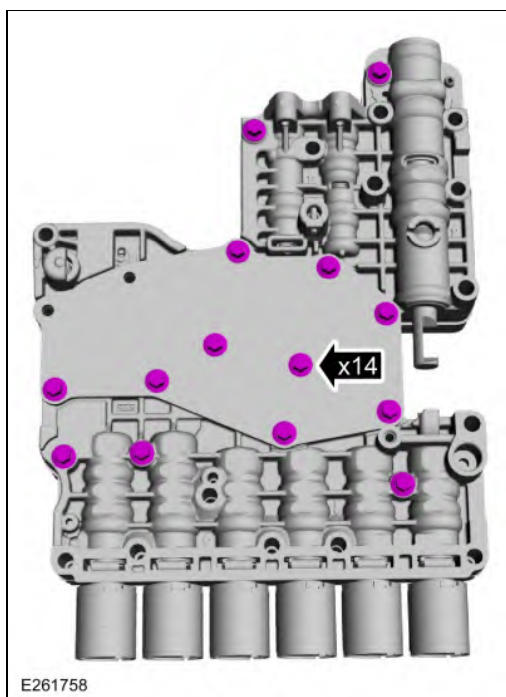

- 31.
1. Install the park lock pawl solenoid and loosely install the bolts.
 2. Install the shift solenoid retaining plate and loosely install the bolts.

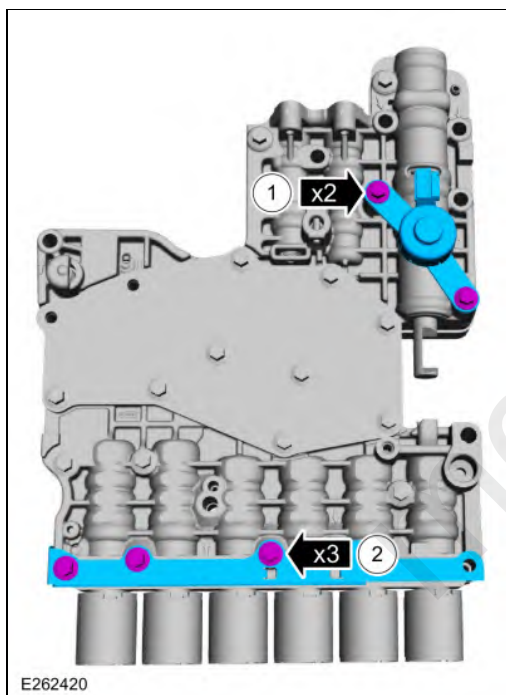


32. Tighten the bolts in the sequence shown.
Torque: 106 lb.in (12 Nm)

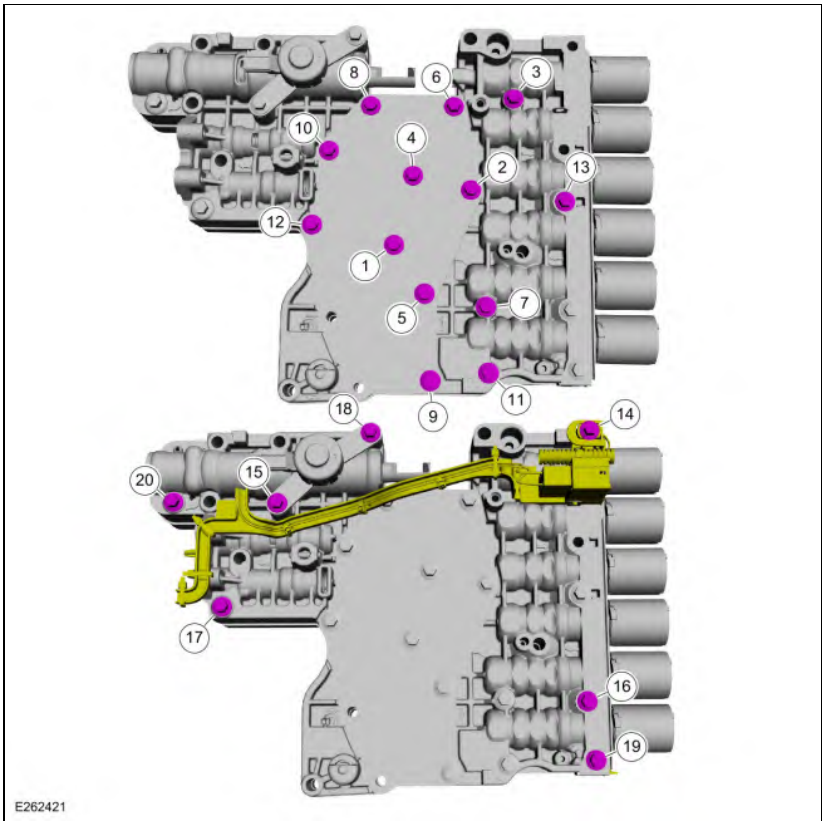

mcx30.com




33. Push the internal wiring harness into the retainer.

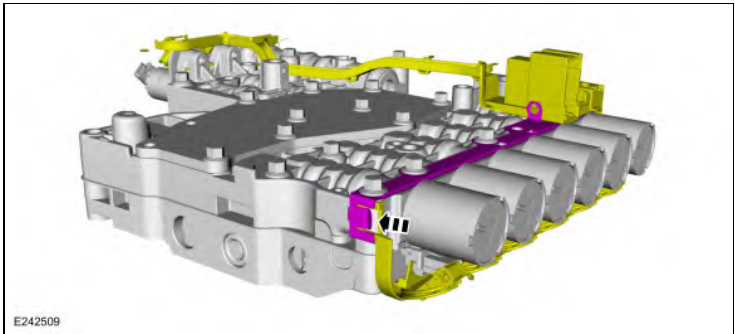

34.


Install the TFT sensor.

1. Position the TFT sensor in the main control valve body.
2. Rotate the TFT sensor counter clockwise until the plastic tab locks into place.

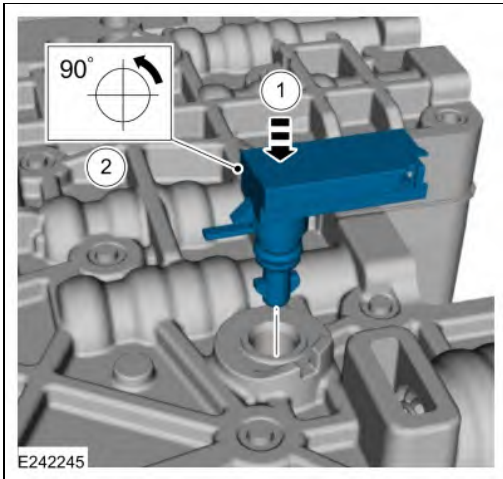



35.

- Connect the internal wiring harness electrical connectors.
- Slide the plastic lock to the locked position.

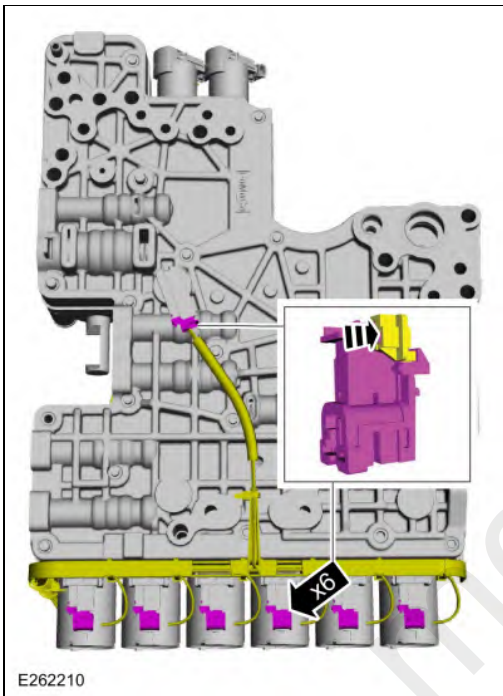


36. **NOTICE:** Solenoids are calibrated from the factory and are not all the same. To replace a solenoid, match the replacement solenoid type (normally high/normally low) and the band number with the original solenoid or harsh shifts or damage to the transmission can occur.

 
If new solenoids are needed, identify which type (normally high/normally low) of solenoid it is and the solenoid band number.

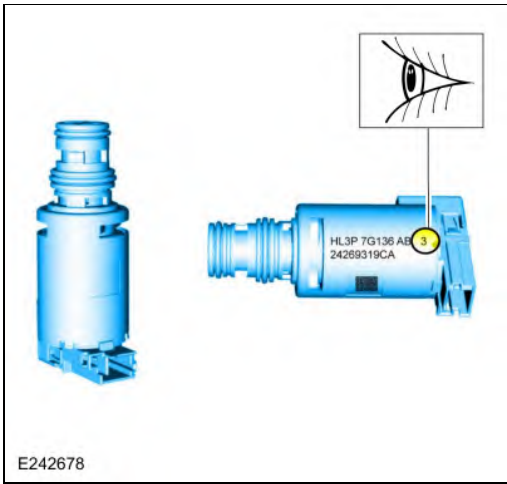


- 37.
1. Inspect the solenoid screens for debris that may restrict fluid flow
 2. Lubricate the solenoid O-ring seals.
- Material:* Motorcraft® MERCON® ULV Automatic Transmission Fluid / XT-12-QULV (WSS-M2C949-A,) (MERCON® ULV)

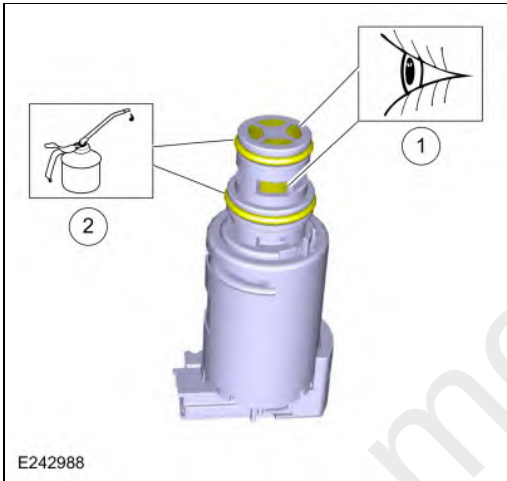


38. Install the TCC solenoid, LPC solenoid, solenoid retaining plate and the new bolts.
- Torque:* 80 lb.in (9 Nm)

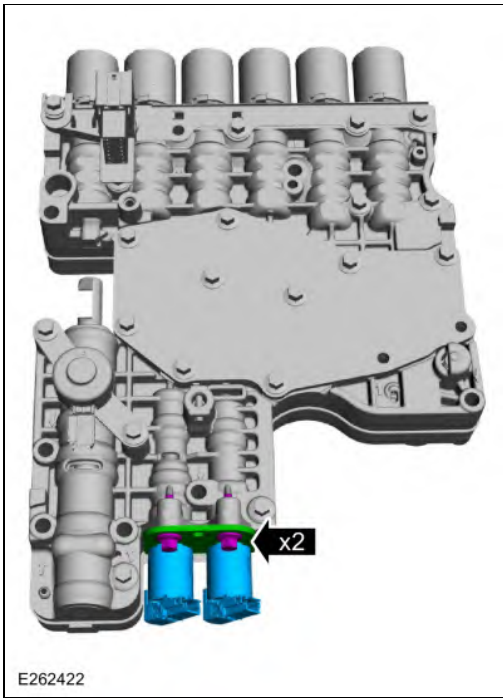

39. Connect the internal wiring harness.
1. Slide the plastic locks to the locked position.
 2. Connect the internal wiring harness retainer.

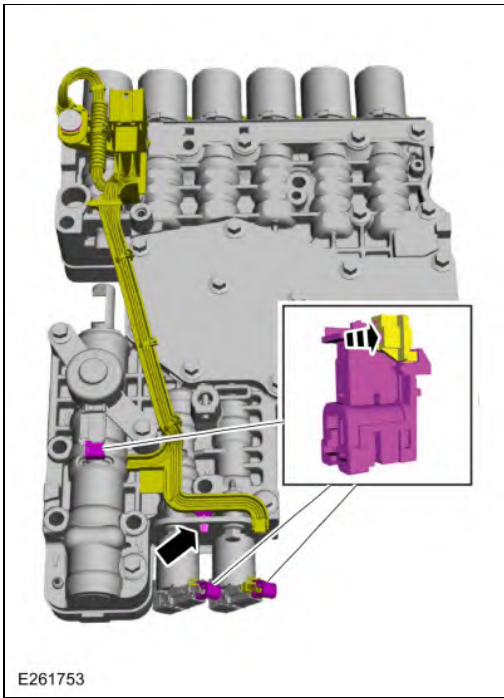

40. Install the main control assembly to transmission fluid pump seal.

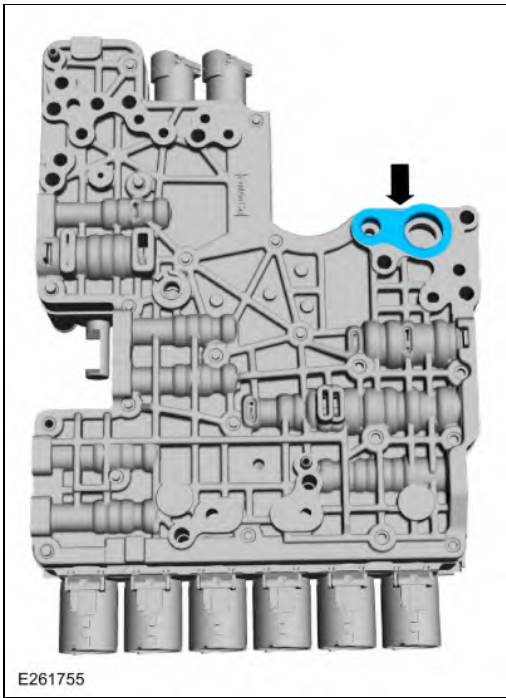

E261755



mcx30.com

Main Control Valve Body - Vehicles With: Column Shift

Special Tool(s) / General Equipment



307-299
Alignment Pins, Valve Body
TKIT-1994-LMH/MH2
TKIT-1994-F
TKIT-1994-FLM/FM

Materials


Name	Specification
Motorcraft® MERCON® ULV Automatic Transmission Fluid XT-12-ULV	WSS-M2C494-A


1. For solenoid and valve identification.
Refer to: Main Control Valve Body (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80) .
2. Disconnect the internal wiring harness.

1. Slide the plastic lock to the unlock position. While pressing the plastic tab, disconnect the electrical connector.

2. Remove internal wiring harness retaining bolt.

3. Disconnect the internal wiring harness retainer.

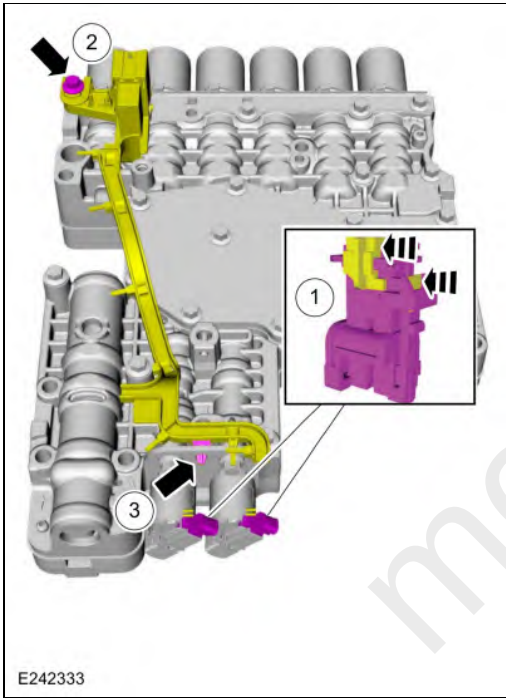


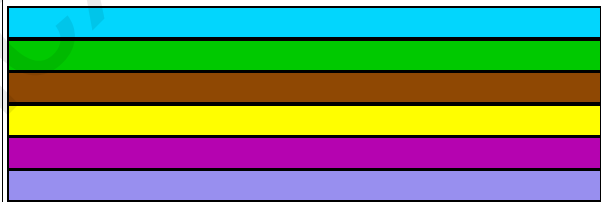


E242333

3. Disconnect the internal wiring harness electrical connectors.

• Slide the plastic lock to the unlock position. While pressing the plastic tab, disconnect the electrical connector.

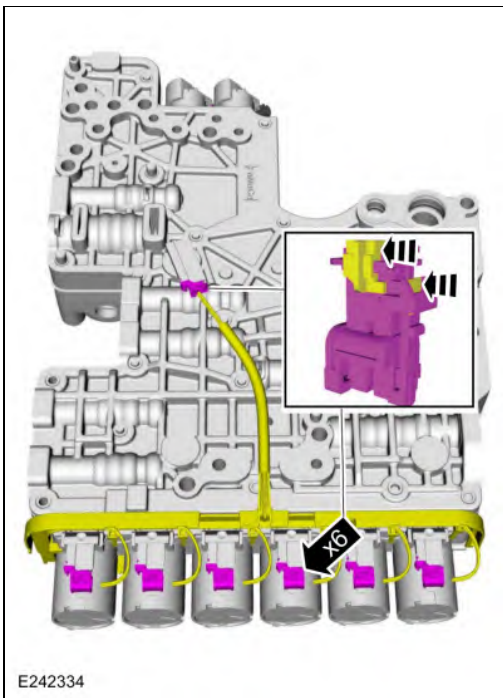

4. Release the retainer and remove the internal wiring harness assembly.

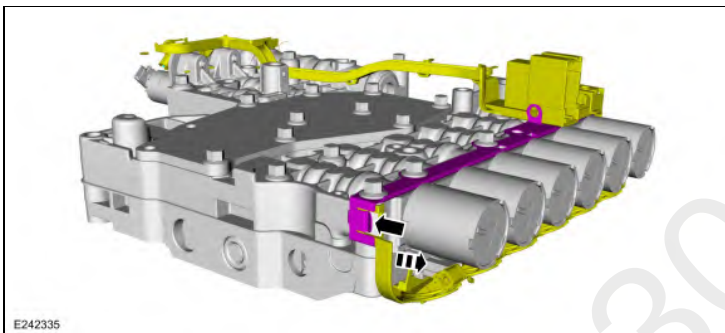

5. Remove the TFT sensor.
1. Lift plastic tab.
 2. Rotate the TFT sensor clockwise.
 3. Remove the TFT sensor.