



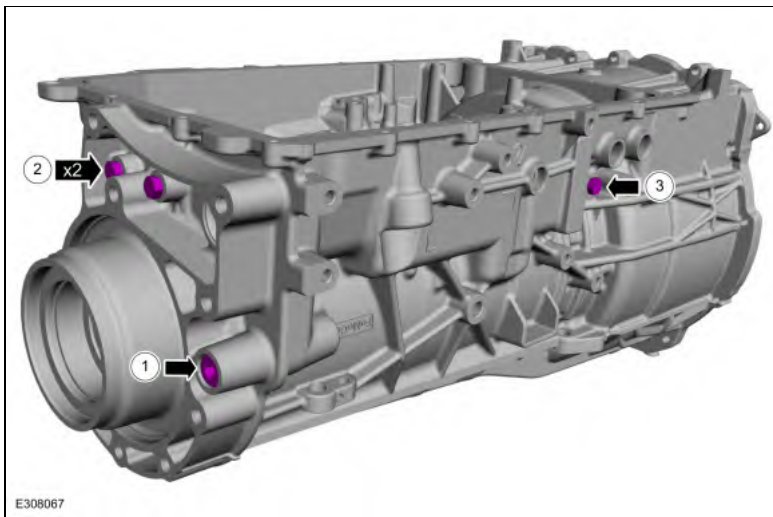

4. Install new park pawl actuator rod sleeve seals and lubricate them with petroleum jelly.

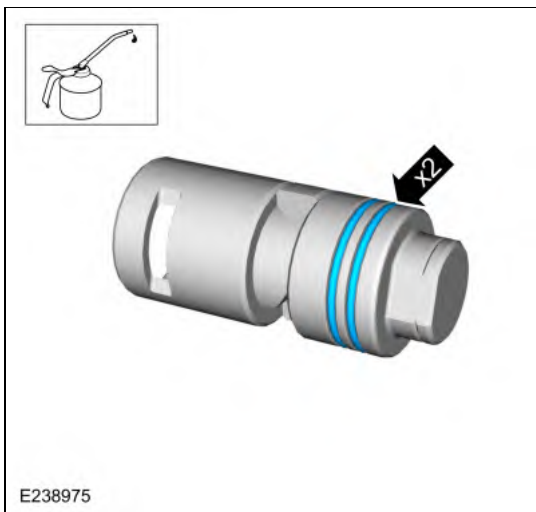

5.
 1. Position the park pawl towards the inside of the transmission case.
 2. **NOTICE:** Do not slide the park pawl actuator rod sleeve to far into the transmission case or the inner seal will be damaged.
Slide the park pawl actuator rod sleeve into the transmission case.
 3. **NOTE:** Align the roll pin seam to the inside of the transmission.
Using the special tool install the roll pin to the correct depth.
Use Special Service Tool: 307-745 Installer, Park Sleeve Roll Pin.

