


External Controls - Component Location

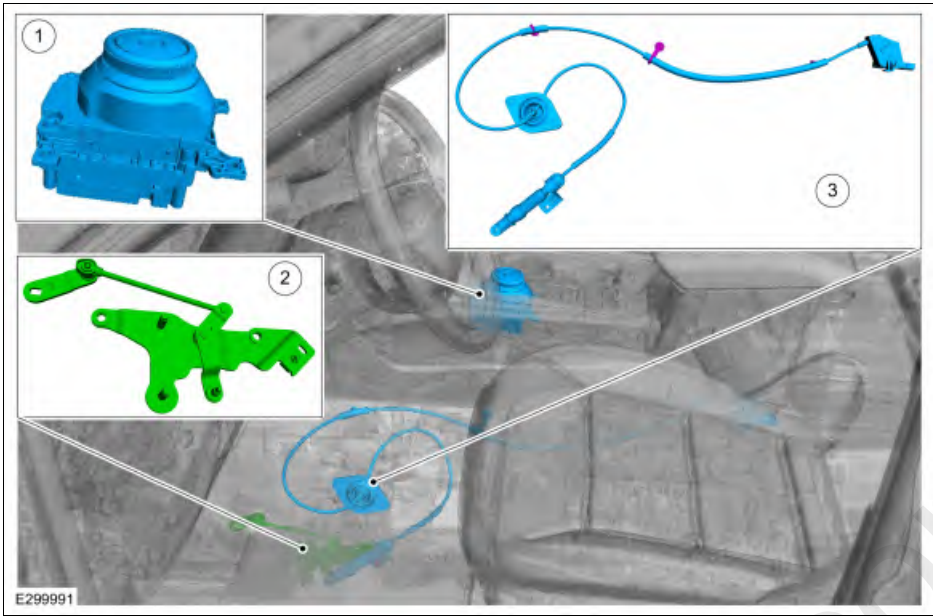

Item	Description
1	GSM
2	Transmission park manual release bracket and lever assembly
3	Transmission park manual release cable