



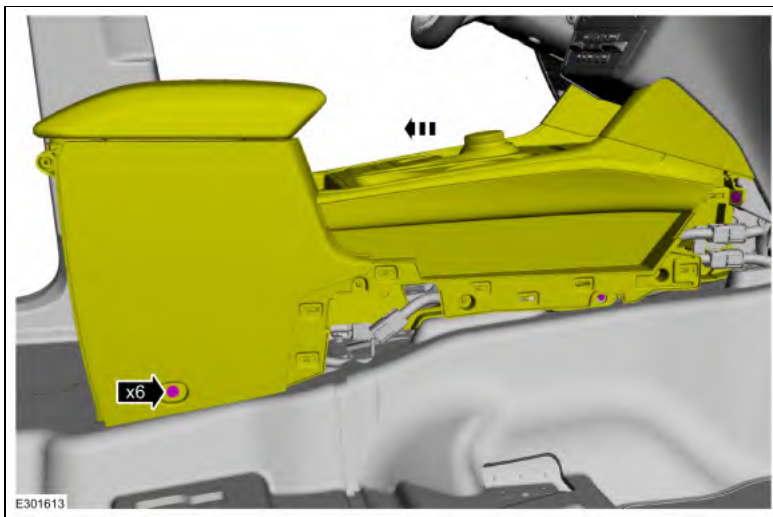

6. Open the console door.

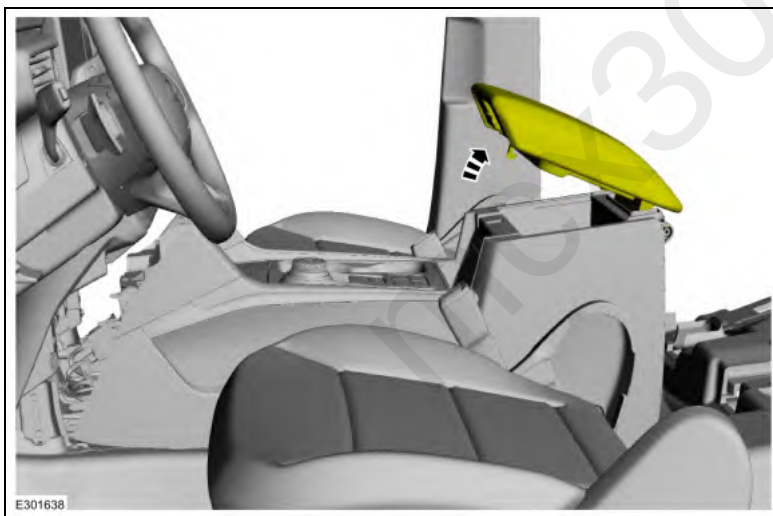


7. Release the clips, detach the console top panel, disconnect the electrical connectors and remove the console top panel.

Transmission Park Manual Release Cable


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in N, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the transmission park manual release cable bracket bolt.
Torque: 89 lb.in (10 Nm)

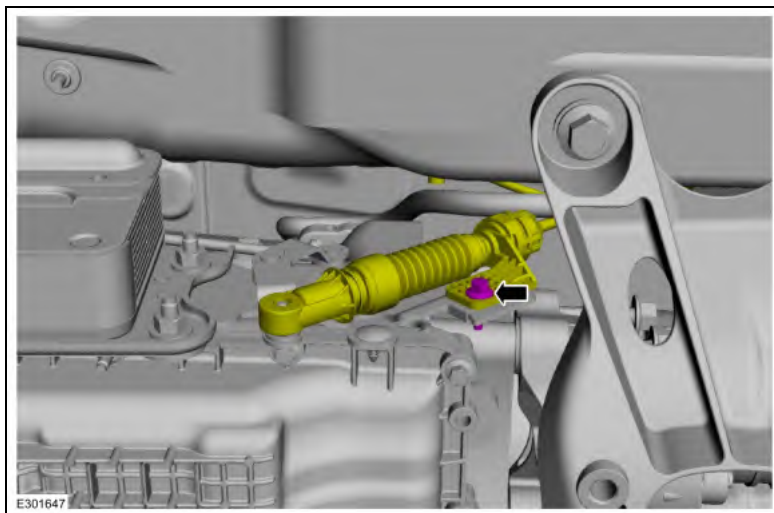


3. Disconnect the transmission park manual release cable from the transmission lever and bracket assembly.

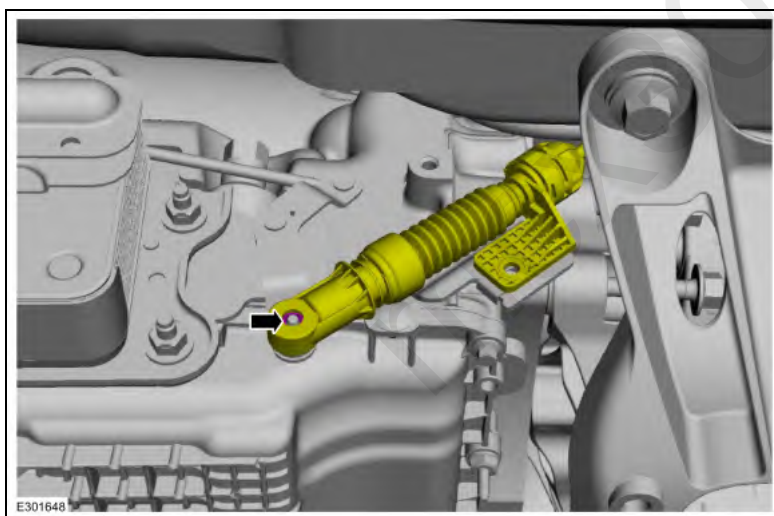

4. Remove the transmission park manual release cable grommet nuts.
Torque: 89 lb.in (10 Nm)

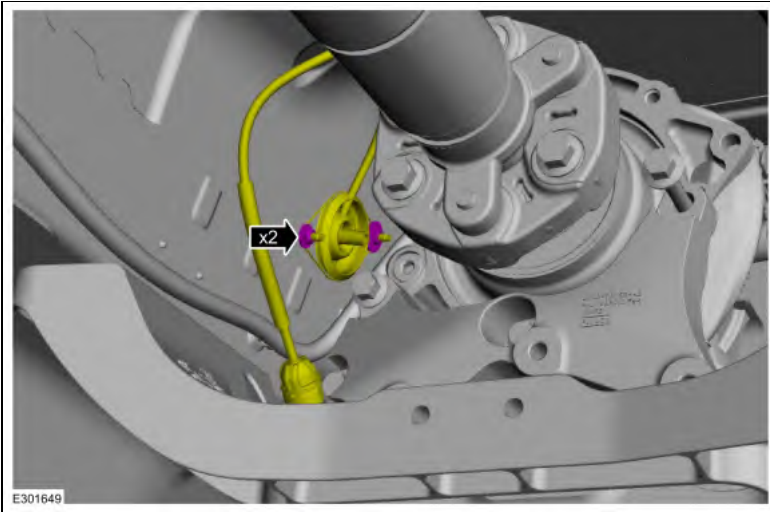

5. Remove the transmission park manual release cable lever bolts.
Torque: 53 lb.in (6 Nm)

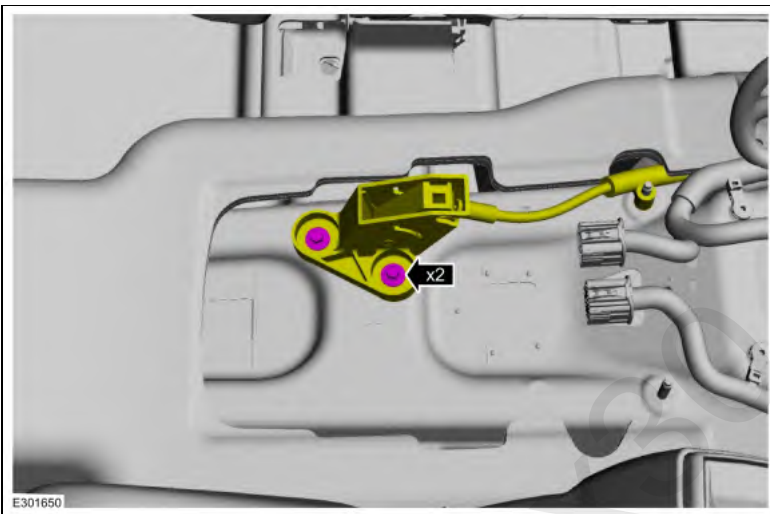

6. Remove the pushpin and position the carpet aside.