

 
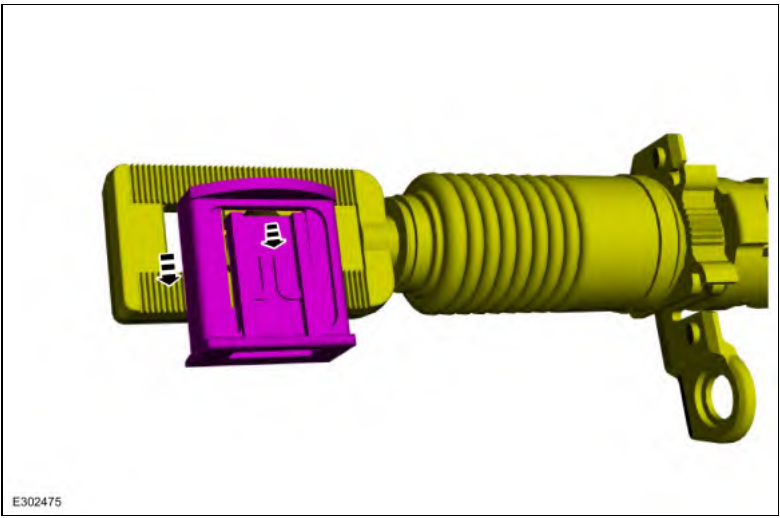


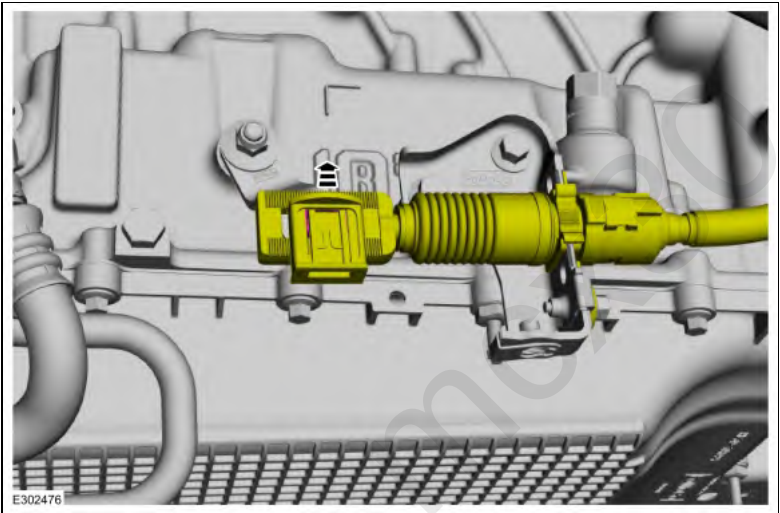

7. Connect the selector lever cable to the transmission manual lever.



 

8. Lock the selector lever cable adjuster.

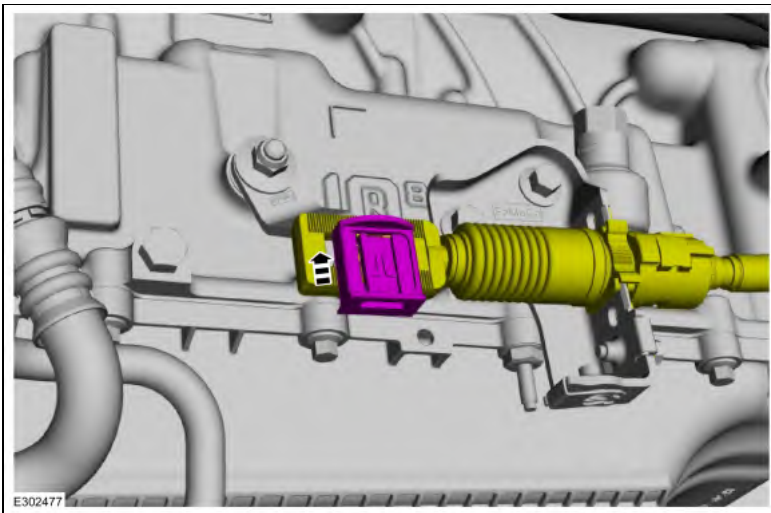

9. Verify the vehicle starts in P and N only and that the reverse lamps illuminate in R.

10. Install the heat shield and the bolts.

Torque: 89 lb.in (10 Nm)

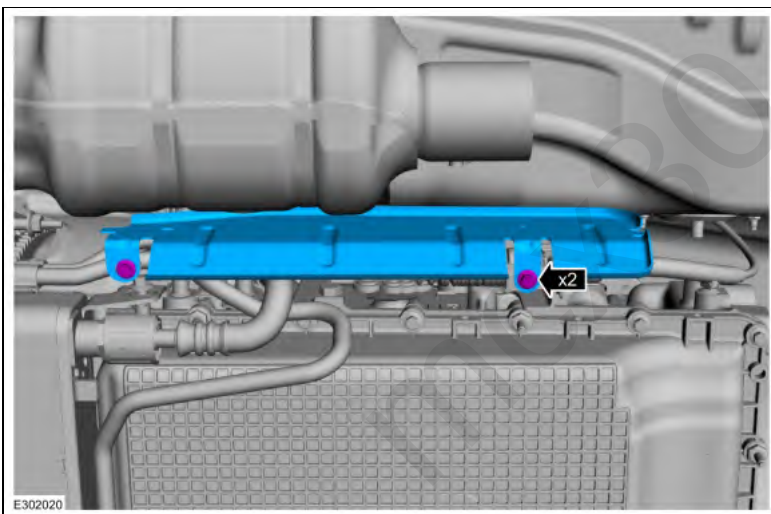


Removal and Installation

Brake Shift Interlock Actuator


Removal

NOTE: Removal steps in this procedure may contain installation details.

- 1. Remove the steering column shrouds.
Refer to: Steering Column Shrouds (501-05 Interior Trim and Ornamentation, Removal and Installation).
- 2. Disconnect the brake shift interlock actuator electrical connector.

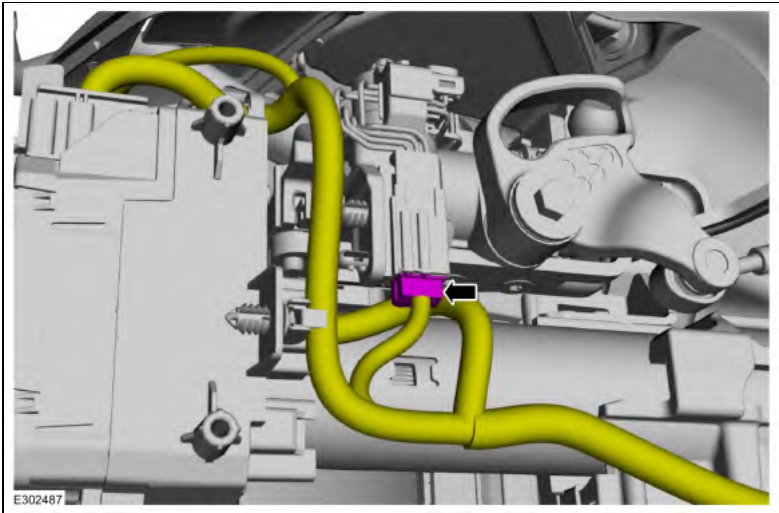

- 3. Detach the electrical connector retainer.

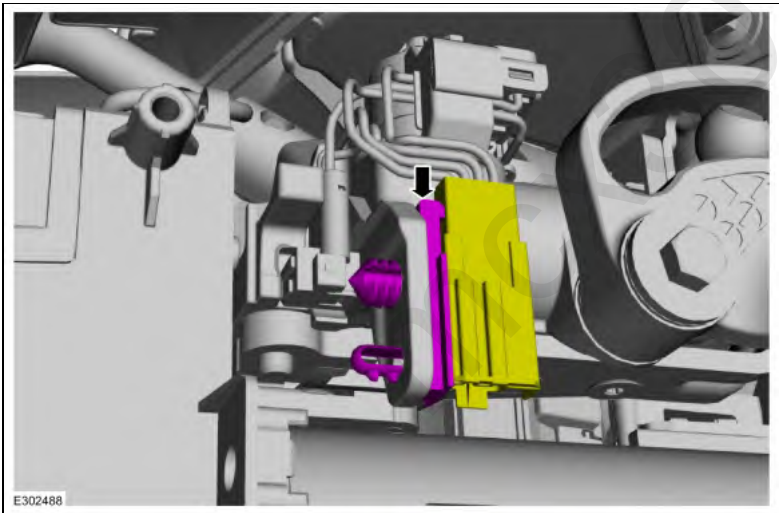

- 4. Remove the brake shift interlock actuator bolt.