



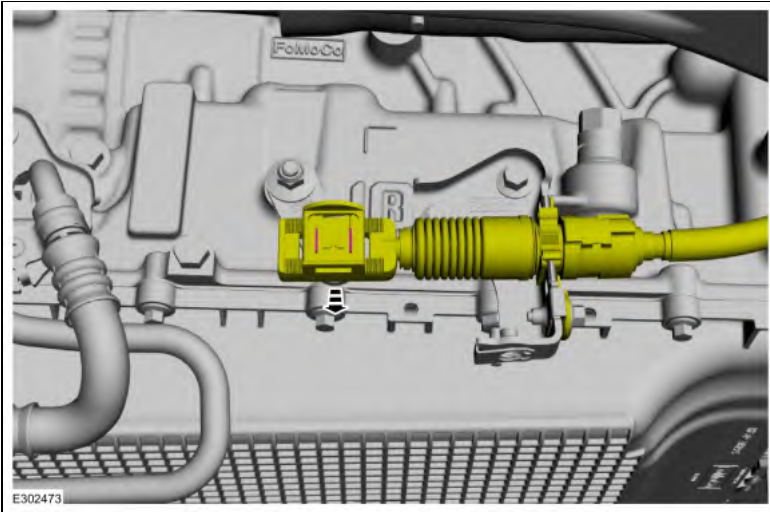

- 5.
- Position the transmission manual lever in D
- Rotate the manual lever clockwise until it stops.
 - Rotate the manual lever counterclockwise 3 detents.

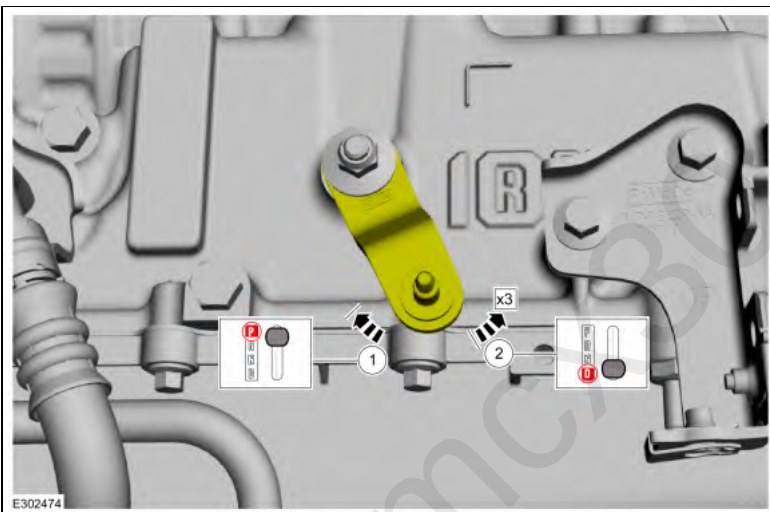

6. Gently pry the center of the lock outward and slide the lock down to unlock the adjuster.