




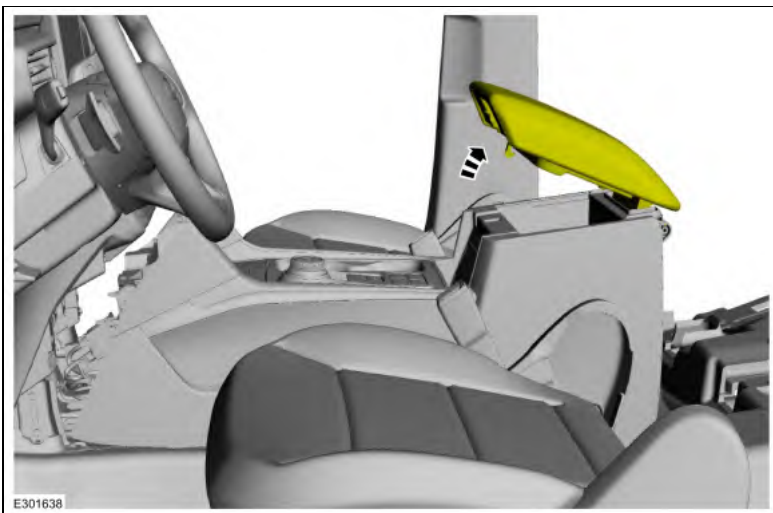

8. Release the clips, detach the console top panel, disconnect the electrical connectors and remove the console top panel.

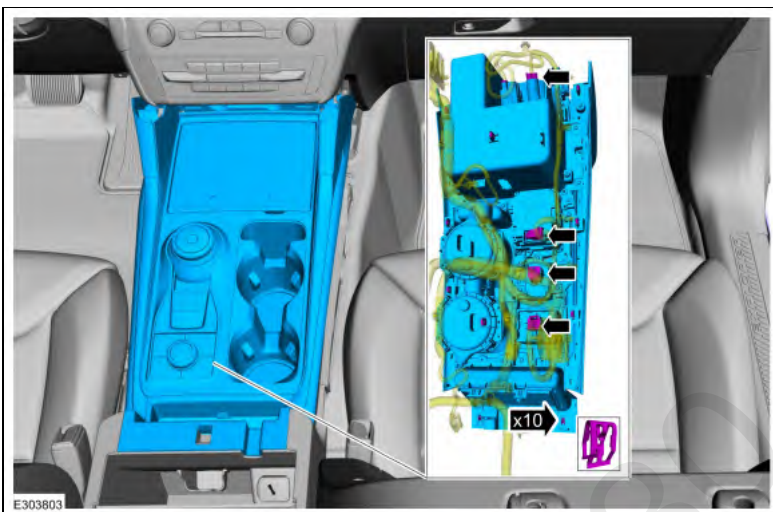

9. Remove the module.
 1. Release the tabs.
 2. Remove the switch.

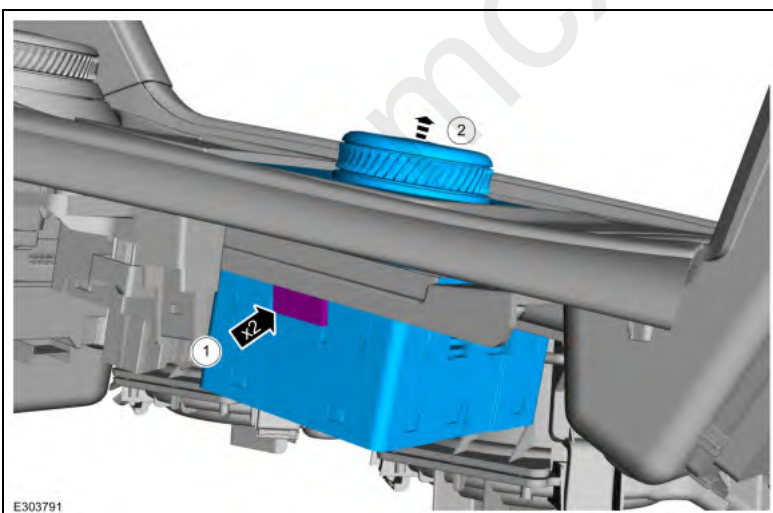


Selectable Drive Mode Switch (Console Button) for

NOTE: Move the front seats forward and rearward as necessary to access floor console components.


10. Release the clips and remove the RH floor console side trim panel.




12. Release the clips and remove the LH floor console side trim panel.

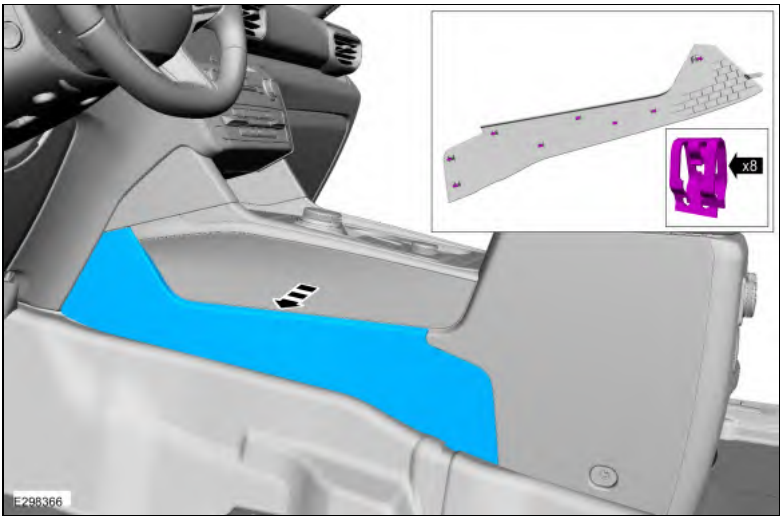


13. Disconnect the LH floor console electrical connectors.

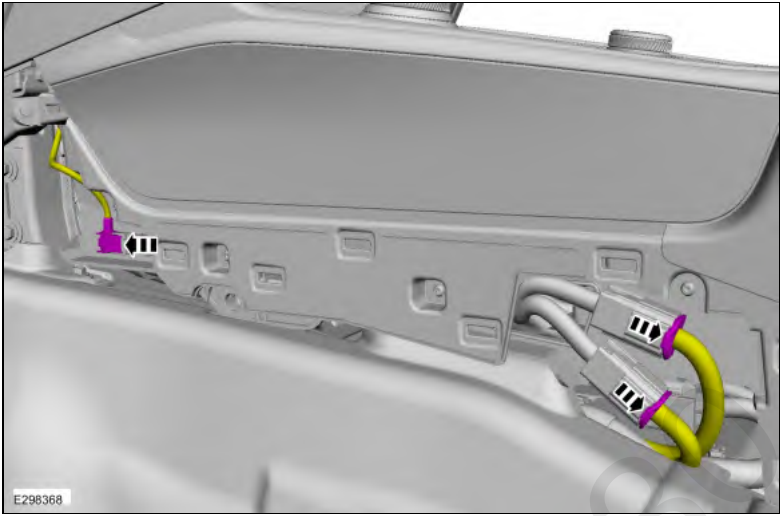


14. Remove the bolts and position the floor console rearward.

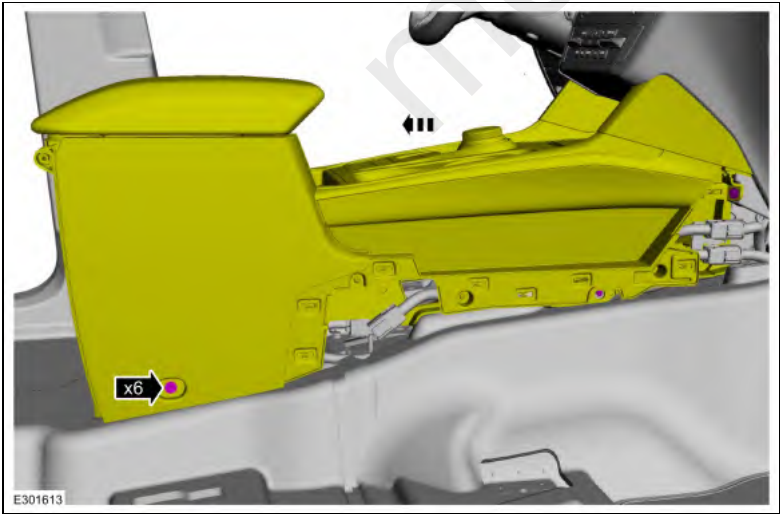


15. Open the console door.

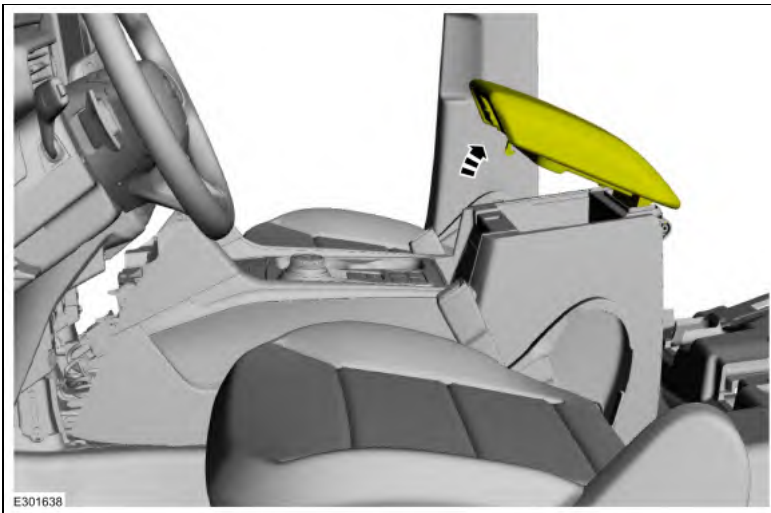

16. Release the clips, detach the console top panel, disconnect the electrical connectors and remove the console top panel.

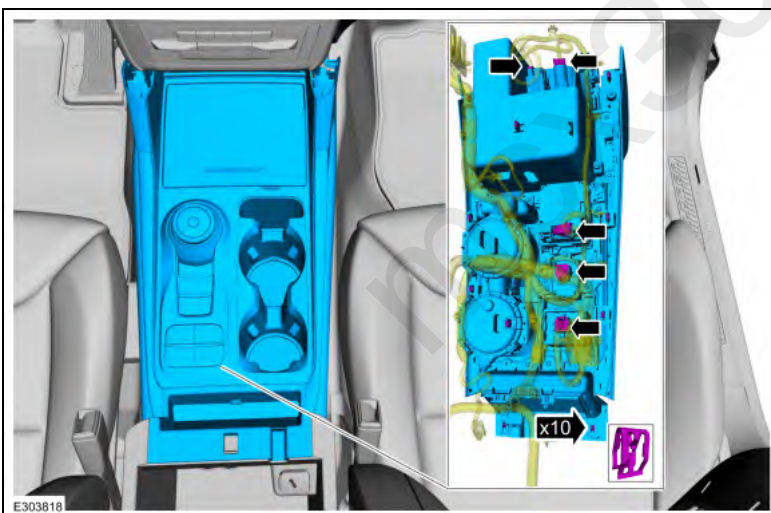

17. Remove the module.
1. Release the tabs.
 2. Remove the switch.

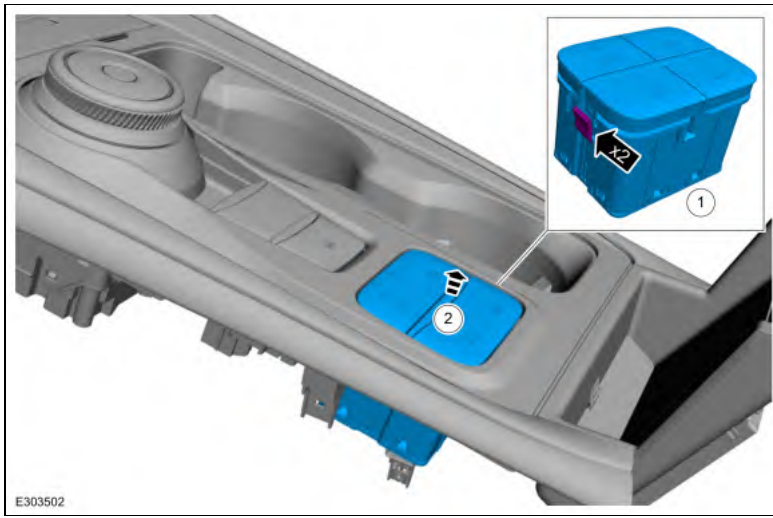

Installation

- 1. To install, reverse the removal procedure.

Transfer Case Clutch Actuator


Materials

Name	Specification
Motorcraft® MERCON® LV Automatic Transmission Fluid XT-10-QLVC	WSS-M2C938-A MERCON® LV,


Removal

NOTE: Removal steps in this procedure may contain installation details.


- With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
- Remove the transfer case heat shield (if equipped).

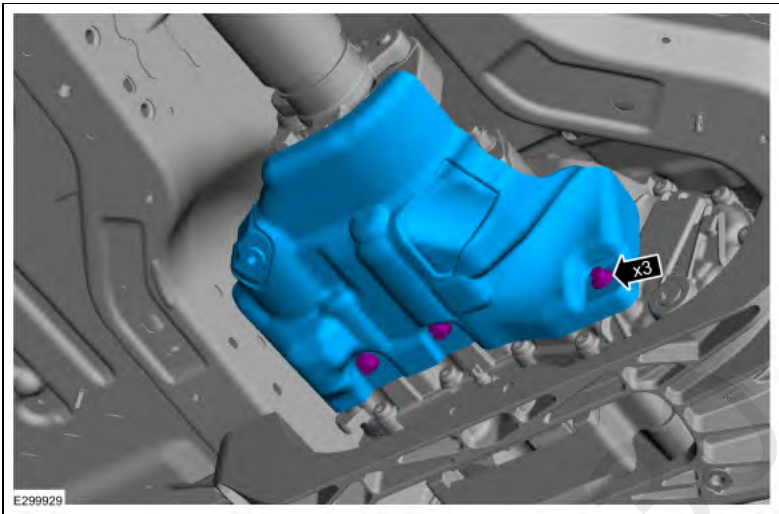

- Disconnect the harness connector.

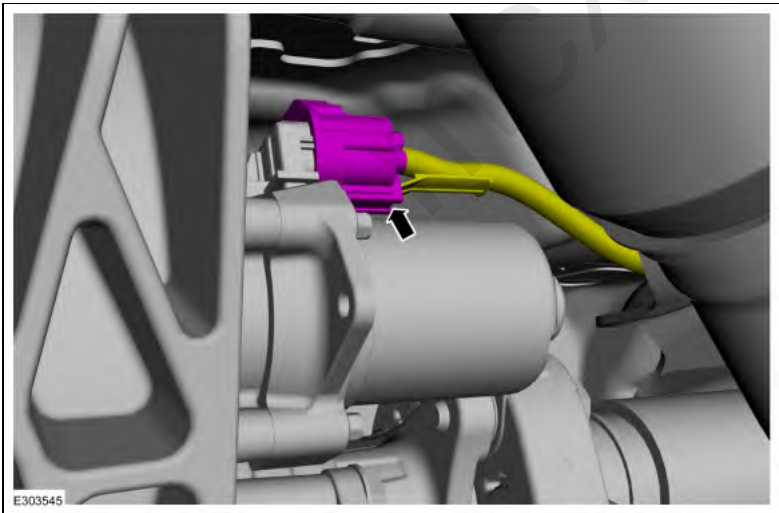


- Remove the mounting bolts and the transfer case clutch actuator.

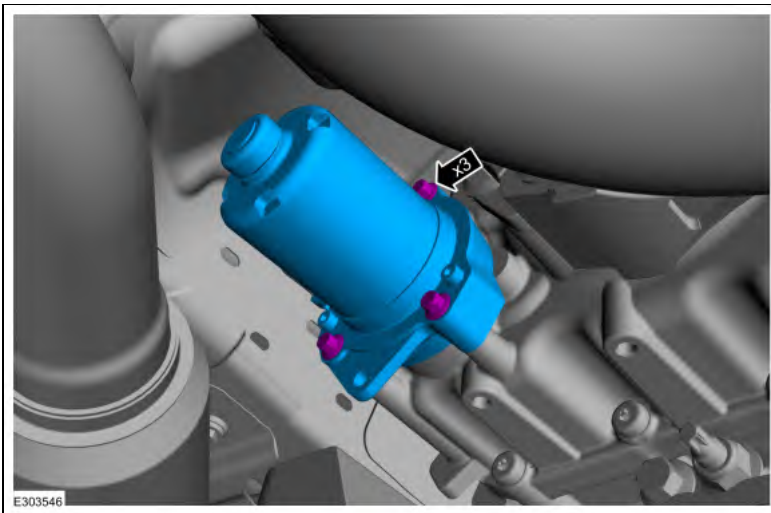

5. **NOTE:** This step is not necessary when installing a new component.

Remove and discard the transfer case clutch actuator O-ring seal.

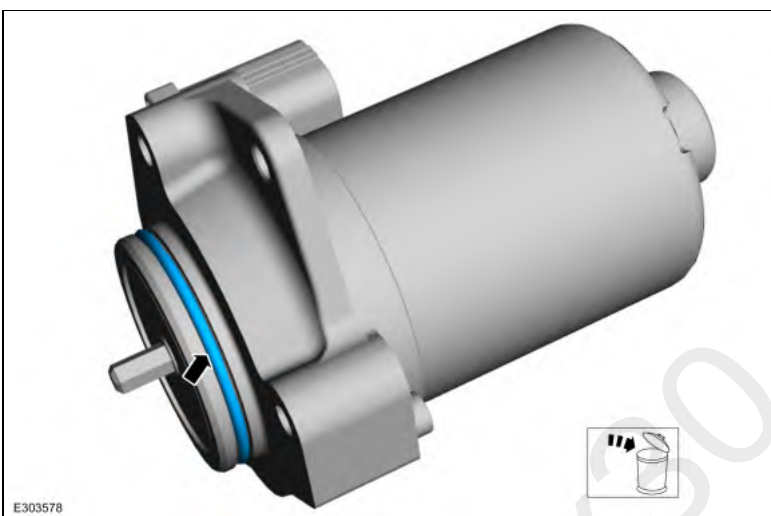

Installation

1. **NOTE:** This step is not necessary when installing a new transfer case clutch actuator.

NOTE: Lubricate the "O" ring surface with oil before installing.

Insert the "O"-ring seal on the transfer case clutch actuator.

Material: Motorcraft® MERCON® LV Automatic Transmission Fluid / XT-10-QLVC (WSS-M2C938-A) (MERCON® LV,)