


1	Transfer case input shaft seal
1	Transfer case oil seal
1	Dust cover

Output Shaft internal components

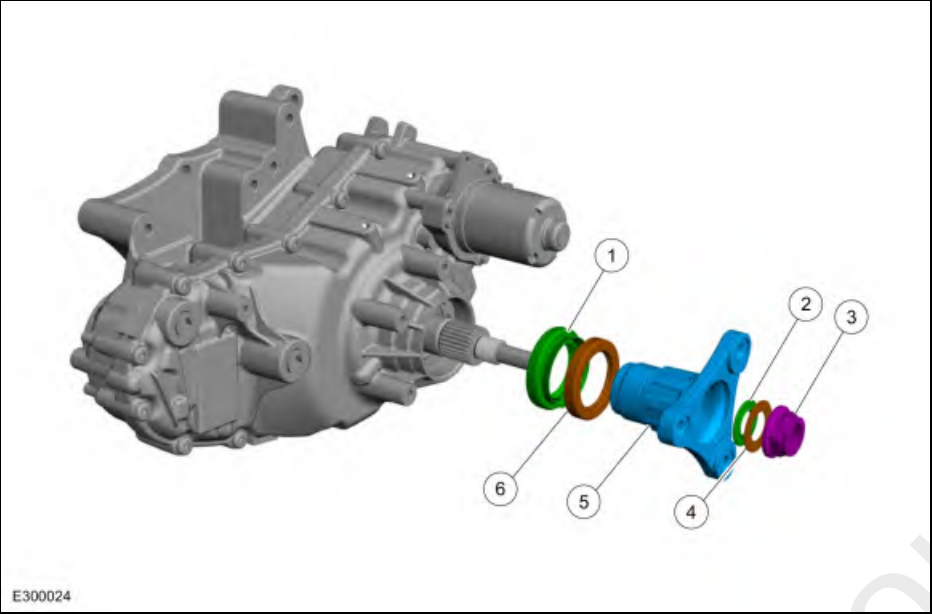

Item	Description
1	Output shaft seal
2	Ring seal
3	Flange lock nut
4	Spacer
5	Output shaft flange
6	Dust cover