



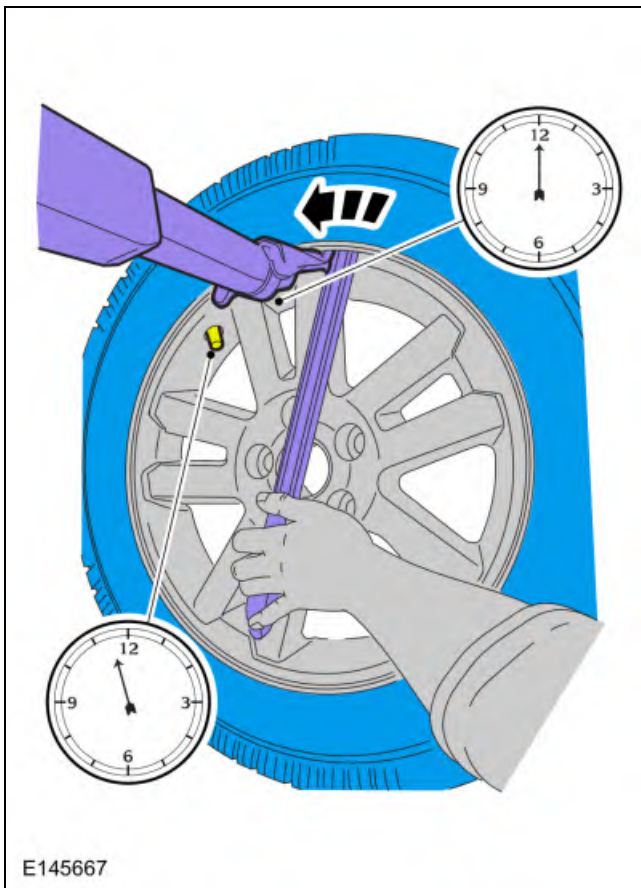

5. Reset the wheel and tire assembly on the turntable of the tire machine with the valve stem at the 11:30 position and the machine arm at the 12 o'clock position and dismount the inner bead from the wheel.
6. **NOTE:** A new valve stem must be installed whenever a new tire or wheel is installed.
 1. Remove and discard the TPMS sensor-to-valve stem screw.
 2. Separate the TPMS sensor from the valve stem.

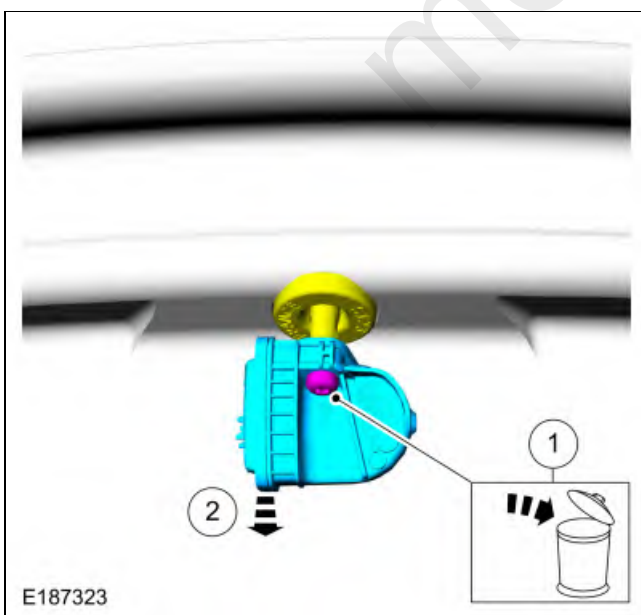

7. **NOTICE:** Use care not to damage the wheel surface when removing the valve stem.

Using a suitable valve stem remover/installer, remove and discard the valve stem.
 Use the General Equipment: Wooden Block