

| Condition                                                                                   | Possible Sources                                                                                                                                            | Actions                                                                                                                                          |
|---------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| A module does not respond to the scan tool                                                  | <ul style="list-style-type: none"> <li>• Fuse</li> <li>• Wiring, terminals or connectors</li> <li>• Communication network concern</li> <li>• BCM</li> </ul> | REFER to: Communications Network (418-00 Module Communications Network, Diagnosis and Testing).                                                  |
| TPMS warning indicator is on continuously and the message center displays LOW TIRE PRESSURE | Refer to the Pinpoint Test                                                                                                                                  | <a href="#">GO to Pinpoint Test E</a>                                                                                                            |
| The BCM will not enter TPMS sensor training mode                                            | Refer to the Pinpoint Test                                                                                                                                  | <a href="#">GO to Pinpoint Test F</a>                                                                                                            |
| The TPMS warning indicator is never or always on                                            | <ul style="list-style-type: none"> <li>• Communication network concern</li> <li>• IPC</li> </ul>                                                            | REFER to: Instrumentation, Message Center and Warning Chimes (413-01 Instrumentation, Message Center and Warning Chimes, Diagnosis and Testing). |
| One or more TPMS sensors do not train and no Diagnostic Trouble Codes (DTCs) are present    | Refer to the Pinpoint Test                                                                                                                                  | <a href="#">GO to Pinpoint Test G</a>                                                                                                            |
| The IPC displays dashes instead of actual tire pressure information                         | <ul style="list-style-type: none"> <li>• TPMS sensor faulted</li> <li>• BCM has been flashed or reconfigured</li> </ul>                                     | REFER to: Tire Pressure Monitoring System (TPMS) Sensor Activation (204-04B Tire Pressure Monitoring System (TPMS), General Procedures).         |

## Pinpoint Tests

☐ [PINPOINT TEST A : B1182:00](#)

☐ [PINPOINT TEST B : B124D:02](#)

☐ [PINPOINT TEST C : B1251:00](#)

☐ [PINPOINT TEST D : DIAGNOSING RADIO FREQUENCY INTERFERENCE FAULTS](#)

☐ [PINPOINT TEST E : TPMS \(TIRE PRESSURE MONITORING SYSTEM\) WARNING INDICATOR IS ON CONTINUOUSLY AND THE MESSAGE CENTER DISPLAYS LOW TIRE PRESSURE](#)

☐ [PINPOINT TEST F : THE BCM \(BODY CONTROL MODULE\) WILL NOT ENTER TPMS \(TIRE PRESSURE MONITORING SYSTEM\) SENSOR TRAINING MODE](#)

☐ [PINPOINT TEST G : ONE OR MORE TPMS \(TIRE PRESSURE MONITORING SYSTEM\) SENSORS DO NOT TRAIN AND NO DIAGNOSTIC TROUBLE CODES \(DTCs\) ARE PRESENT](#)

☐ [PINPOINT TEST H : U0146:00](#)

☐ [PINPOINT TEST I : U1A00:00](#)