


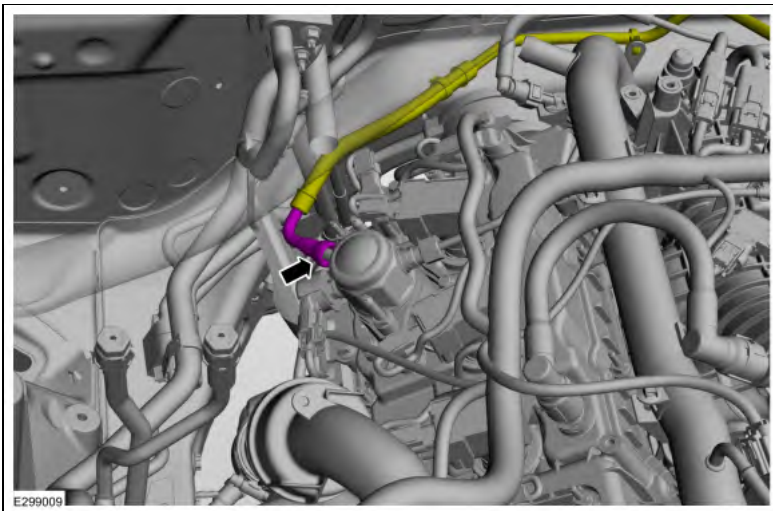

5. Install the Fuel Pressure Test Adapter and the Fuel Pressure Test Kit between the fuel tube and the fuel jumper tube.
Use Special Service Tool: 310-D009 (D95L-7211-A) Fuel Pressure Test Kit.



6. **NOTE:** The fuel pump control module electrical connector was previously disconnected to release the fuel system pressure and must be reconnected to test the fuel system pressure.

Reconnect the fuel pump control module electrical connector.

7. Reconnect the battery ground cable.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
8. **NOTE:** Carry out a Key ON Engine OFF (KOEO) visual inspection for fuel leaks prior to completing the fuel system pressure test.

NOTE: After completion of the fuel system pressure test, open the drain valve on the Fuel Pressure Test Kit and release any residual fuel into a suitable container prior to removing the tool.

Test the fuel system pressure to make sure it is within the specified range.
Refer to: Specifications (310-00B Fuel System - General Information - 3.0L EcoBoost, Specifications).