


Fuel Lines


Removal

NOTE: Removal steps in this procedure may contain installation steps.


1. Refer to: Gasoline and Gasoline-Ethanol Fuel Systems Health and Safety Precautions (100-00 General Information, Description and Operation).
2. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
3. Release the fuel system pressure.
Refer to: Fuel System Pressure Release (310-00A Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).
4. Remove the quick release couplings and detach the retainer clip.
Refer to: Quick Release Coupling (310-00A) .

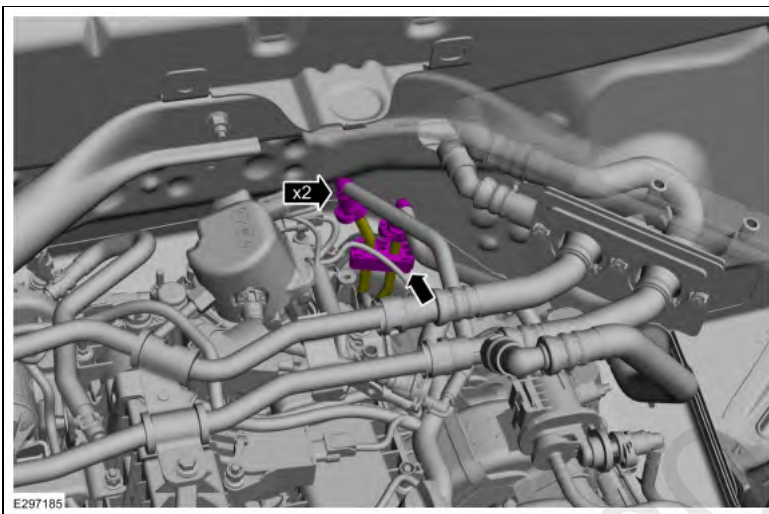

5.
 - Remove the nuts and bolts.
Torque: 55 lb.in (6.2 Nm)
 - Remove the retainer and air deflector.

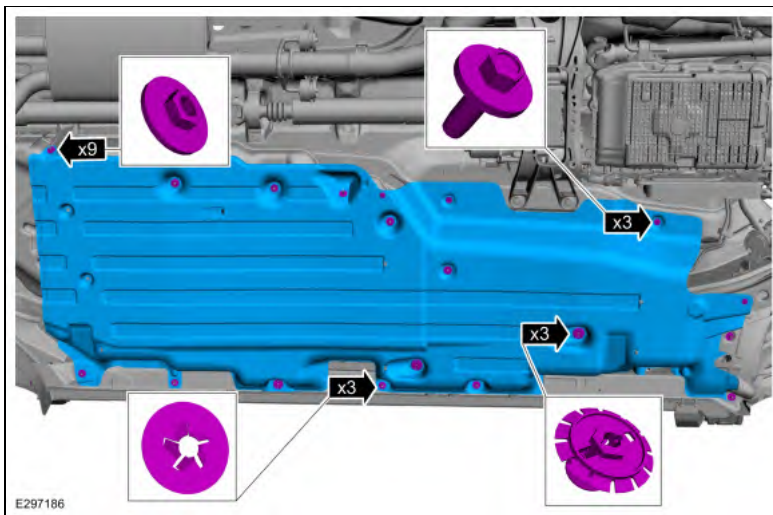

6. Remove the retainer clips and disconnect the electrical connector.

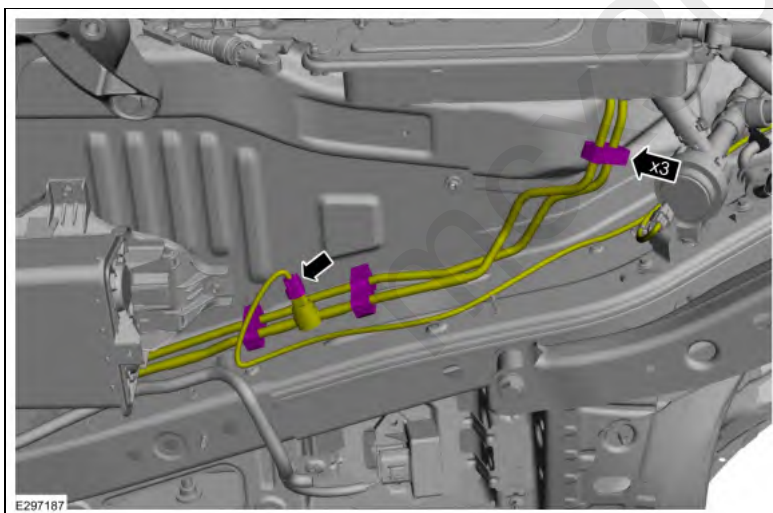

7. Remove the quick release couplings and detach the retainer clips.
Refer to: Quick Release Coupling (310-00A) .