



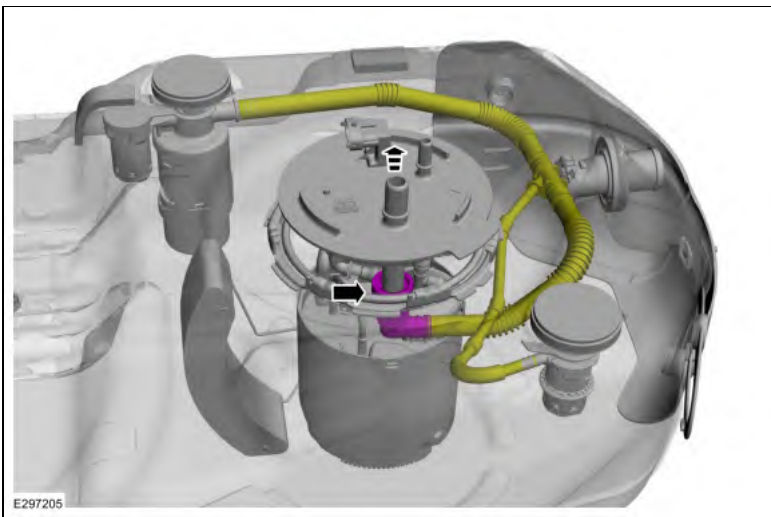

7. NOTICE: Take extra care not to damage the fuel tank level sensor and float arm.

Remove and discard the O-ring.

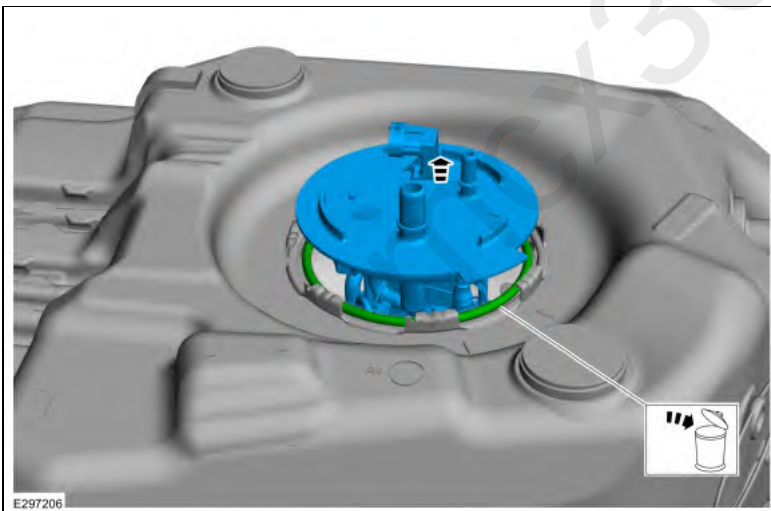


Installation

1. NOTICE: Take extra care not to damage the fuel tank level sensor and float arm.


Reconnect the vapor line.

Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS)) .

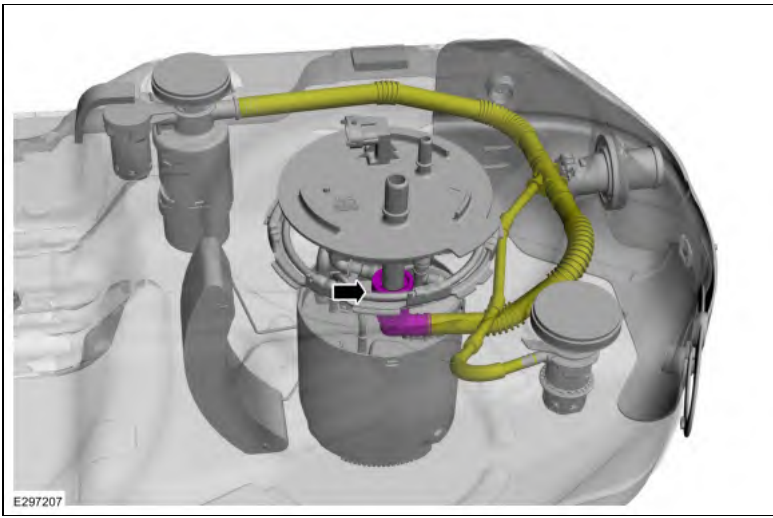


2. **NOTE:** Use new O-Ring Seal.

NOTE: Make sure that the seal is correctly located.

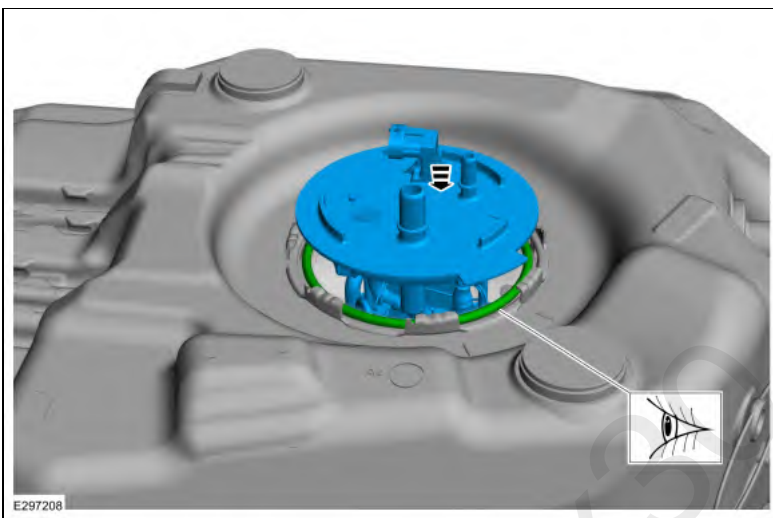

3. **NOTE:** Make sure that the location marks are aligned.

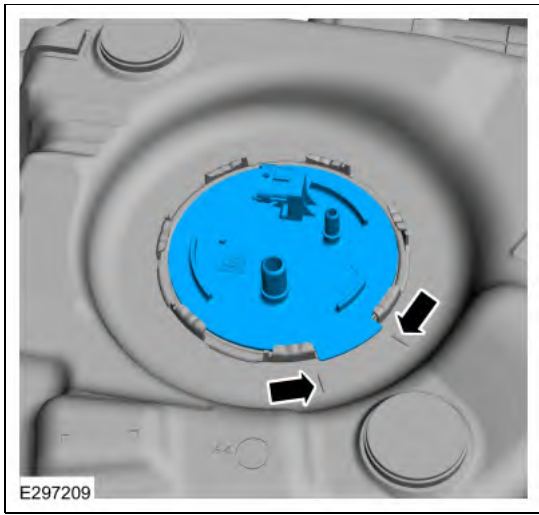

4. To install, reverse the removal procedure.


Fuel Tank Filler Pipe

Removal


NOTE: Removal steps in this procedure may contain installation steps.

1. Disconnect the battery.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
2. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
3. Remove the LHR wheel and tire.


Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).
4.
 - Remove the nuts.
Torque: 22 lb.in (2.5 Nm)
 - Remove the screws.
Torque: 13 lb.in (1.5 Nm)
 - Remove the bolt.
Torque: 89 lb.in (10 Nm)
 - Remove the LHR wheel liner.

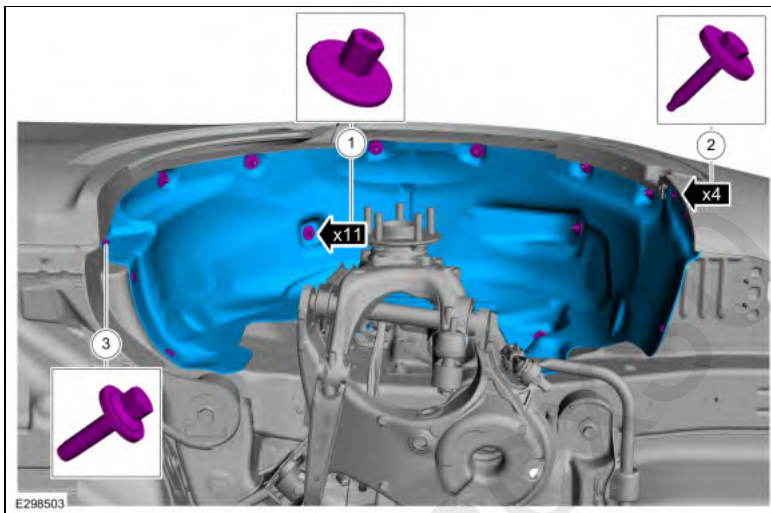

5. Loosen the clamp and disconnect the hose. Position the hose aside.
Torque: 28 lb.in (3.2 Nm)

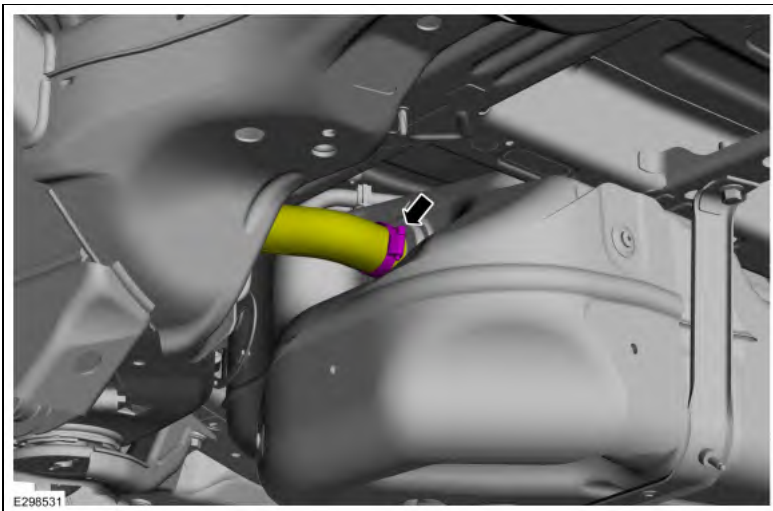

- 6.
- Remove the quick release couplings.
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS)).

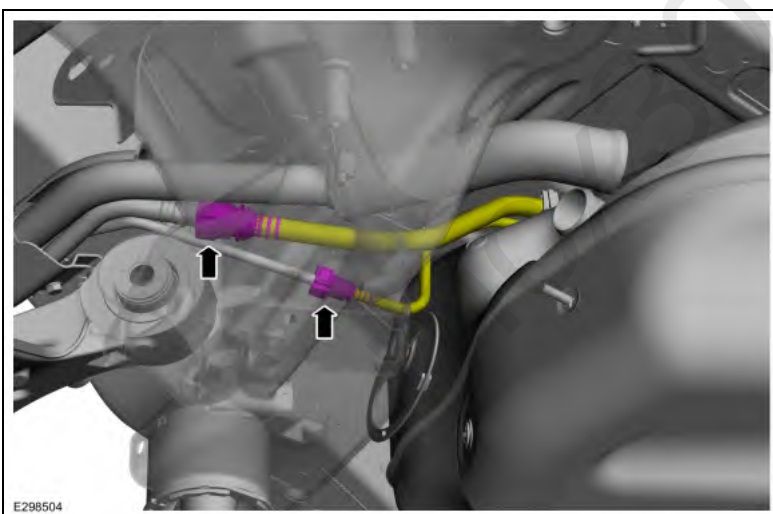

7. **NOTE:** Use New bolts.

- Detach the clip and position the drain hose aside.
- Remove and discard the bolts.
Torque: 80 lb.in (9 Nm)
- Remove the fuel tank filler pipe from the vehicle.