


Description and Operation

## Climate Control System - Component Location

### Instrument panel

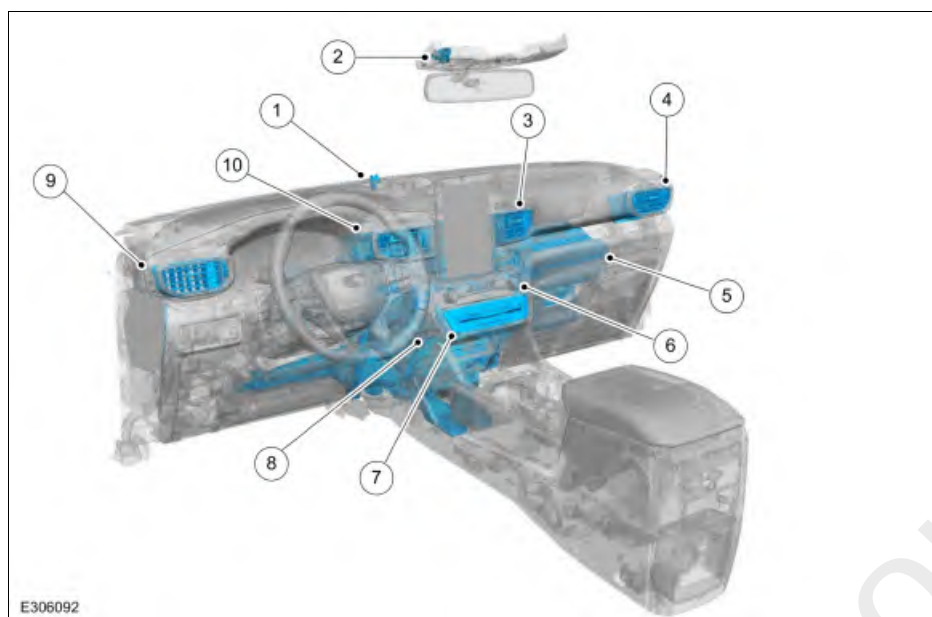

| Item | Description                                              |
|------|----------------------------------------------------------|
| 1    | Sunload sensor                                           |
| 2    | In-vehicle temperature & humidity sensor                 |
| 3    | Center registers                                         |
| 4    | Passenger side register                                  |
| 5    | Cabin air filter                                         |
| 6    | Passenger side register air discharge temperature sensor |
| 7    | HVAC control module                                      |
| 8    | Climate control housing                                  |
| 9    | Driver side register                                     |
| 10   | Driver side register air discharge temperature sensor    |

### Climate control housing