

13	Evaporator temperature sensor
14	HVAC control module
15	Air distribution door actuator
16	Driver side temperature door actuator
17	Passenger side temperature door actuator
18	Air inlet door actuator
19	Blower motor relay
20	Blower motor control module
21	FCIMB
22	Driver side register air discharge temperature sensor
23	Passenger side register air discharge temperature sensor
24	Driver side footwell air discharge temperature sensor
25	Ambient air quality sensor (if equipped)
26	Passenger side footwell air discharge temperature sensor

Network Message Chart

Module Network Input Messages - ACCM

Broadcast Message	Originating Module	Message Purpose
Ambient air temperature filtered	PCM \ PCM_HEV	This message contains the climate control system controls ambient air temperature information.

Module Network Input Messages - APIM

Broadcast Message	Originating Module	Message Purpose
Climate control button status	HVAC \ RCCM	This message contains the climate control button status.
Climate control temperature display	HVAC \ RCCM	This message contains the HVAC temperature setting.
Front blower indicator	HVAC \ RCCM	This message contains the HVAC blower motor setting for the touch screen display.
Temperature unit selection	HVAC control module \ RCCM	This message contains the IPC temperature setting.
HVAC front blower indicator	HVAC control module	This message contains the HVAC blower motor setting.
Outside Air Temperature	HVAC control module \ RCCM	This message contains the Ambient Air Temperature information for the FDIM touchscreen outside air temperature display.

Module Network Input Messages - FCIMB

Broadcast Message	Originating Module	Message Purpose