



Blower Motor Control Module

Removal

1. Remove the push pins and the passenger side insulation panel.
 - Disconnect the electrical connector.

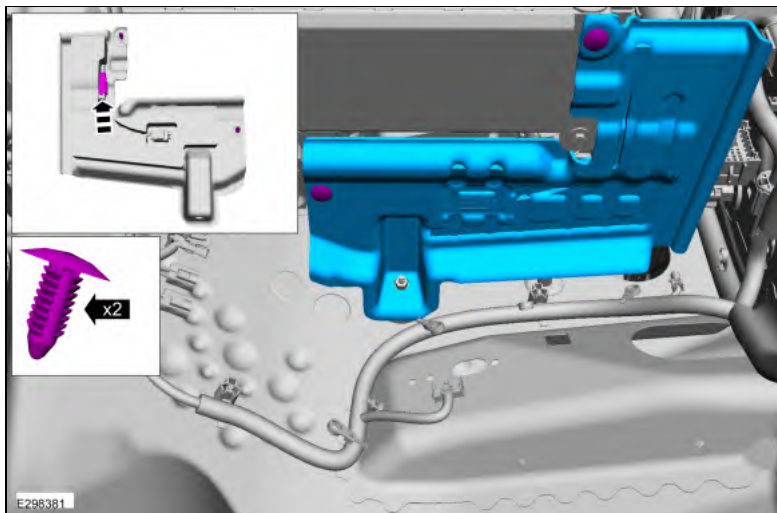

2. Remove the screws and the blower motor control module.
 - Disconnect the electrical connector.

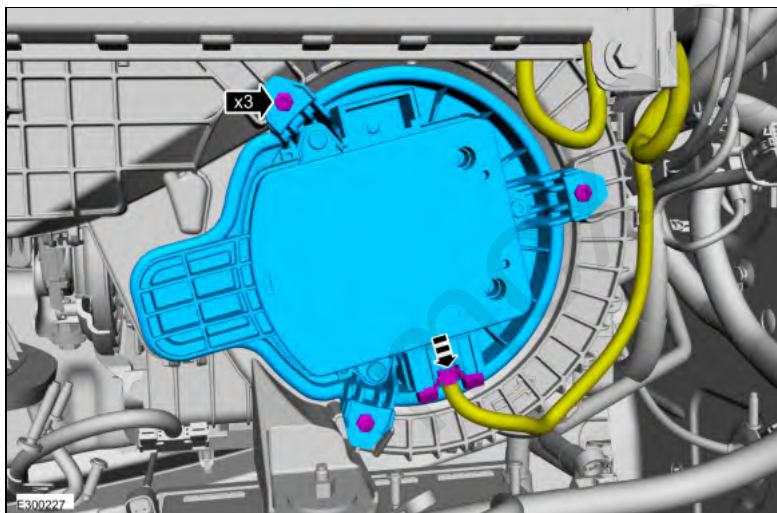

Installation

1. To install, reverse the removal procedure.