



Position the driveshaft alignment bushing into the driveshaft.



Use the General Equipment: Three Leg Puller