


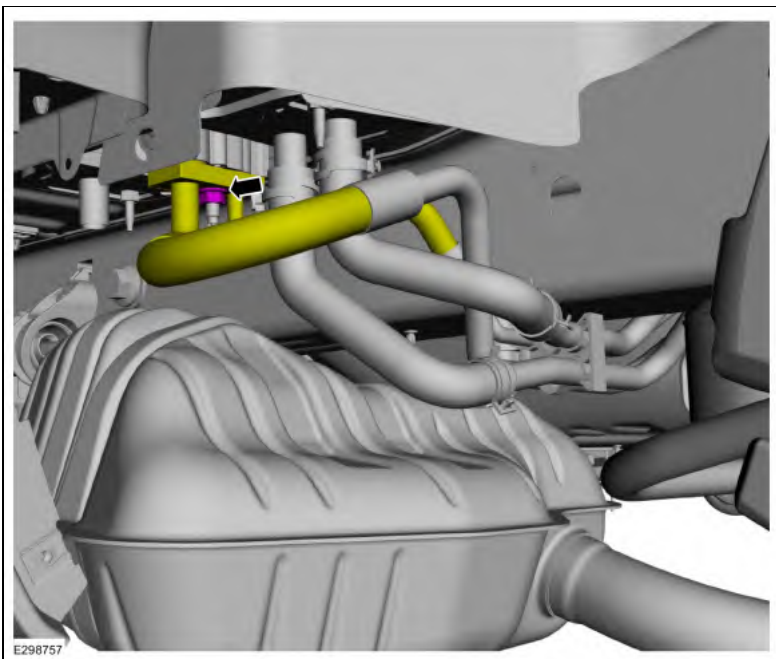

E298757



5. Remove the bolts and the rear thermostatic expansion valve.
 - Make sure to cover any open ports to prevent debris from entering the system.
Torque: 71 lb.in (8 Nm)