



Rear Parking Aid Camera

Removal


1. Remove the liftgate molding.
Refer to: Liftgate Moulding (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Disconnect the rear view camera electrical connector.

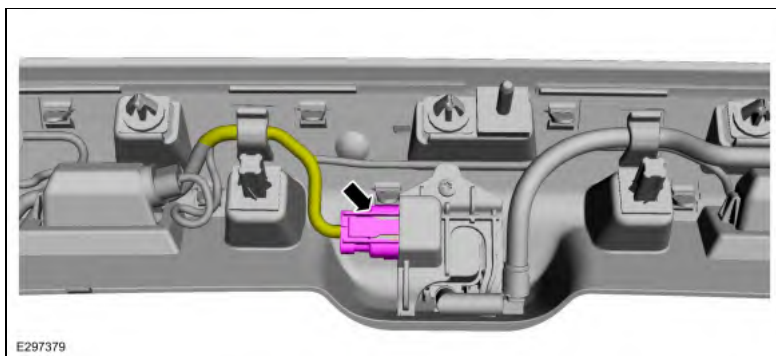

3. Remove the screw, the rear view camera bracket and the rear view camera/washer as an assembly.

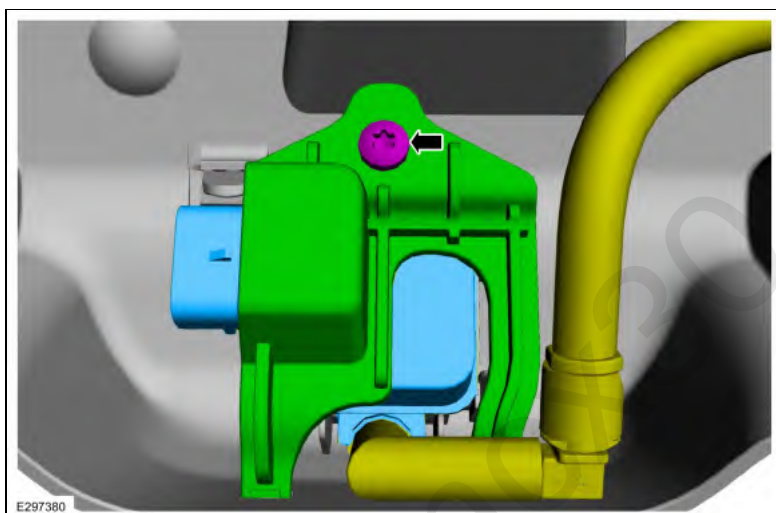

4. Release the tabs and remove the rear view camera from the washer nozzle.

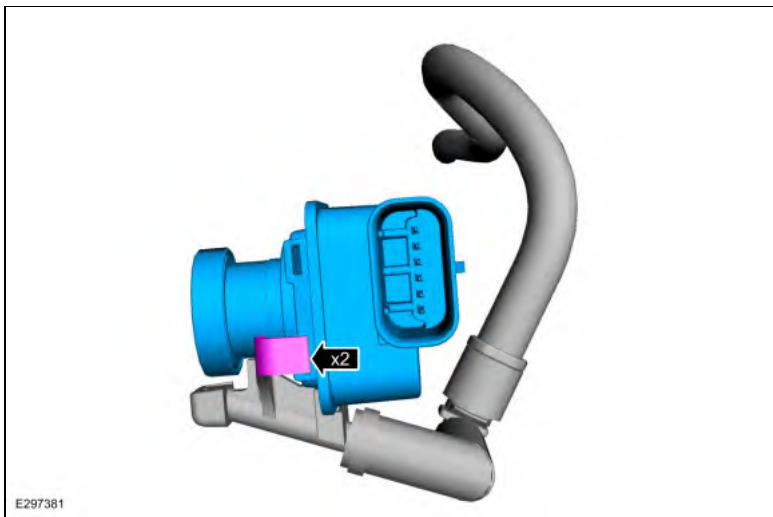

Installation

1. To install reverse the removal procedure.
2. **NOTE:** Carry out the following step if installing a new rear view camera.
Initialize the camera.
Refer to: Parking Aid Camera Initialization (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).
3. Carry out the 360° camera alignment.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).