



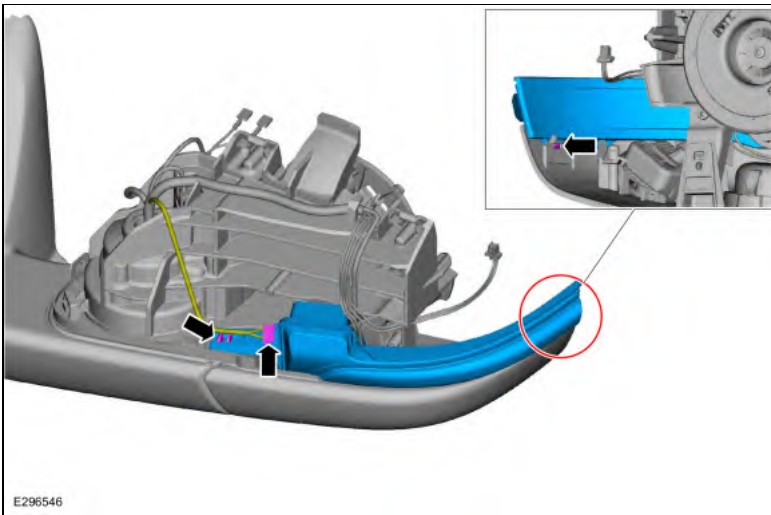

6. Disconnect the connector, remove the screws, the bracket and the camera.

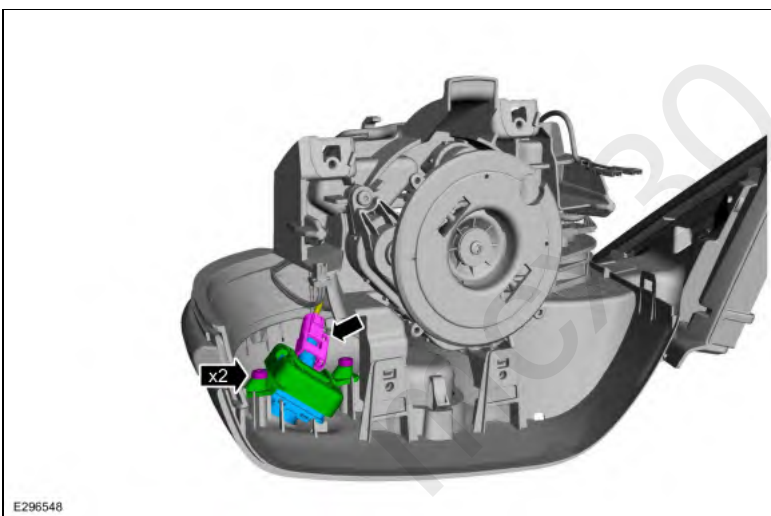

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** Carry out the following step if installing a new front camera.
Initialize the camera.
Refer to: Parking Aid Camera Initialization (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).
3. Carry out the 360° camera alignment.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).

413-13C Parking Aid - Vehicles With: Active Park Assist

Specifications

General Specifications - Front

Item	Specification
Active park assist sensor azimuth system check object position 1 (P1) distance from sensor	50 cm (20 in) $\hat{A}\pm$ 10 cm (4 in)
Active park assist sensor azimuth system check object position 2 (P2) and position 3 (P3) distance from sensor	391 cm (154 in) $\hat{A}\pm$ 20 cm (8 in)

General Specifications - Rear

Item	Specification
Active park assist sensor azimuth system check object position 4 (P4) distance from sensor	25 cm (10 in)
Active park assist sensor azimuth system check object position 5 (P5) and position 6 (P6) distance from sensor	150 cm (59 in)