


## Parking Aid - Component Location

### Component Location - Active Park Assist

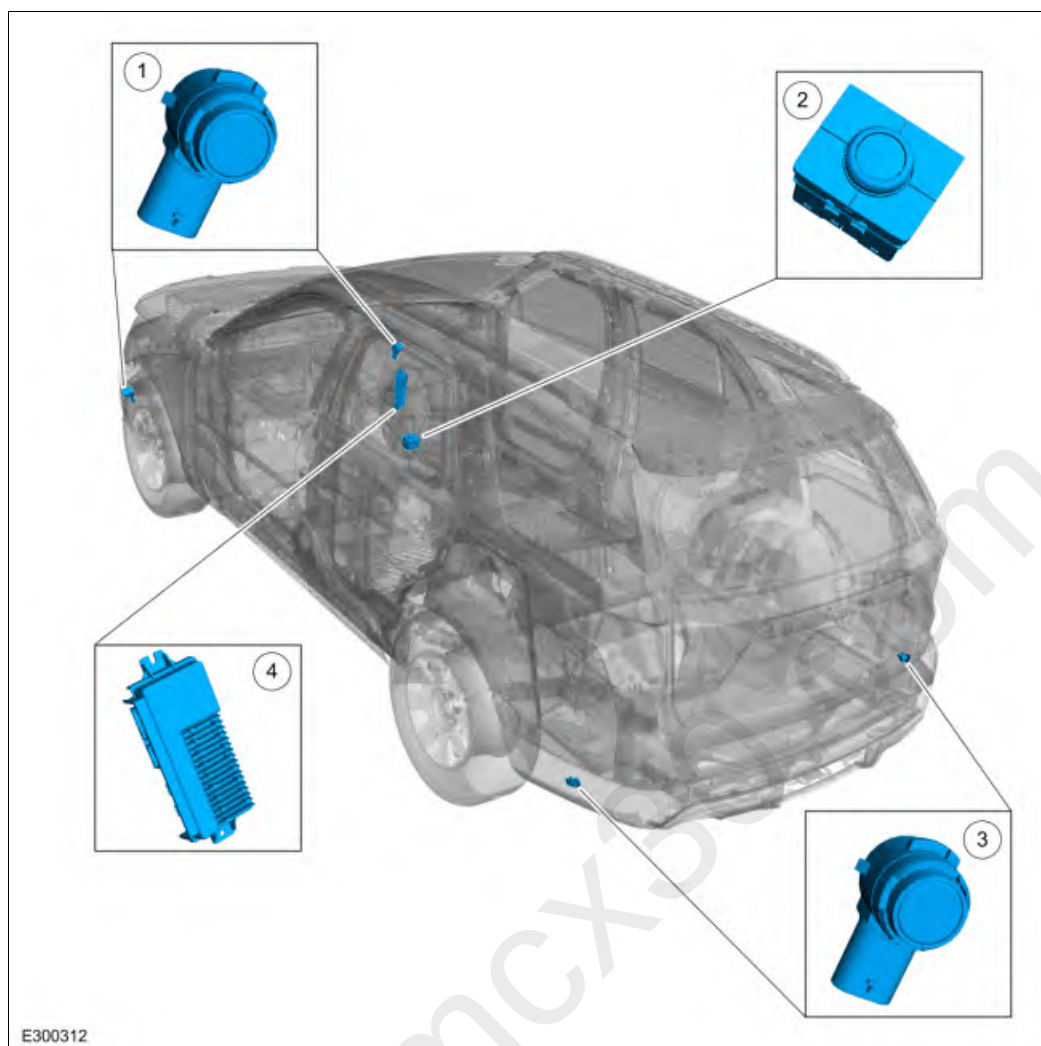

| Item | Description                                      |
|------|--------------------------------------------------|
| 1    | Front active park assist sensors                 |
| 2    | Active park assist switch (integral to the ATCM) |
| 3    | Rear active park assist sensors                  |
| 4    | IPMB                                             |