



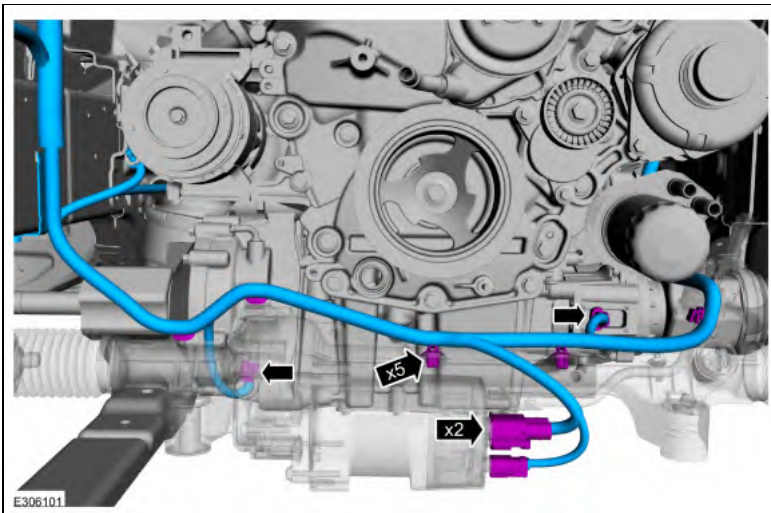

8. *Torque:* 155 lb.in (17.5 Nm)

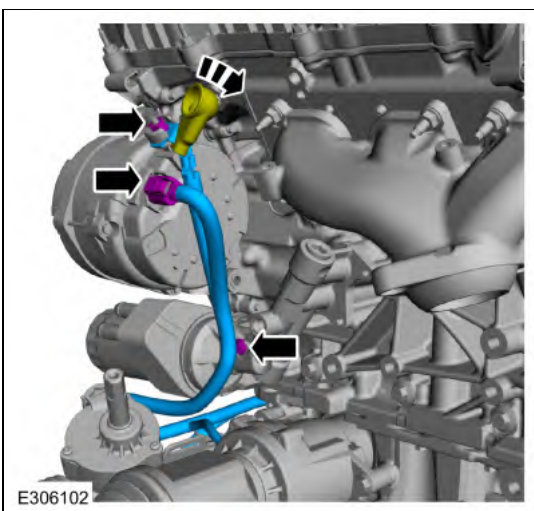

Installation


1. To install, reverse the removal procedure.

Battery Cables - 3.3L Duratec-V6 “Hybrid (BP)


Removal

NOTE: This procedure provides information about routing, retaining points and connectors of the cable. It does not include the steps for removing components to gain access to the cable.


1. Disconnect the batteries.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
2.
 1. Torque: 106 lb.in (12 Nm)
 2. Torque: 80 lb.in (9 Nm)
 3. Torque: 48 lb.in (5.4 Nm)

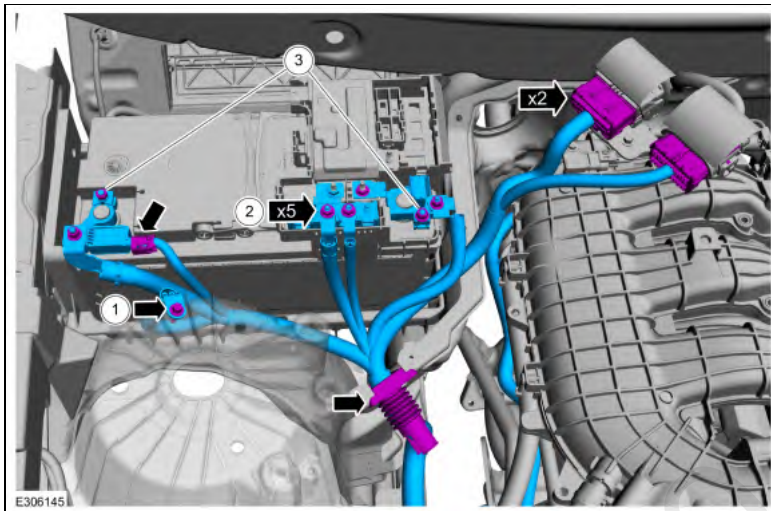


3.
 1. Torque: 155 lb.in (17.5 Nm)
 2. Torque: 71 lb.in (8 Nm)
 3. Torque: 58 lb.in (6.5 Nm)

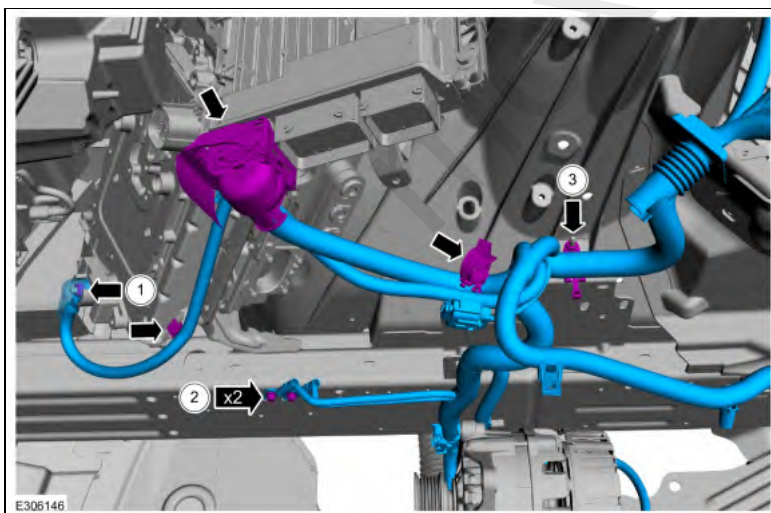


- 4.

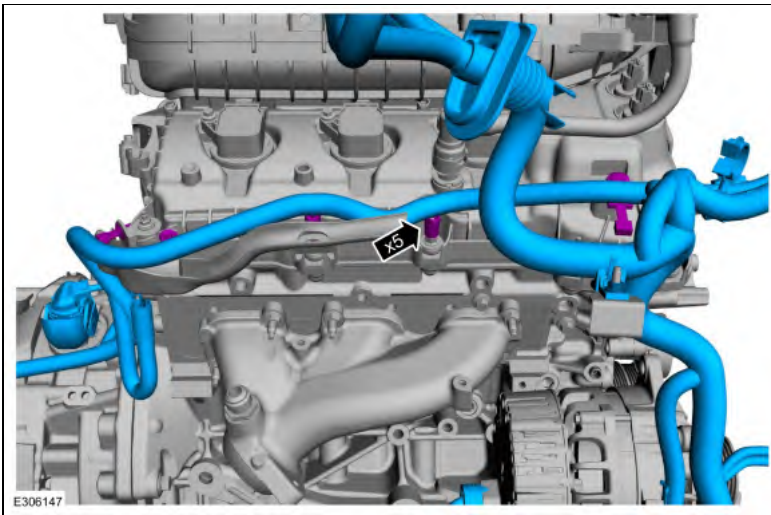

5. *Torque:* 106 lb.in (12 Nm)

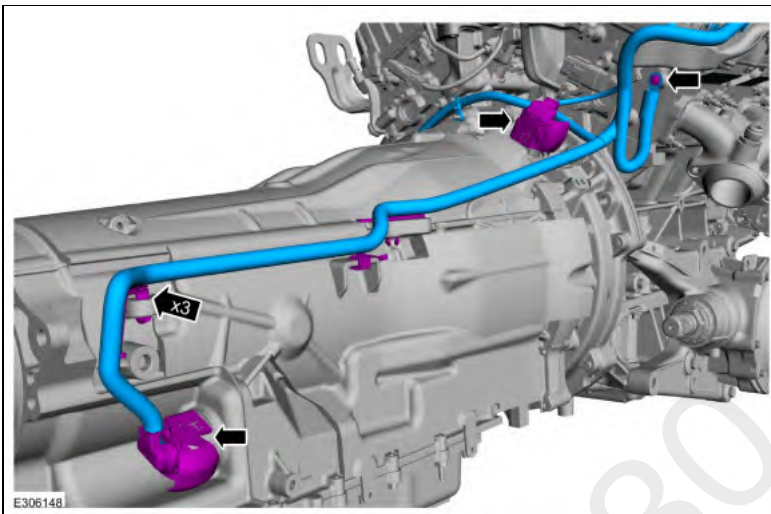

6.

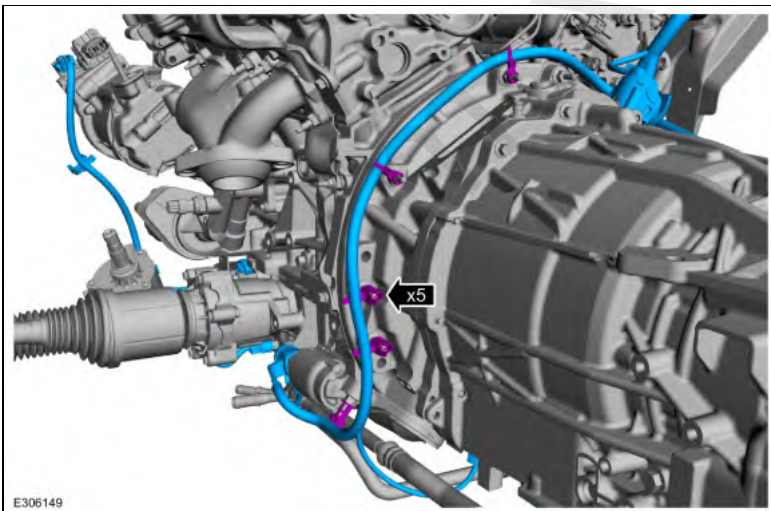

- 7.
1. *Torque:* 106 lb.in (12 Nm)
 2. *Torque:* 55 lb.in (6.2 Nm)

