

Removal and Installation

mcx30.com


Generator - 2.3L EcoBoost (201kW/273PS)

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the negative battery cable from the battery.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
3. **NOTICE: Do not pull the engine appearance cover forward or sideways to remove. Failure to pull straight upward on the underside of the cover at the attachment points may result in damage to the cover or engine components.**

Remove the nuts and the engine appearance cover.
Torque: 89 lb.in (10 Nm)

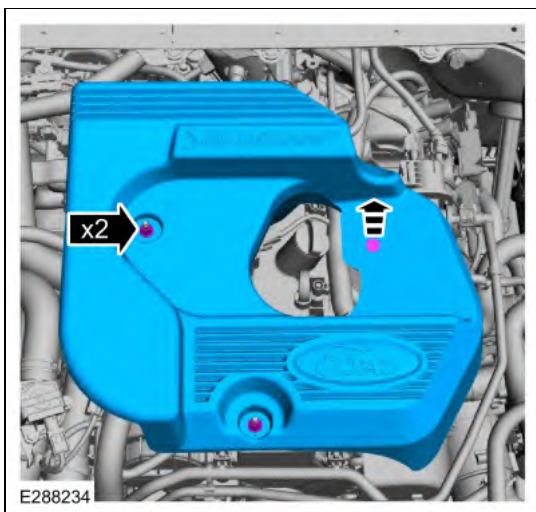

4. Remove the bolt and the accessory drive belt cover.
Torque: 18 lb.ft (25 Nm)

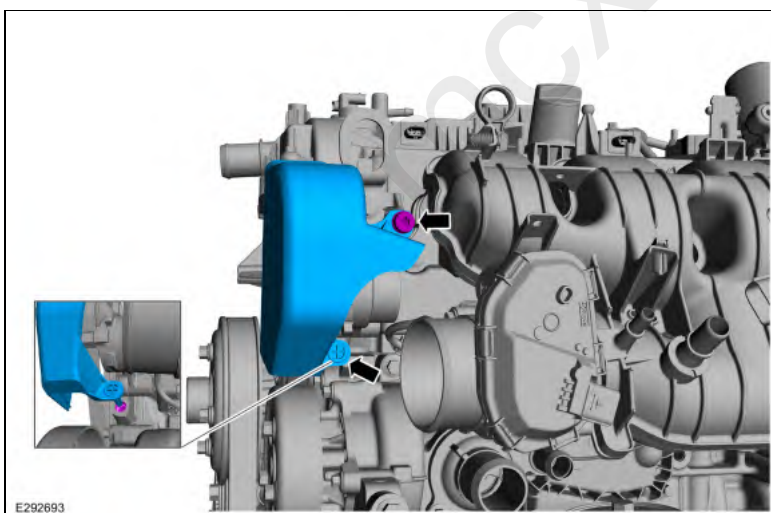

5. **NOTICE: The turbocharger compressor vanes can be damaged by even the smallest particles. When removing any turbocharger or engine air intake system component, ensure that no debris enters the system. Failure to do so may result in damage to the turbocharger.**

Loosen the clamp and position the CAC tube aside.
Torque: 48 lb.in (5.4 Nm)