


Front Door Speaker

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the electrical connector, remove the screws and the front door speaker.
Torque: 22 lb.in (2.5 Nm)

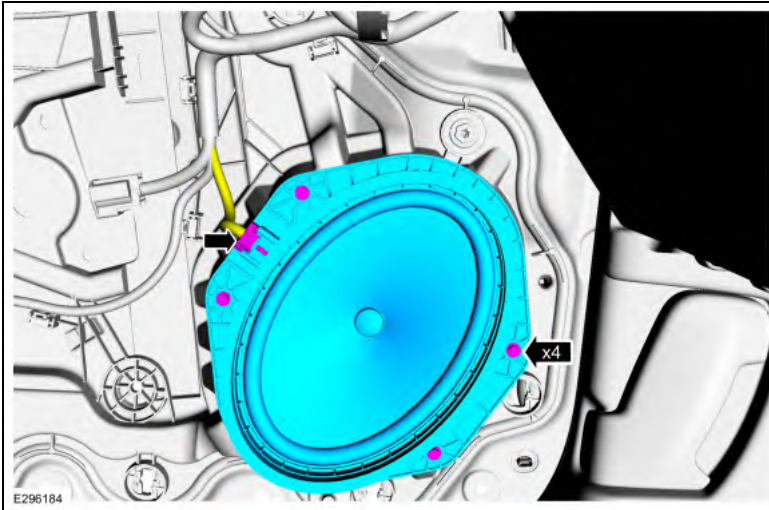

Installation

1. To install, reverse the removal procedure.


Low Voltage Differential Signalling (LVDS) Cable

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Remove the upper instrument trim panel.
 1. Remove the screws.
Torque: 22 lb.in (2.5 Nm)
 2. Release the clips.

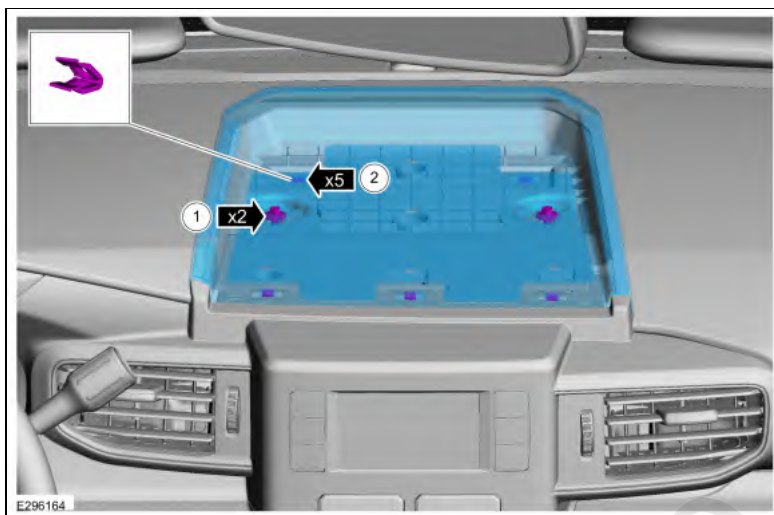

2. Release the clips and position the FCDIM and center instrument panel vents forward as an assembly.

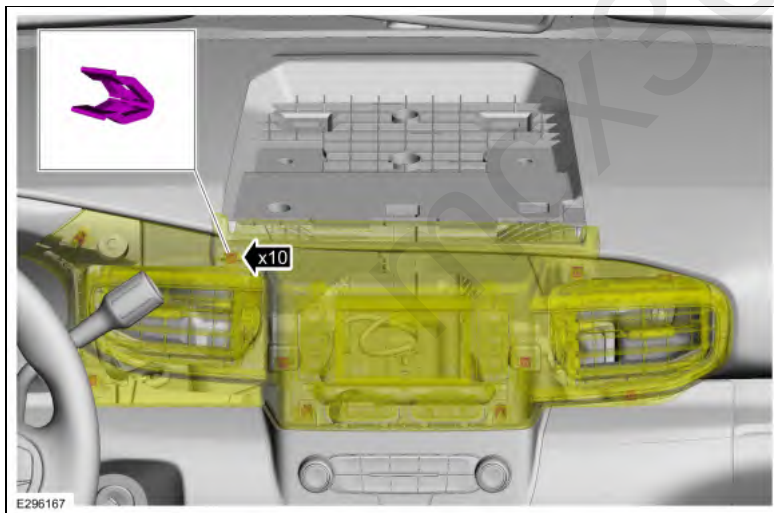

3. Disconnect the electrical connectors and remove the FCDIM and center instrument panel vents as an assembly.