

AHU Diagnostics (AHU refers to the ACM)	AHU Part Numbers (also displays Sirius ESN)
	Radio Signal Strength
	Speaker Walk-Around Test Active (if not equipped with DSP)
	Exit Diagnostics
DSP Diagnostics	DSP Part Numbers
	Speaker Walk-Around Test Active
	Exit Diagnostics
EFP Diagnostics (EFP refers to the FCIM that communicates on the CAN)	EFP Part Numbers
	Exit Diagnostics
ICP Diagnostics (ICP refers to the radio control panel/FCIM that communicates on the LIN)	ICP Part Numbers
	Exit Diagnostics
SDM Diagnostics (SDM refers to the display unit)	SDM Part Numbers
	Exit Diagnostics

Vehicles without SYNC

Menu	Submenu
CHR Diagnostics (CHR refers to the ACM)	CHR Part Numbers / Sirius ESN
	Radio Signal Strength
	Speaker Walk-Around Test
	Exit Diagnostics

- To exit the bezel diagnostics, press the on/off button or select "Exit Diagnostics."