
 


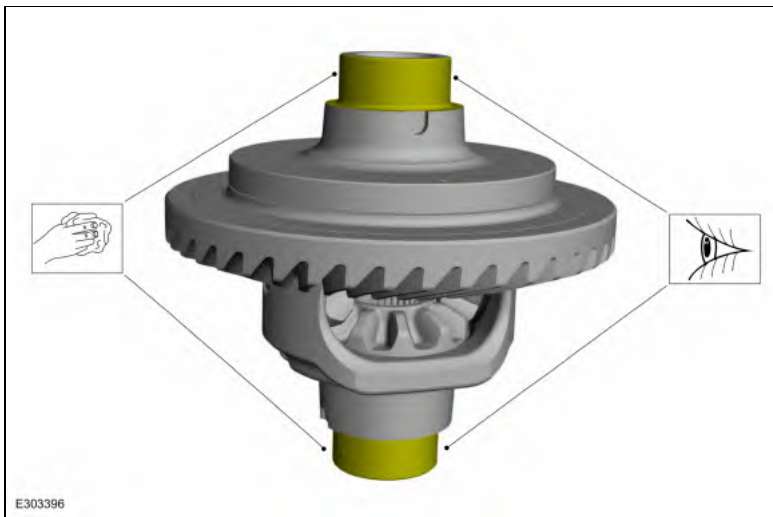





ASSEMBLY

- Both side.

Using the special tool, install the new differential bearings.

 Use Special Service Tool: 205-1016 Installer, Differential Bearing, , 205-153 (T80T-4000-W) Handle.

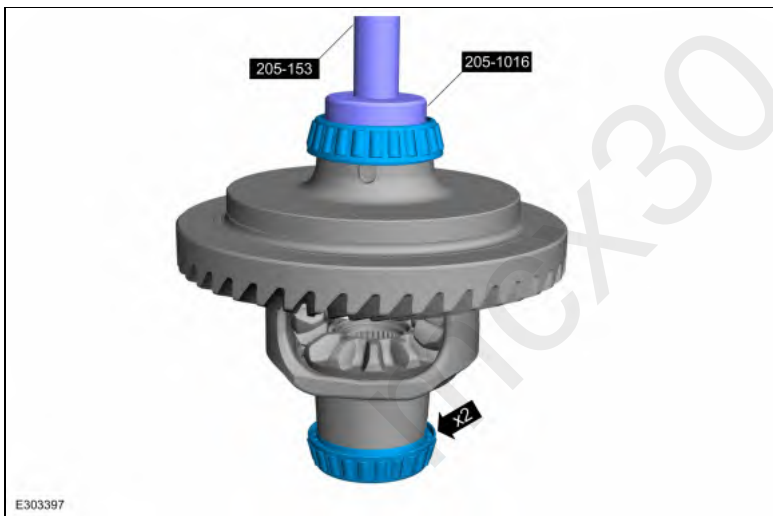



- Check the differential ring gear backlash.
Refer to: Ring Gear Backlash Adjustment (205-02 Rear Drive Axle/Differential, General Procedures).
- Install the differential carrier.
Refer to: Differential Carrier (205-02 Rear Drive Axle/Differential, Removal and Installation).