

Audio Controls


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Release the clips and remove the trim panel.




2. Remove the screws.
Torque: 22 lb.in (2.5 Nm)

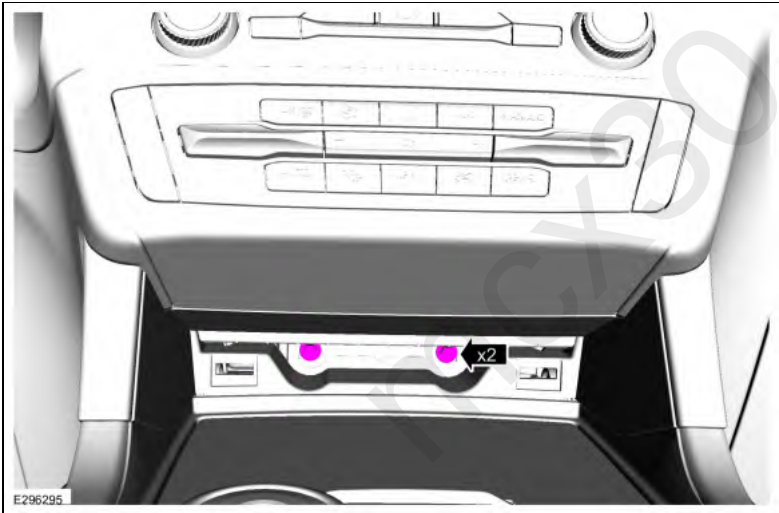

3. Release the clips and position the instrument panel center trim panel out.

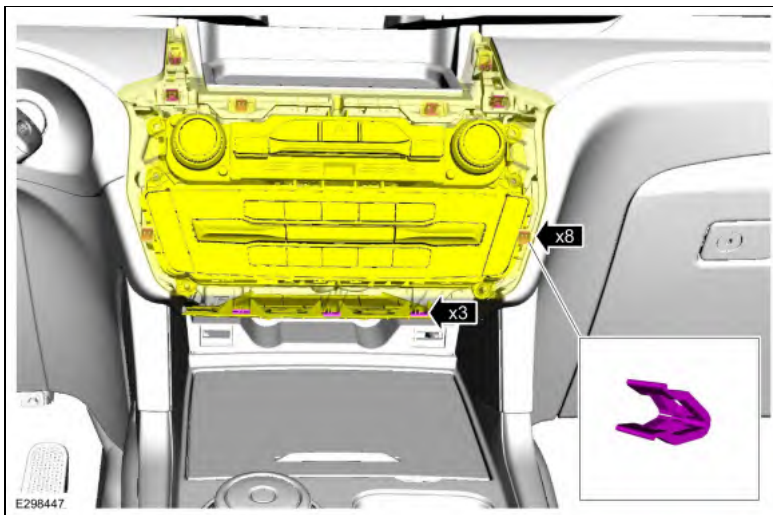

4. Disconnect and remove the instrument panel center trim panel.

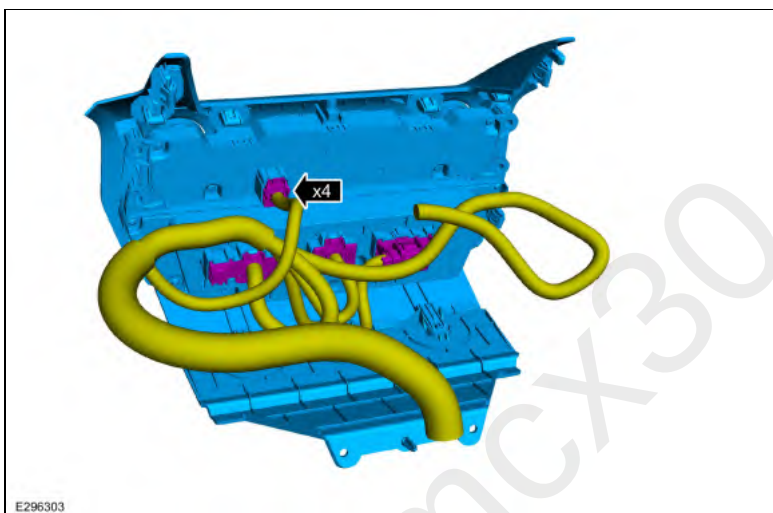

5. Remove the screws and the audio control panel.