

Front Display Interface Module (FDIM)

Special Tool(s) / General Equipment


Interior Trim Remover

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: The 10 inch screen is shown, the 8 inch screen is similar.


1. Release the clips and remove the mounting bolt cover.
Use the General Equipment: Interior Trim Remover

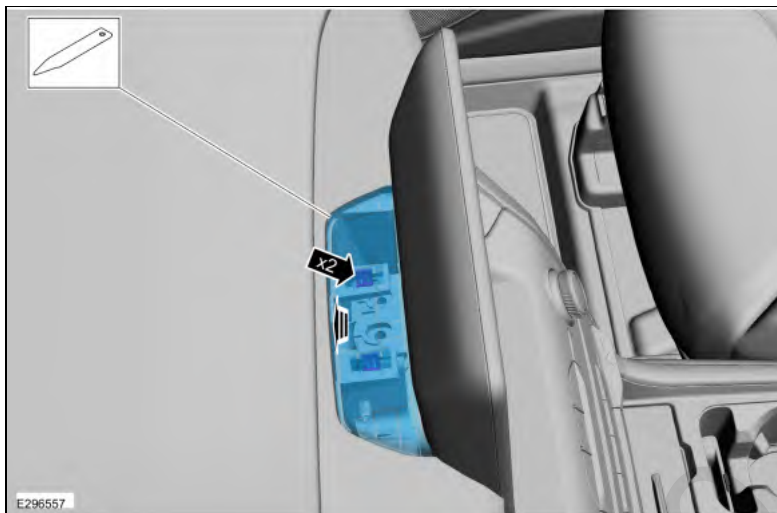


2. Remove the FDIM bolts.
Torque: 71 lb.in (8 Nm)



3. Release the clips and position the FDIM up and out.

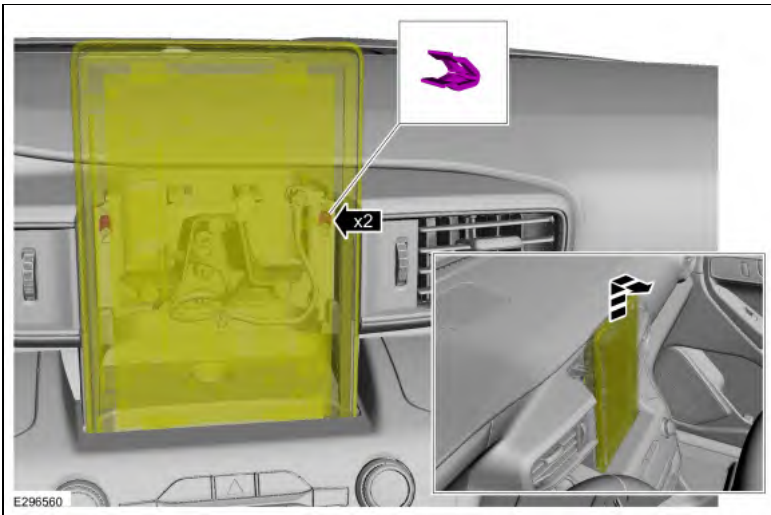

4. Disconnect the LVDS connector, separate the wiring guide and remove the FDIM.

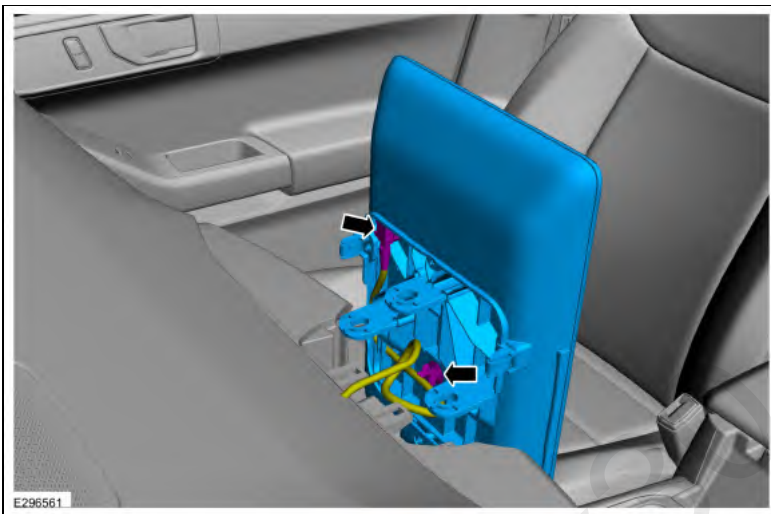

Installation

1. To install, reverse the removal procedure.